


# ASSEMBLY INSTRUCTION

**FUTON**  
C O M P A N Y

**PRODUCT CODE :**  
T4 LADD DRK RBR GYRB

**HARDWARE LIST**

**PARTS LIST**

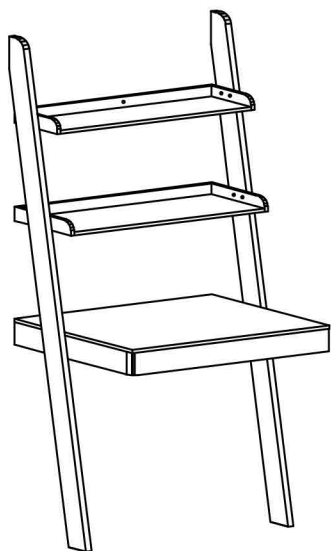


Ax14

Bx1

Cx4

Dx2


Ex2

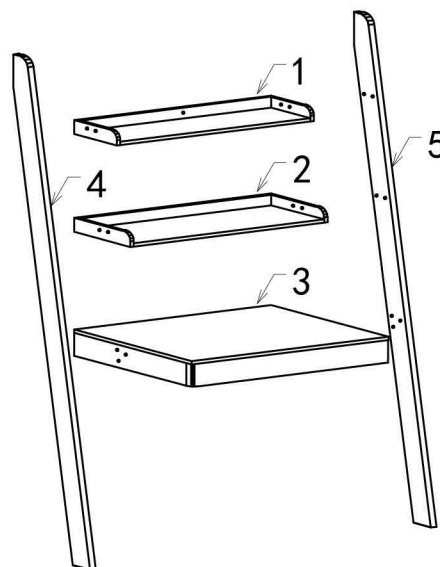



**01**

Ax7

B

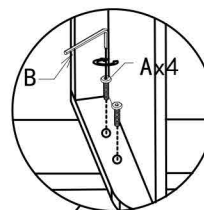




Assemble item on a soft surface to protect the parts during assembly.

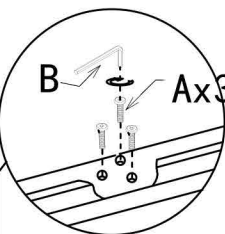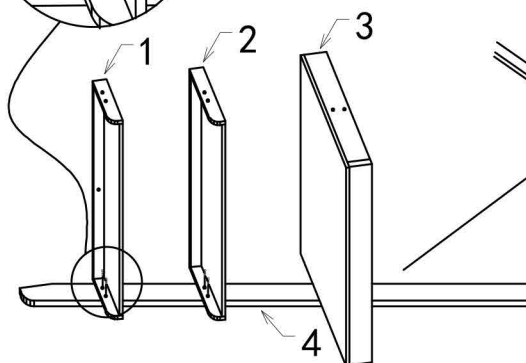

**02**

Ax7

B

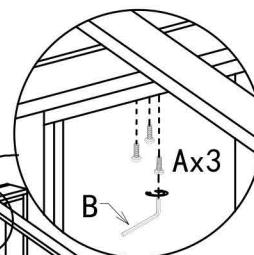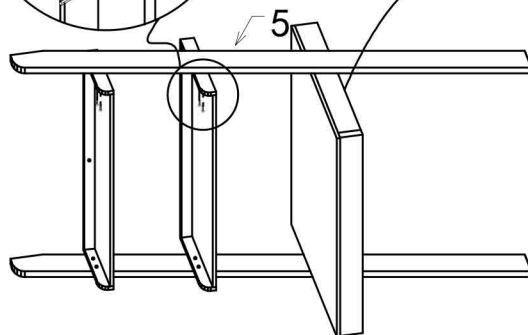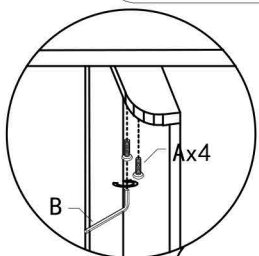


**03**

Cx4

Dx2

Ex2

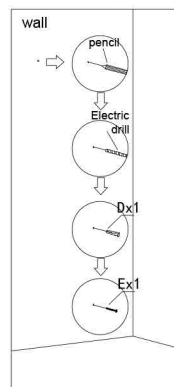

We recommend this unit is fixed to the wall for stability and security. For safety reasons, we advise you to fix this item to the wall if young children or boisterous dogs are liable to bang into it. Never allow children to climb on furniture.

Follow step 3 to fix unit to wall. Fitting D is a standard wall fitting. For details on suitable fixing for your wall type seek advice from your local hardware store. Make sure shelves and desk are level before fixing to wall.

