































Follow this step to fix your product to the wall.

Fixing to secure your product to the wall is standard fitting.

For details on suitable fixing for your wall type seek advice from your local specialised hardware store.

For safety reasons, we advise you to fix this item to the wall.

Never allow children to climb on furniture.

- ·Regularly check that anchors are securely maintained
- Stability of tall items may be affected by thick pile carpet or uneven floors
- ·Do not place unanchored televisions on furniture

Caution: for your safety when attaching the anchor fixings please note the following:

·Check any electrical wires or plumbing inside the wall before

drilling any holes(if you are unsure please seek professional advice from a qualified tradesperson)





17.