

Assembly Instructions

Sierra Standing Lectern Desk

FUTON
C O M P A N Y



Part Checklist

Please count and check every component very carefully before you begin



1. Desk x 1



2. Back Leg x 1



3. Shelf x 1



4. Left Leg (L) x 1



5. Right Leg (R) x 1



Fittings Checklist

Please count and check every component very carefully before you begin

A



Allen Key x 1

B



Spanner x 1

C



Bolt x 2

D



Bolt x 4
(70mm size)

E



Bolt x 4
(60mm size)

F



Spring Washer x 10

G



Flat Washer x 6
(16mm size)

H



Flat Washer x 4
(20mm size)

I



Nut x 2

J



Curved Washer x 2

K



Dowel x 4



Please read these instructions very carefully before you begin to ensure that your Futon Company Sierra Standing Lectern Desk will give you many years of satisfaction.

Thank you for buying a Futon Company product.

We are constantly striving to improve everything we do, but occasionally mistakes do occur. In the unlikely event that you find any part missing, please call your nearest Futon Company store and we will arrange for the despatch of an immediate replacement. Please keep all packaging until you have checked every part and assembly of your Futon Company product is complete.

Version: 1

Product Code: T4 SIERRA LEC DESK

PO 12472

experts in small space living



How to assemble Sierra Standing Lectern Desk


Please follow these instructions carefully

1. To prevent scratching :


Lay the parts face down on a clean, flat, soft surface.

Do not tighten the bolts and screws until the lectern is fully set up.

2.

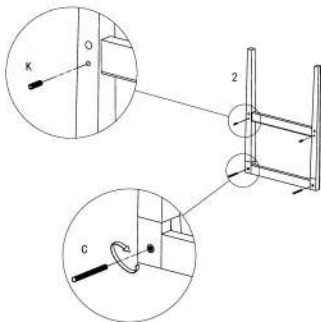

3.

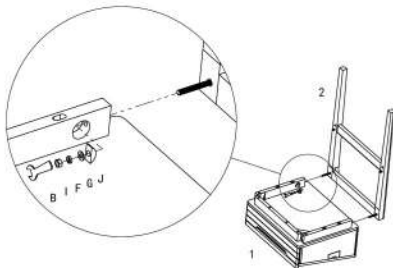





How to assemble Sierra Standing Lectern Desk

Please follow these instructions carefully

4.

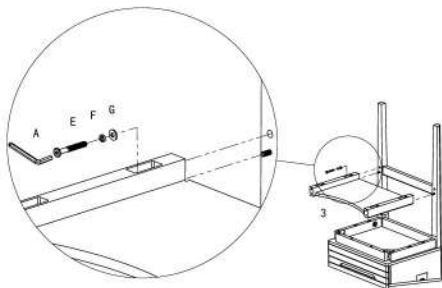

5.

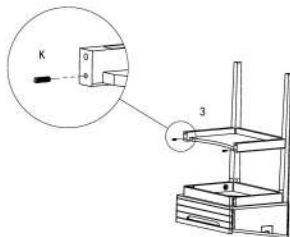




How to assemble Sierra Standing Lectern Desk

Please follow these instructions carefully

6.

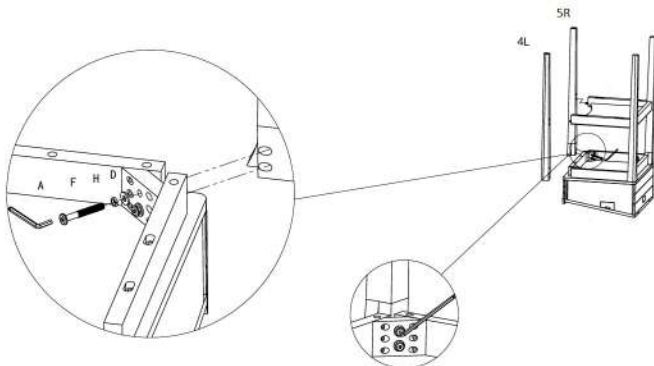




How to assemble Sierra Standing Lectern Desk


Please follow these instructions carefully

7.

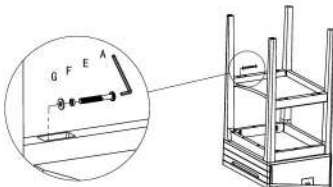

Please make sure that all fittings are now fully tightened.

8.

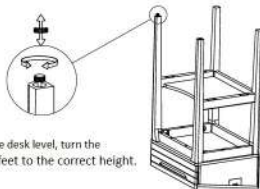

To make the desk level, turn the adjusting feet to the correct height.

FUTON
C O M P A N Y

FINISH

Timber may be selected to ensure that the visible surfaces are of a higher grade than unseen surfaces. These unseen areas are not finished to the same standard as visible surfaces.

CARE

To clean your desk, wipe with a damp cloth followed by a dry cloth.

IMPORTANT

To ensure maximum performance from this product, we advise that you check and tighten all bolts and screws on a regular basis to avoid damage and strain to parts. Improper use, improper assembly and mishandling may lead to product damage.

DO NOT STAND ON THIS DESK

GUARANTEE

This instruction leaflet forms part of your guarantee, please retain it. The PO number along with your invoice number will need to be quoted in all correspondence with Futon Company.

Thank you for choosing Futon Company.

