
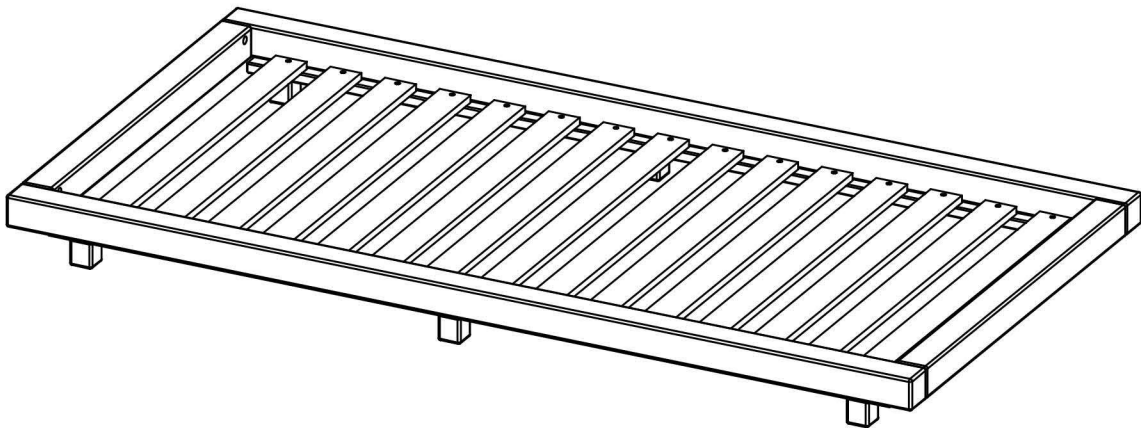


Bd1 Plat Elm

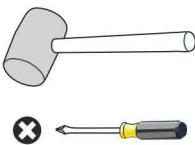



Thank you for purchasing this Futon Company Product. Please read the instructions carefully before assembly.

This product takes approximately 60 - 80 minutes to assemble with two people.


You will require a cross head screwdriver to assemble this product.  
An electric drill may cause damage to the product and is not recommended.

Please check the pack contents before starting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact your nearest Futon Company store and we will arrange despatch of an immediate replacement.



Bd1 Plat Elm

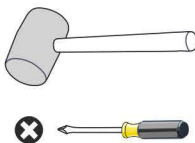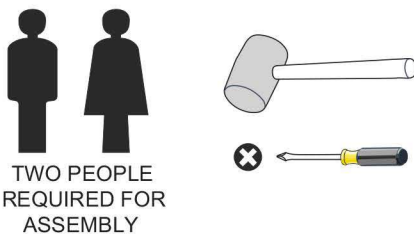

PLATFORM BED

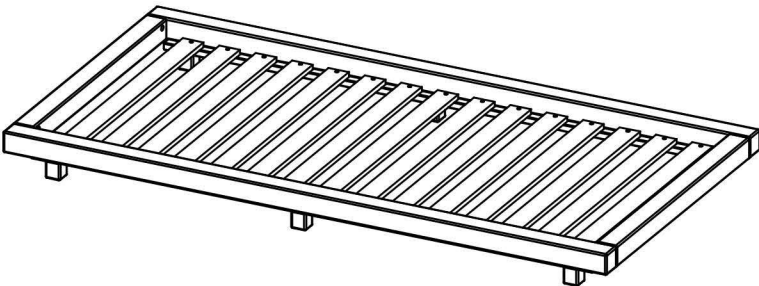

Fittings Checklist

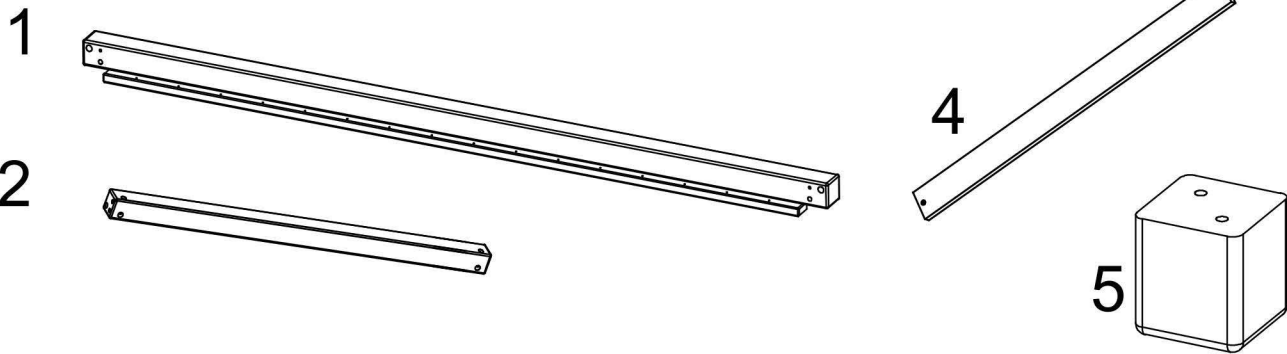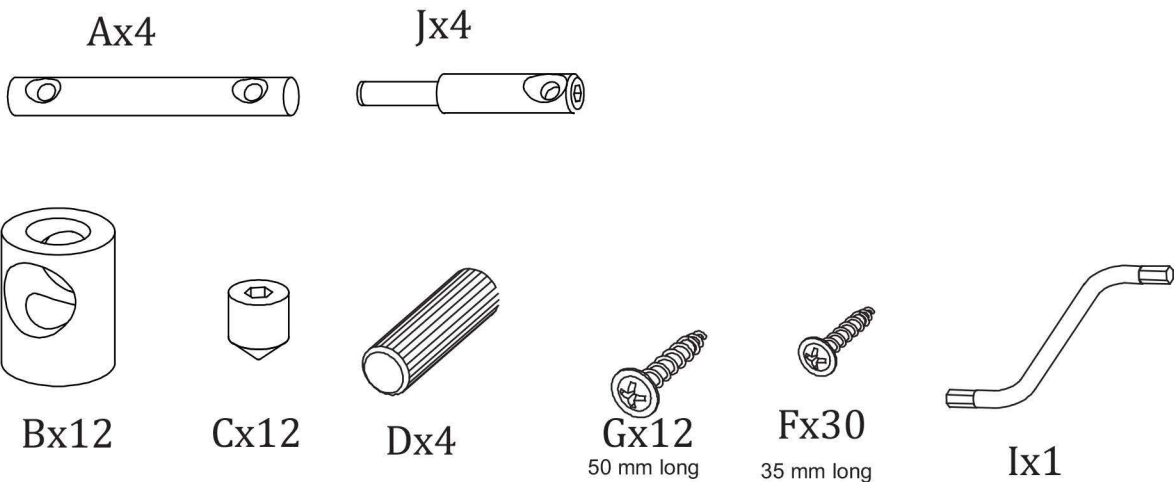


- 1 – BED SIDERAILS X 2
- 2 – BED SIDECROSS RAILS X 2


- 4 – SLATS X 15
- 5 – FEET X 6

1


When tightening fitting J  
Make sure that the side of  
fitting with the hole is facing  
towards the inside of the  
frame ready to receive fitting C.

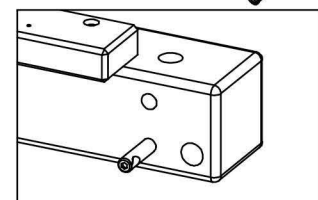


2X

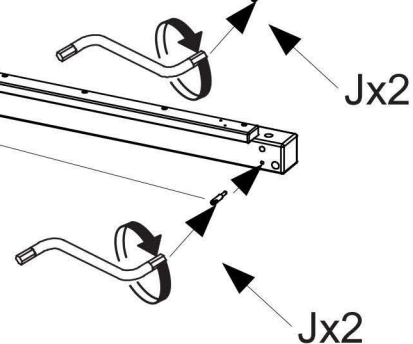


2

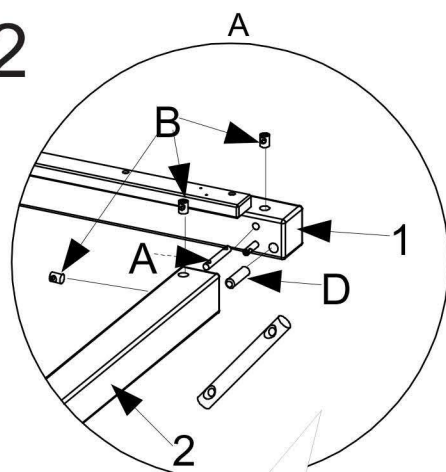


Note: when joining parts 1&2  
insert fitting D first. Then insert  
fittings B into place,  
followed by fitting A  
Then slot parts  
1&2 together.

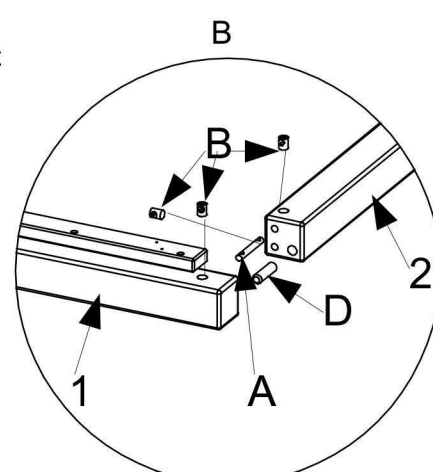

When placing fitting A ensure  
that side of fitting with larger  
holes is facing up to receive  
fitting C when tightened in  
step 2.

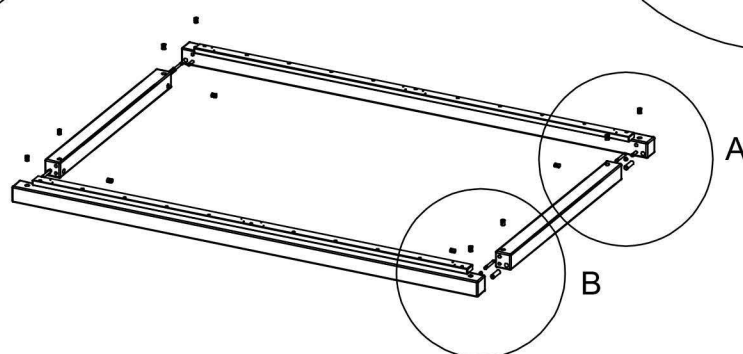


3

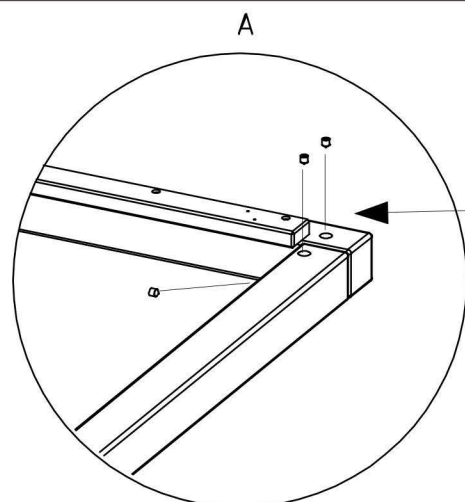


Cx12


I

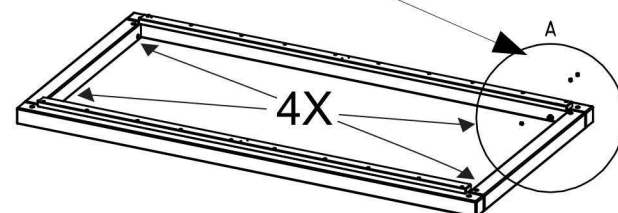

4

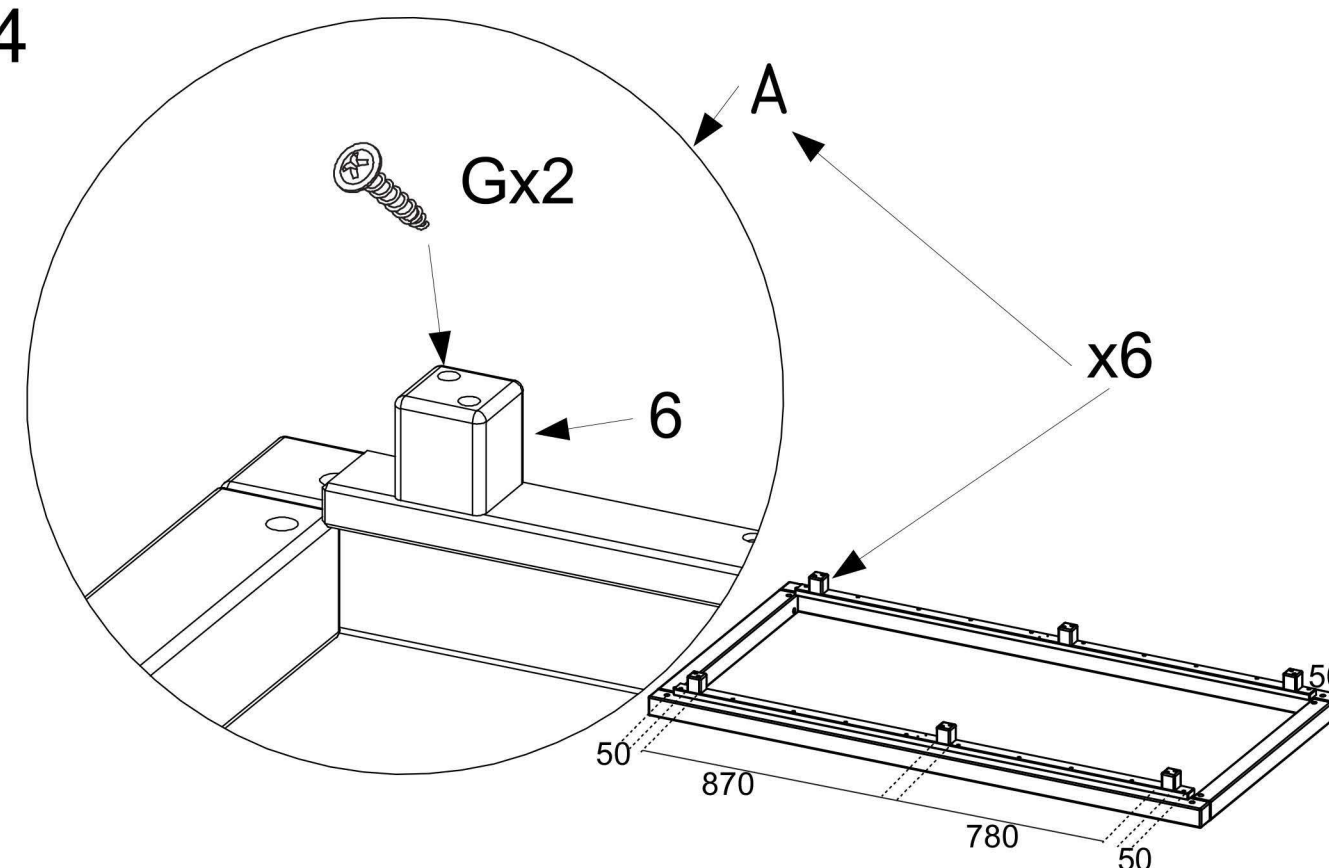

5

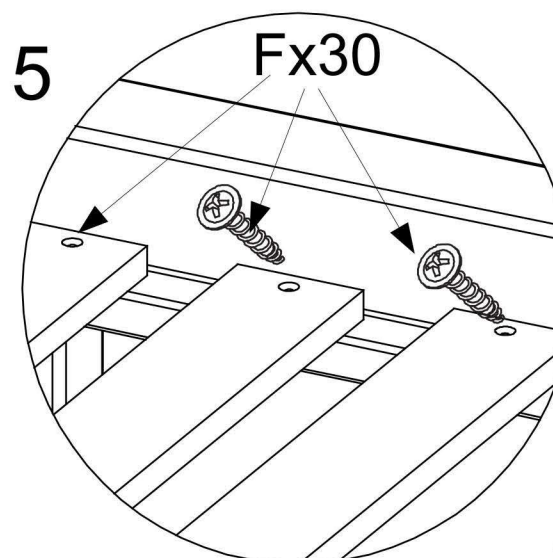

x30

