
Assembly Instructions


Suratto Nest of Tables

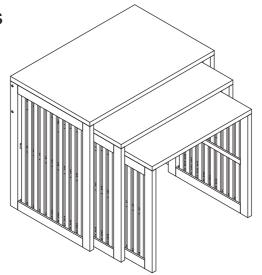

T3 SURAT NEST



Parts Checklist

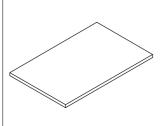

① x2




② x2



③ x1



4x1

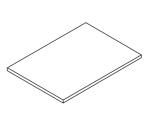

(5) x1




6 x1



(7) x1



8 x1



9 x1



10 x1



11) x1



12 x1

Fittings Checklist




(a) Cam Screw x12




(b) Cam Lock x 12



© Screw x12




d Allen key x1





Cross head Screwdriver also required for assembly


To prevent scratching:Lay the parts face down on a clean, flat, soft surface.

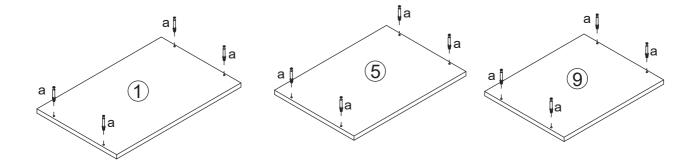

1.

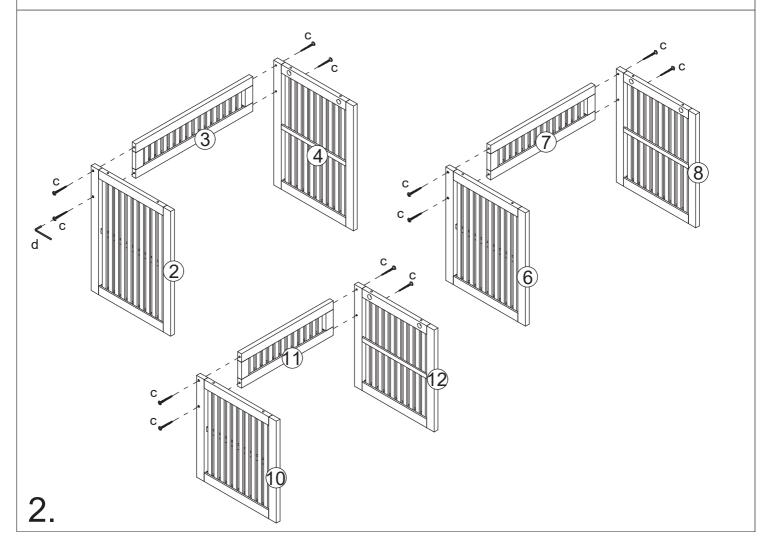

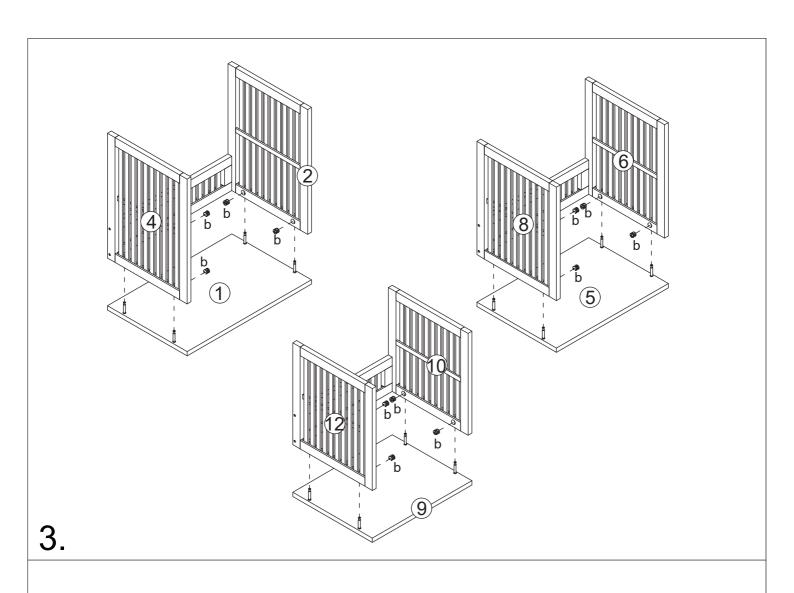

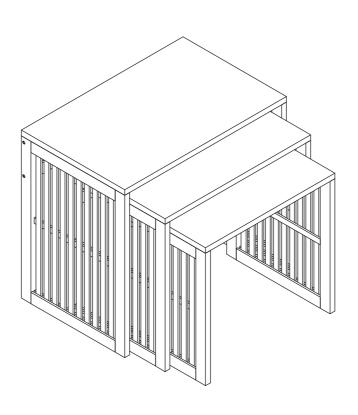

4.