
Assembly Instructions



Oke Storage Floor Mirror

ROPO no:



PLEASE READ THESE INSTRUCTIONS VERY CAREFULLY BEFORE YOU BEGIN, TO ENSURE THAT YOUR FUTON COMPANY PRODUCT WILL GIVE YOU MANY YEARS OF SATISFACTION

Thank you for buying a Futon Company product.

We are constantly striving to improve everything we do, but occasionally mistakes do occur. In the unlikely event that you find any part missing, please call your nearest Futon Company store and we will arrange for the despatch of an immediate replacement. Please keep all packaging until you have checked every part and assembly of your Futon Company product is complete.


Version number: 1 Product code: ST STOR MIR V3 Date: 25/04/25

experts in small space living




Parts Checklist

Please count and check every component very carefully before you begin

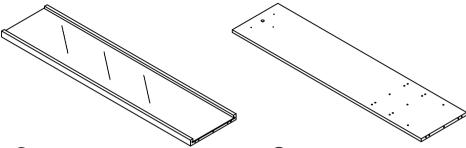

(1) Front with Mirror x 1









(3) Bottom Panel x 1

(4) Base Panel x 1

(5) Plain Panel x 1







(6) Cam Panel x 2

(7) Hanging Bar x 1

(8) Top Panel x 1



Fittings Checklist

Please count and check every component very carefully before you begin










(a) Dowel x 28 (b) Bolt x 8 (c) Pressure Plate x 8 (d) Nut x 8 (e) Short Bolt

(f) Hook x 3 (g) Hook Screw x 3 (h) Plain Panel Support x 4 (i) Allen Key x 1







Cross head Screwdriver also required for assembly

