


BD1 PLAT RBW - PO12470

**FUTON**  
C O M P A N Y

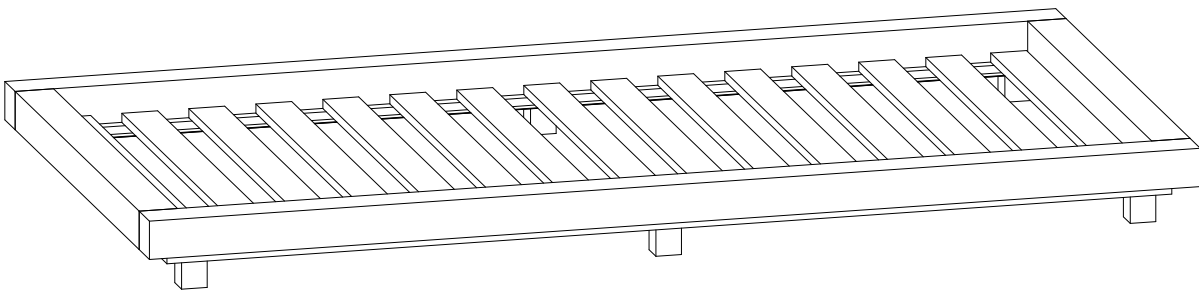

Thank you for purchasing this Futon Company product. Please read the instructions carefully before assembly.

This product take approximately 60 minutes to assemble with two people.

You will require a cross head screwdriver to assemble this product. An electric drill may cause damage to the product and is not recommended.

Please check the pack contents before starting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact your nearest Futon Company store and we will arrange despatch of an immediate replacement

|  |  |   |   |
|--|--|---|---|
| <br>2PERS | <br>60MIN | Tool Required Not Provided  |   |
|  |  |  |  |

# Fittings Checklist

A x 4



M8x70mm

B x 4



C x 4




D x 4



E x 1



F x 12




M4x55mm

G x 12



M8x30mm


H x 6




M4x35mm

# Parts Checklist

①-Side Rails x 2

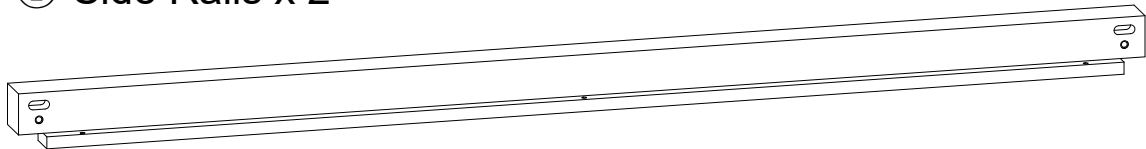


②-Cross Rails x 2




③-Feet x 6



④-Slats x 1

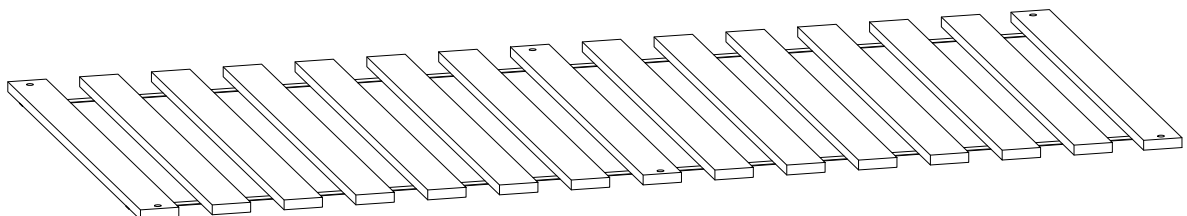


# 1.


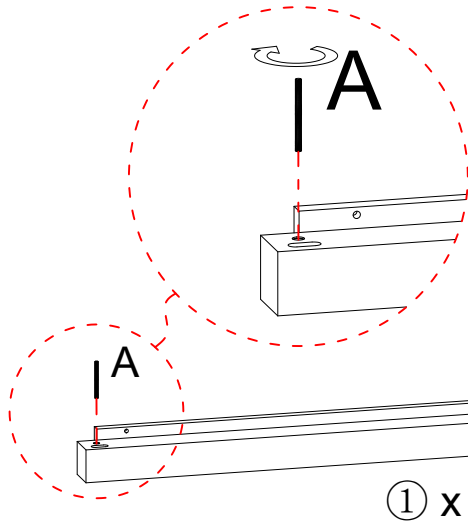


To prevent scratching: Lay the parts face down on a clean, flat, soft surface.



① x 2pcs

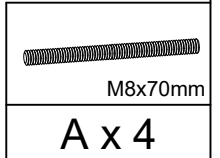


# 2.

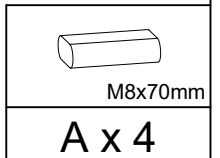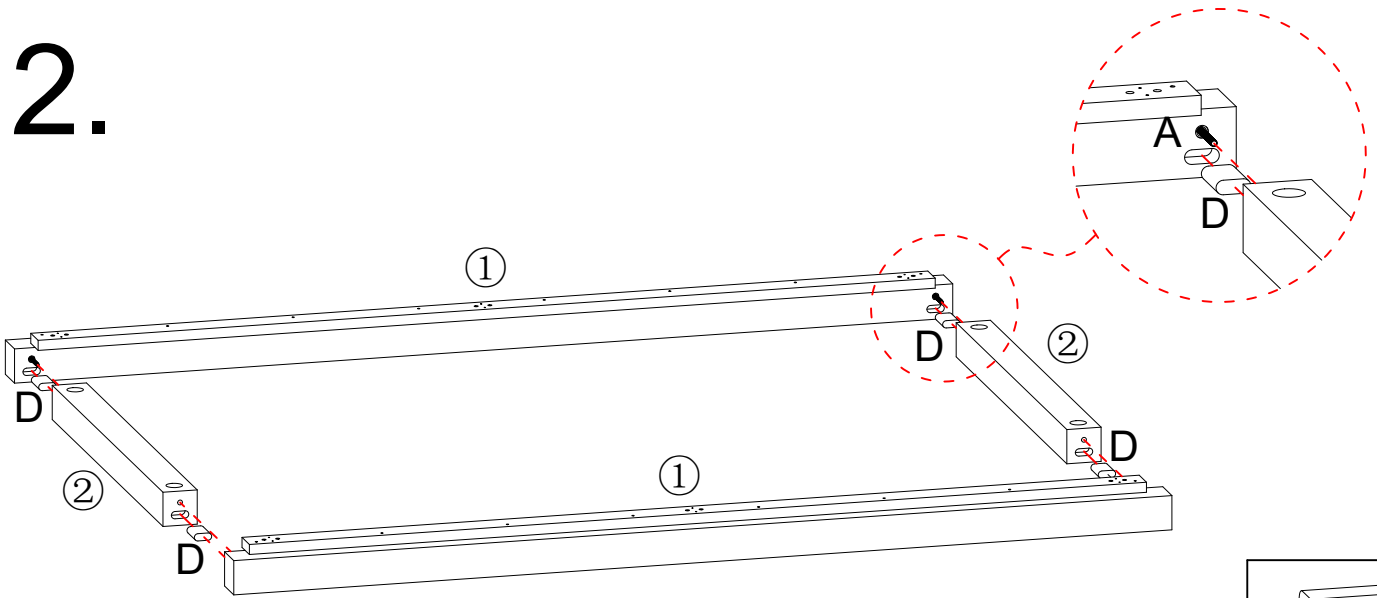

# 3.

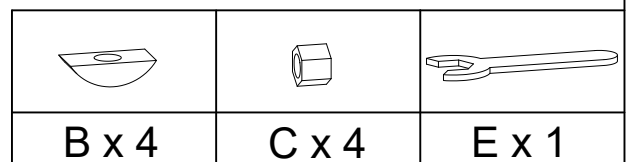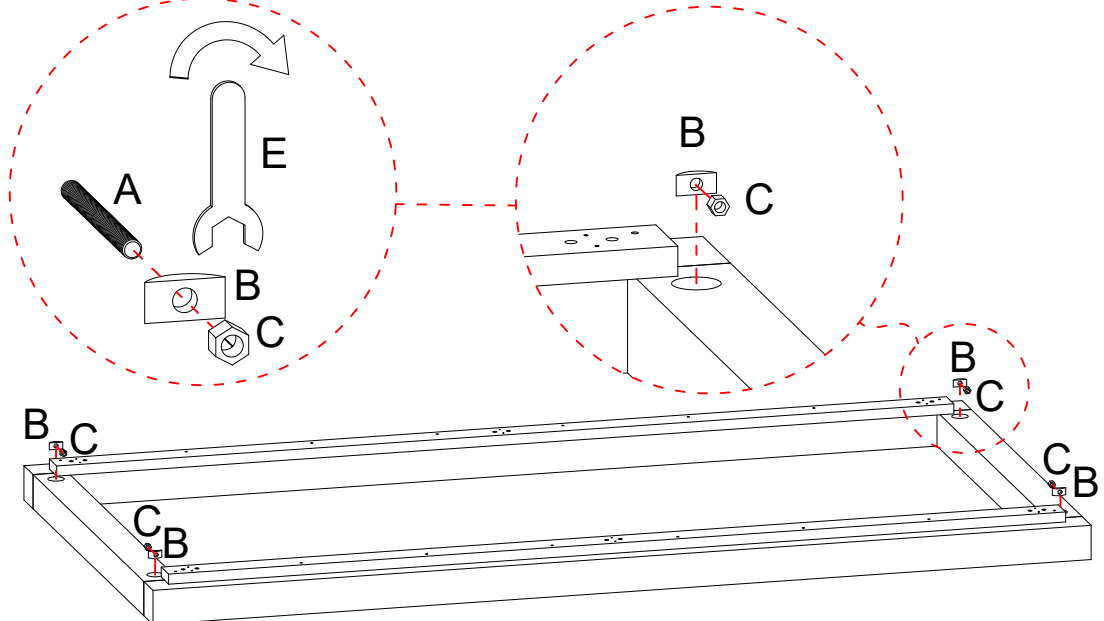



# 4.

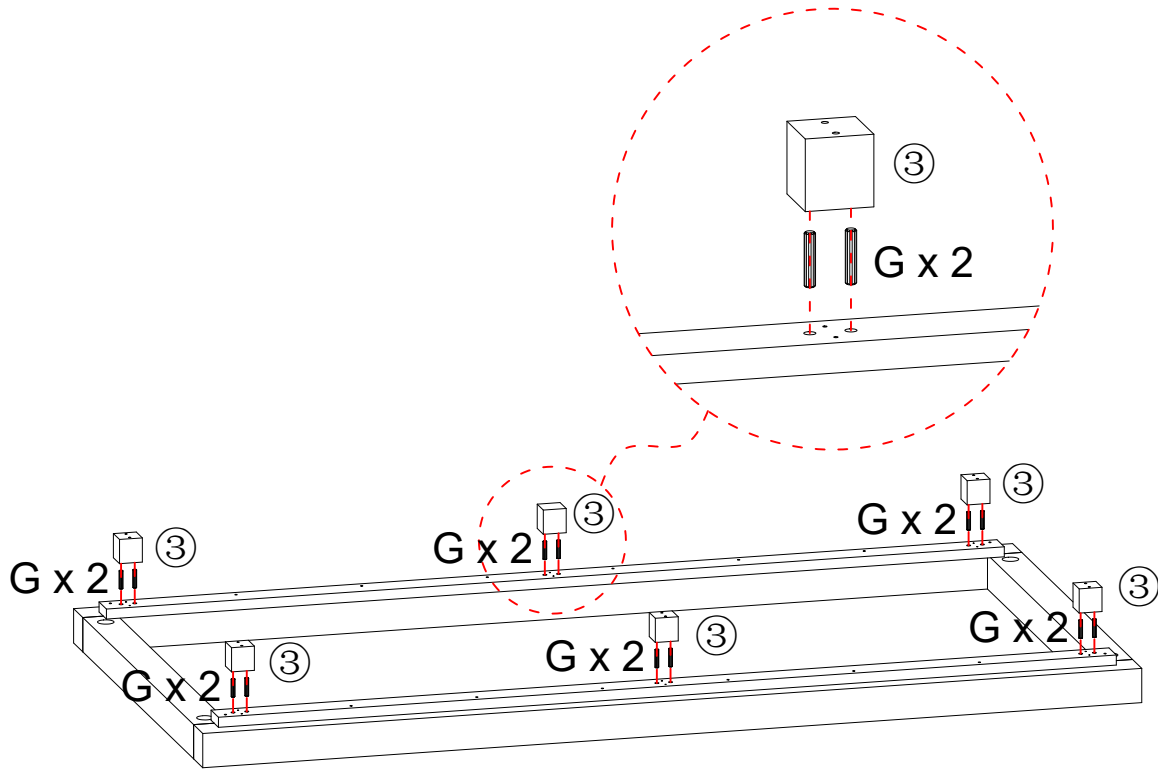

M8x30mm

$G \times 12$


# 5.

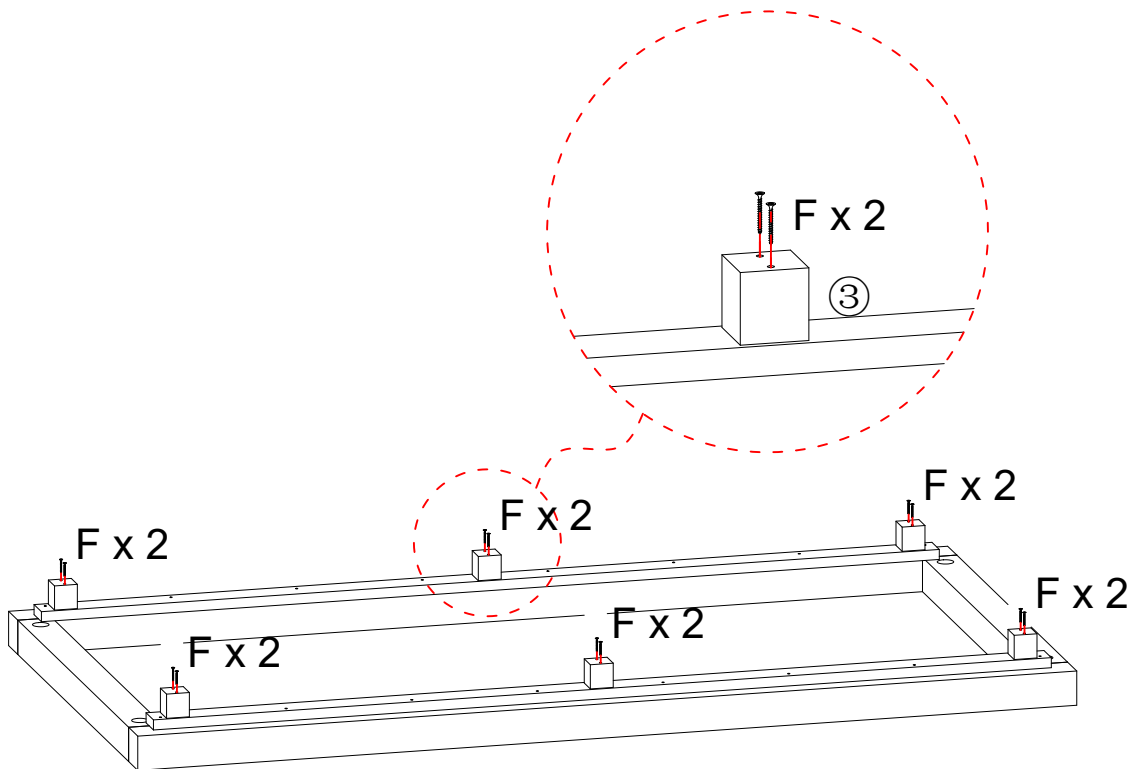

M4x55mm

$F \times 12$

# 6.

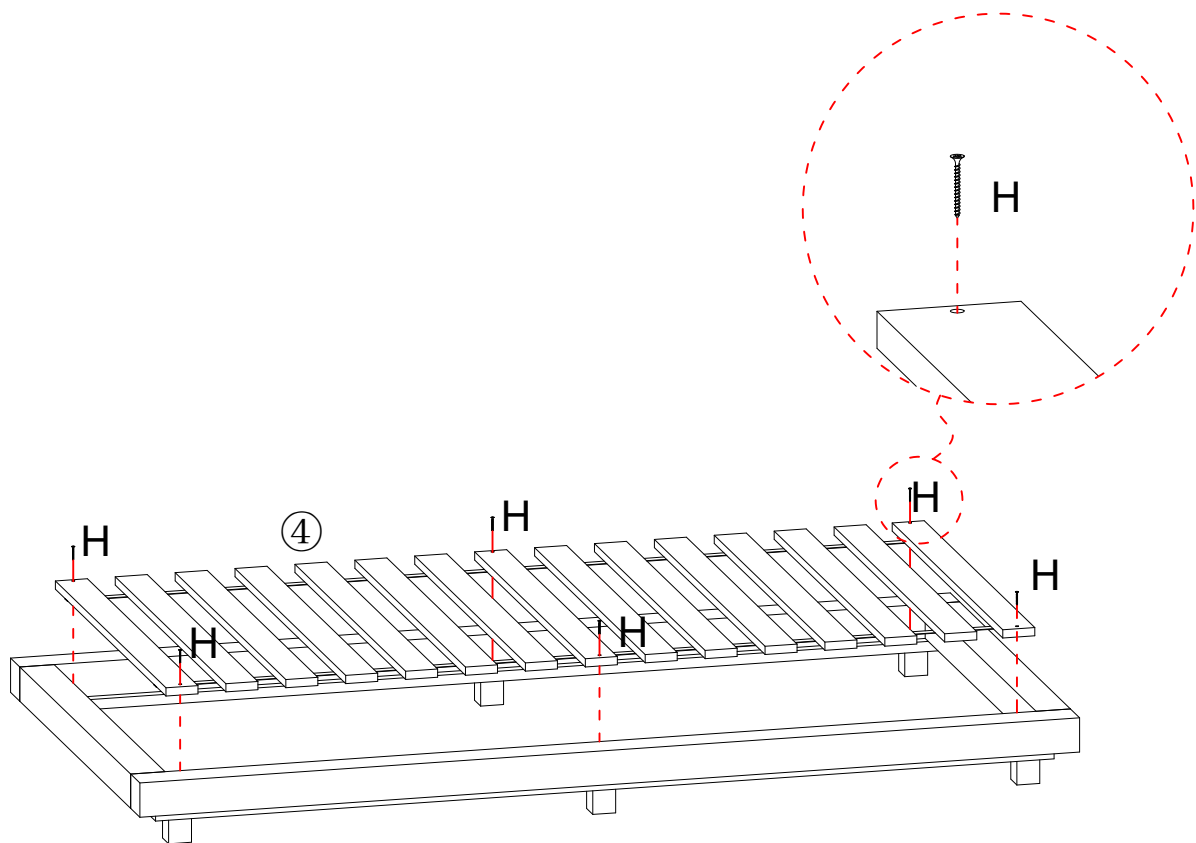

M4x35mm

H x 6

