


Assembly Instructions


Cabinet - Sweep

FUTON
C O M P A N Y
Experts in small space living

ST SWEEP CAB

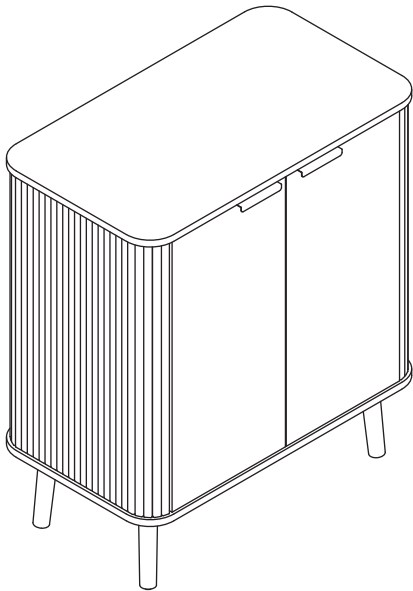

Parts Checklist

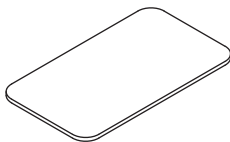


① x1




② x1




③ x1




④ x1

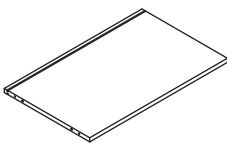

⑤ x1

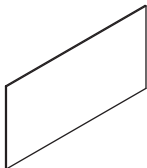

⑥ x2



⑦ x2



⑧ x1




⑨ x1




⑩ x4


Fittings Checklist

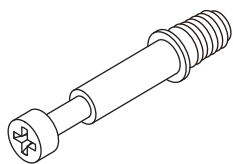


Ⓐ Cam Bolt x 8

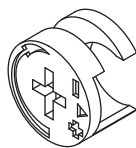


Ⓑ Cam Lock x 8

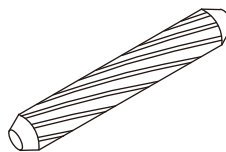


Ⓒ Wooden Dowel x12

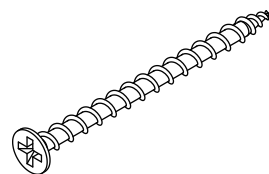


Ⓓ Screw x 6




Ⓔ Screw x 6

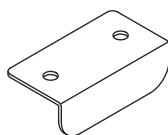


Ⓕ Door Stop x 1

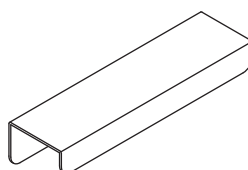


Ⓖ Handle x 2




Ⓗ Screw x 22

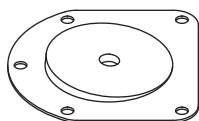


Ⓘ Metal Plate x 4

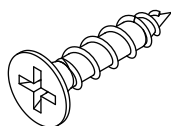


Ⓙ Screw x 24

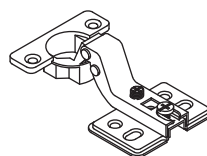


Ⓚ Hinge x 4



Ⓛ Panel Hook x 8




Ⓜ Screw x 8

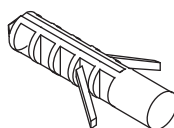

Ⓝ Wall Plug x 2




Ⓞ Wall Leash x 2




Cross head Screwdriver also required for assembly


To prevent scratching:Lay the parts face down on a clean, flat, soft surface.

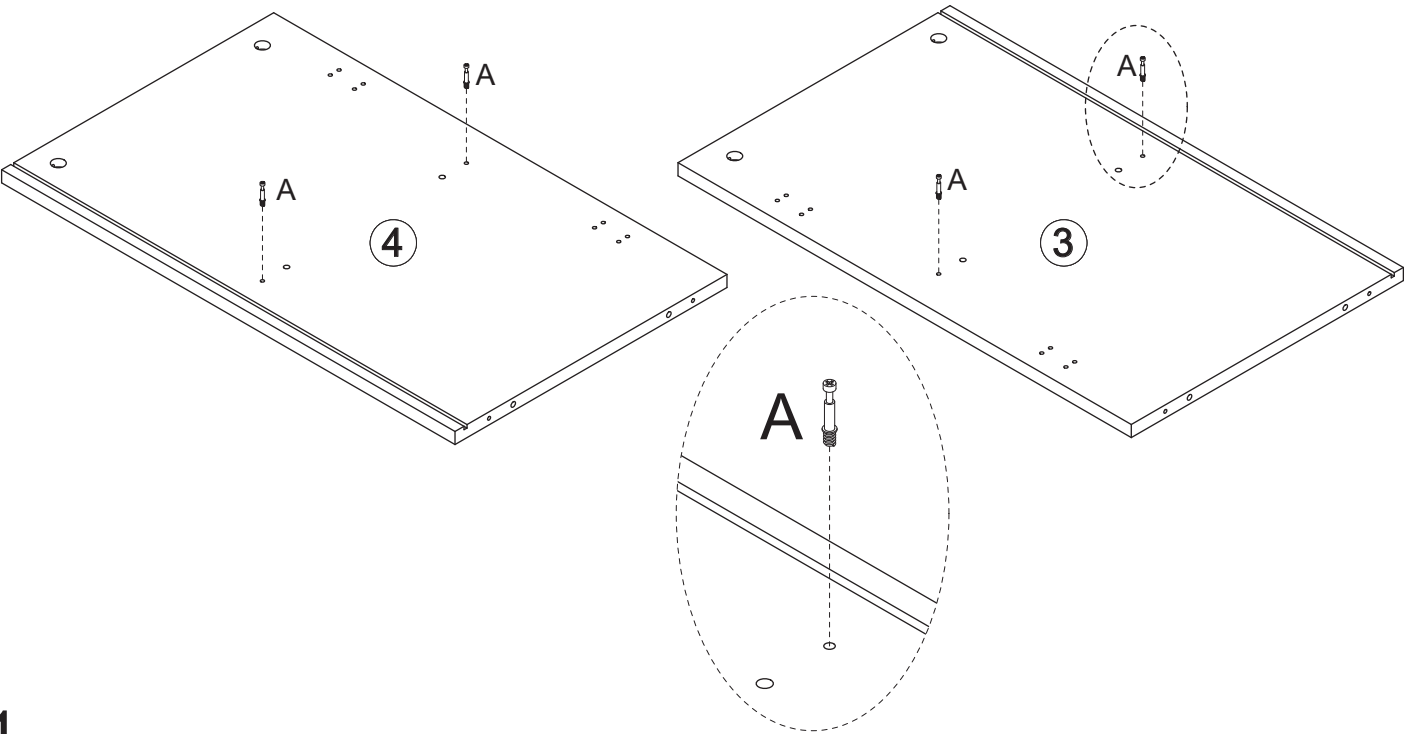


1.

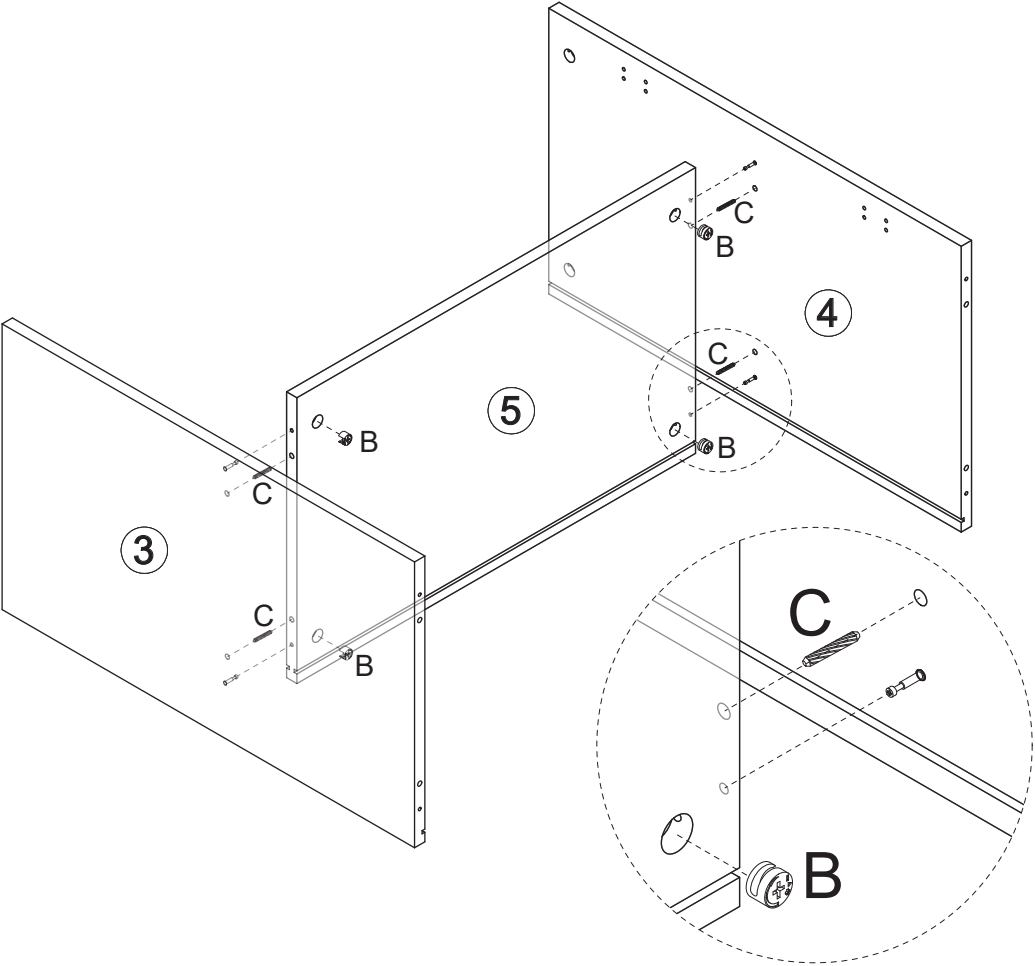


2.

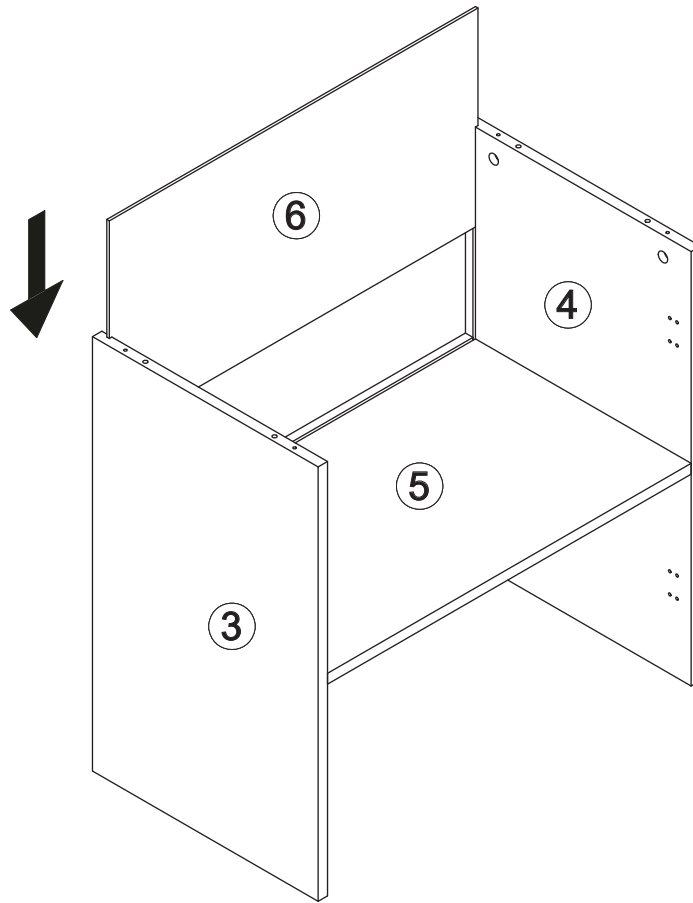


3.

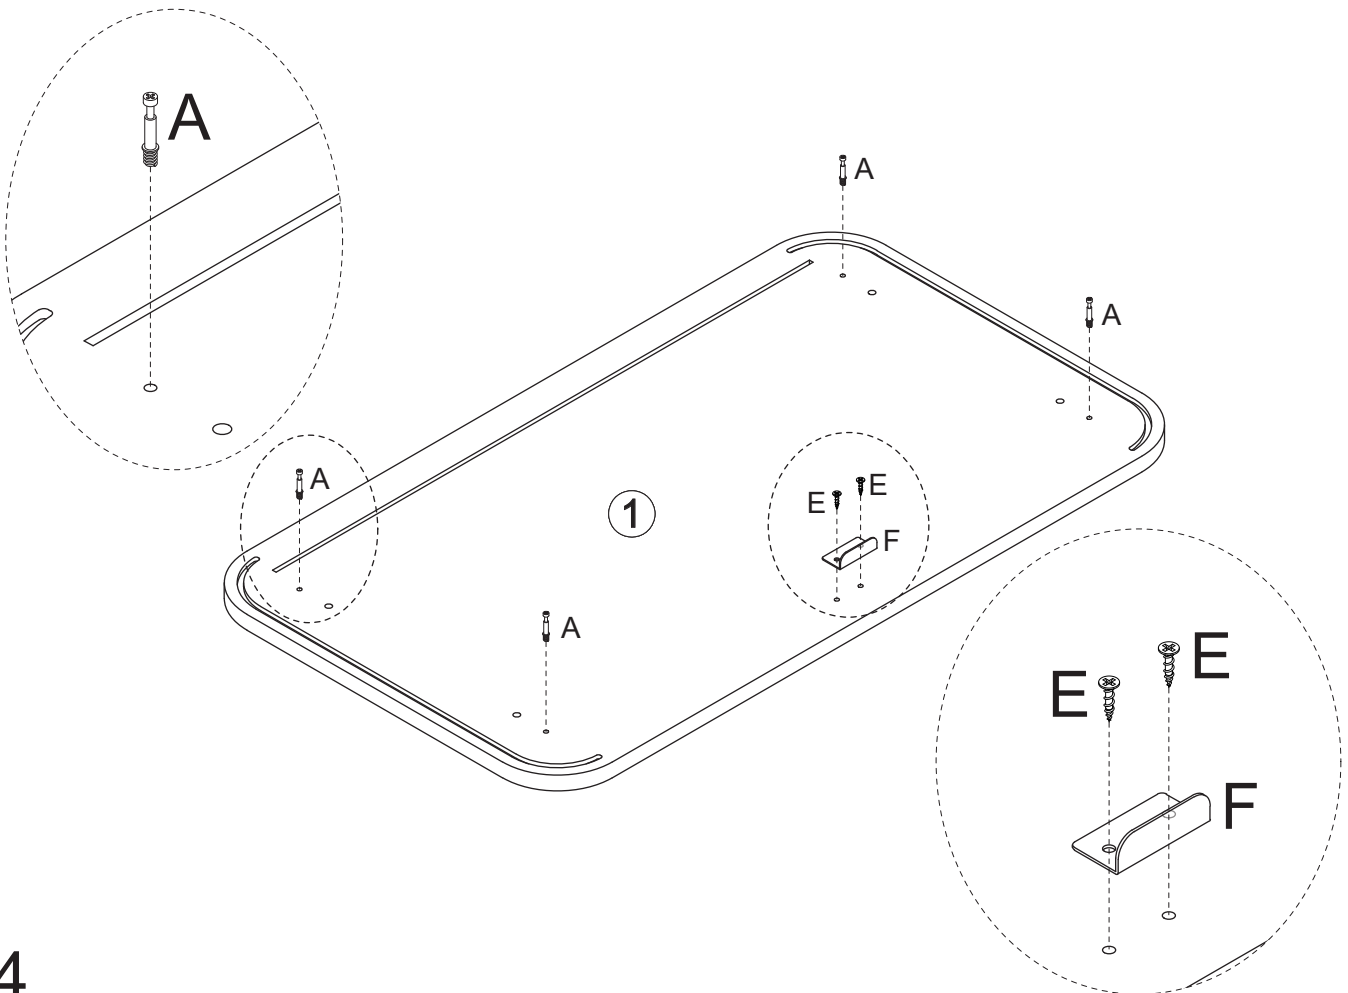


4.

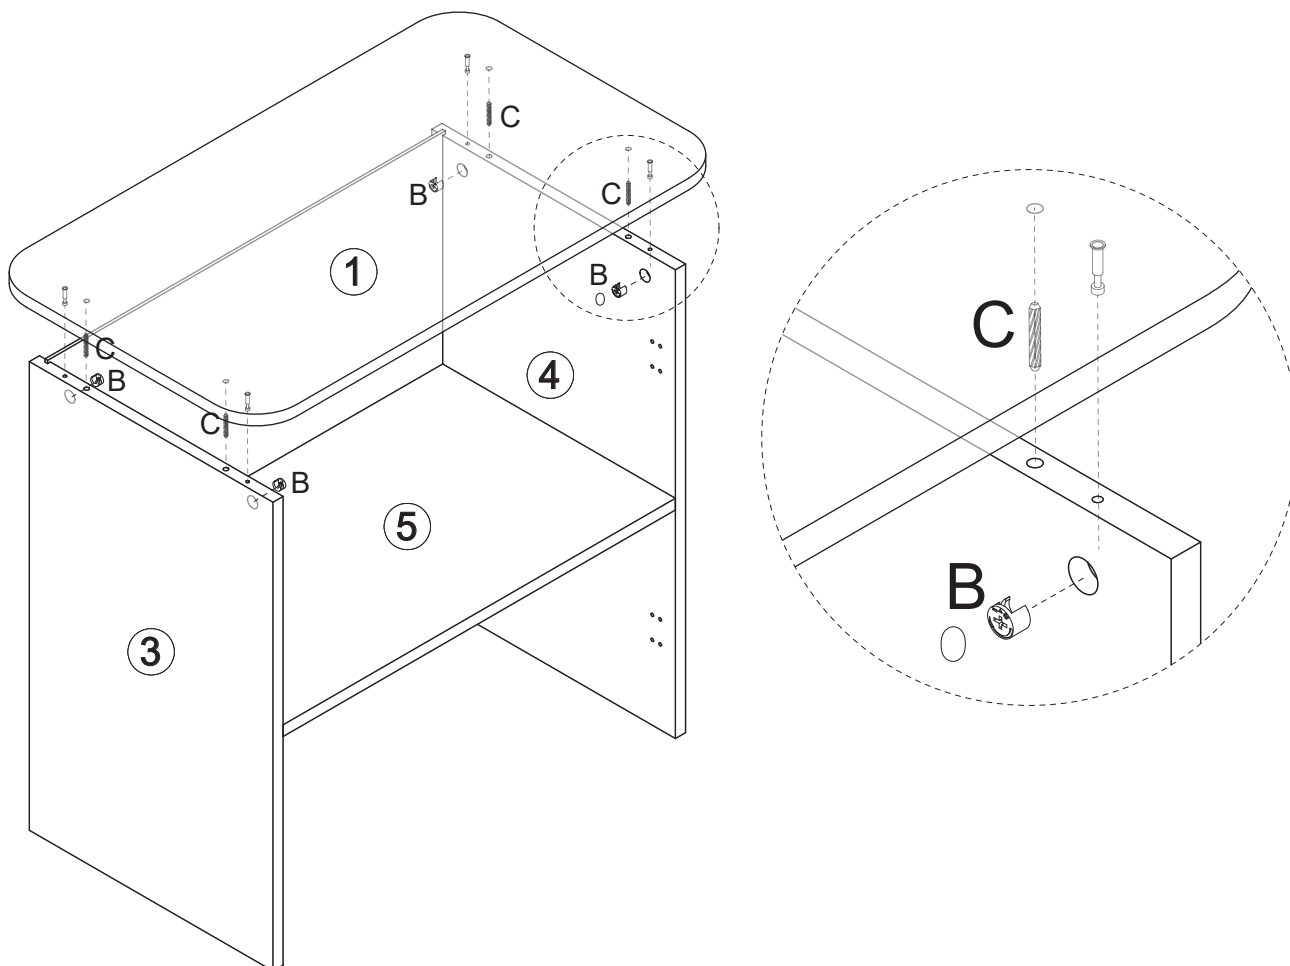



5.

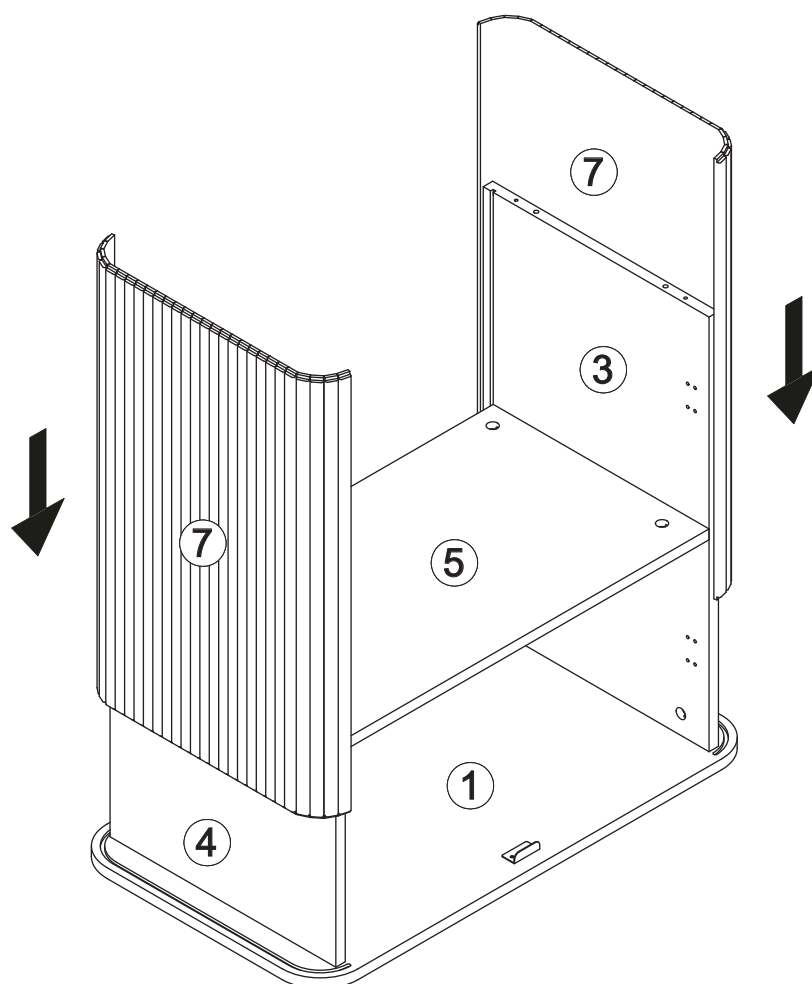



6.

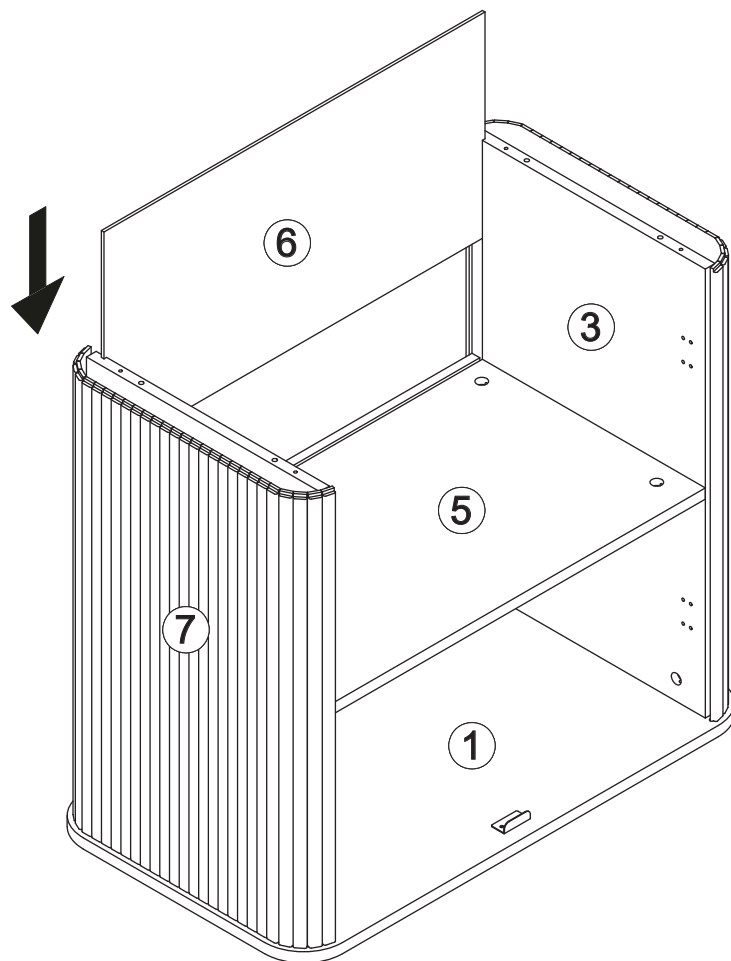


7.

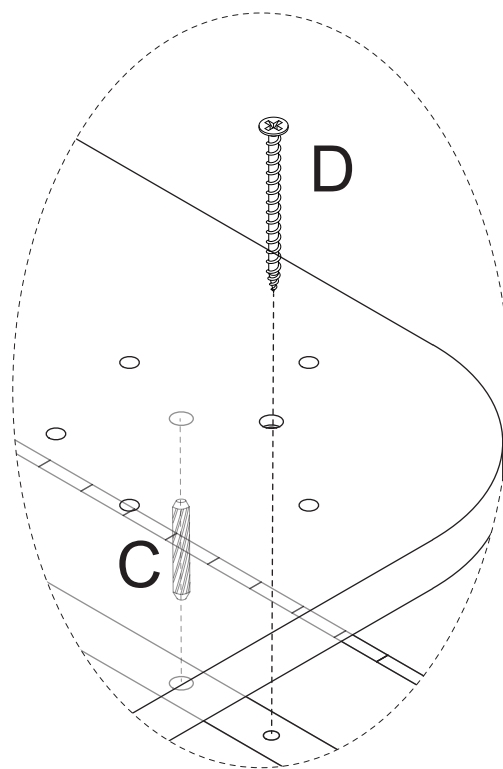
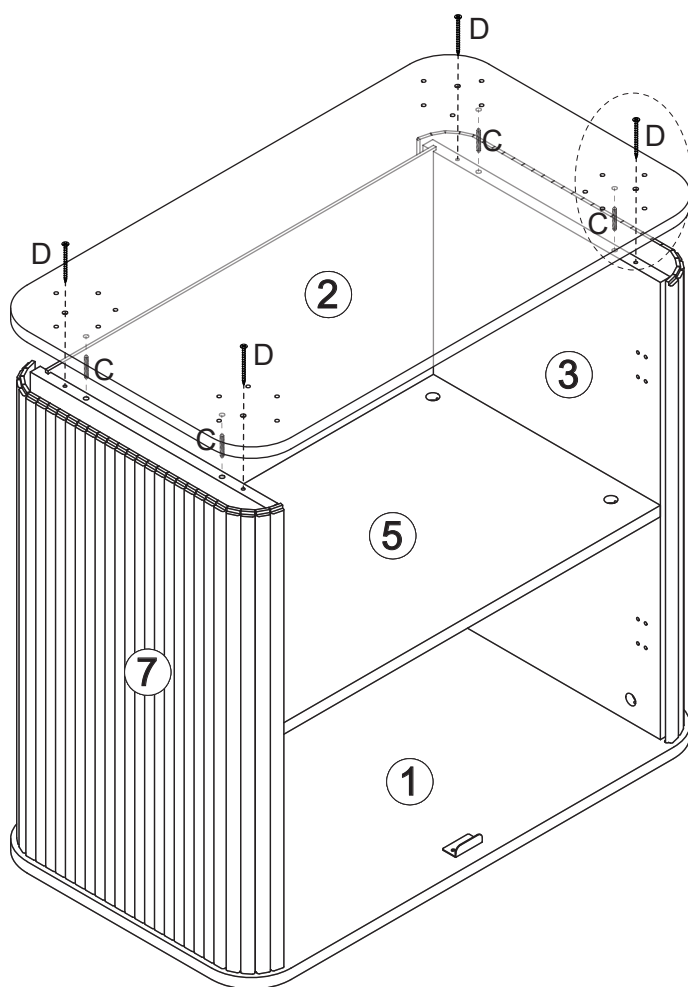


8.

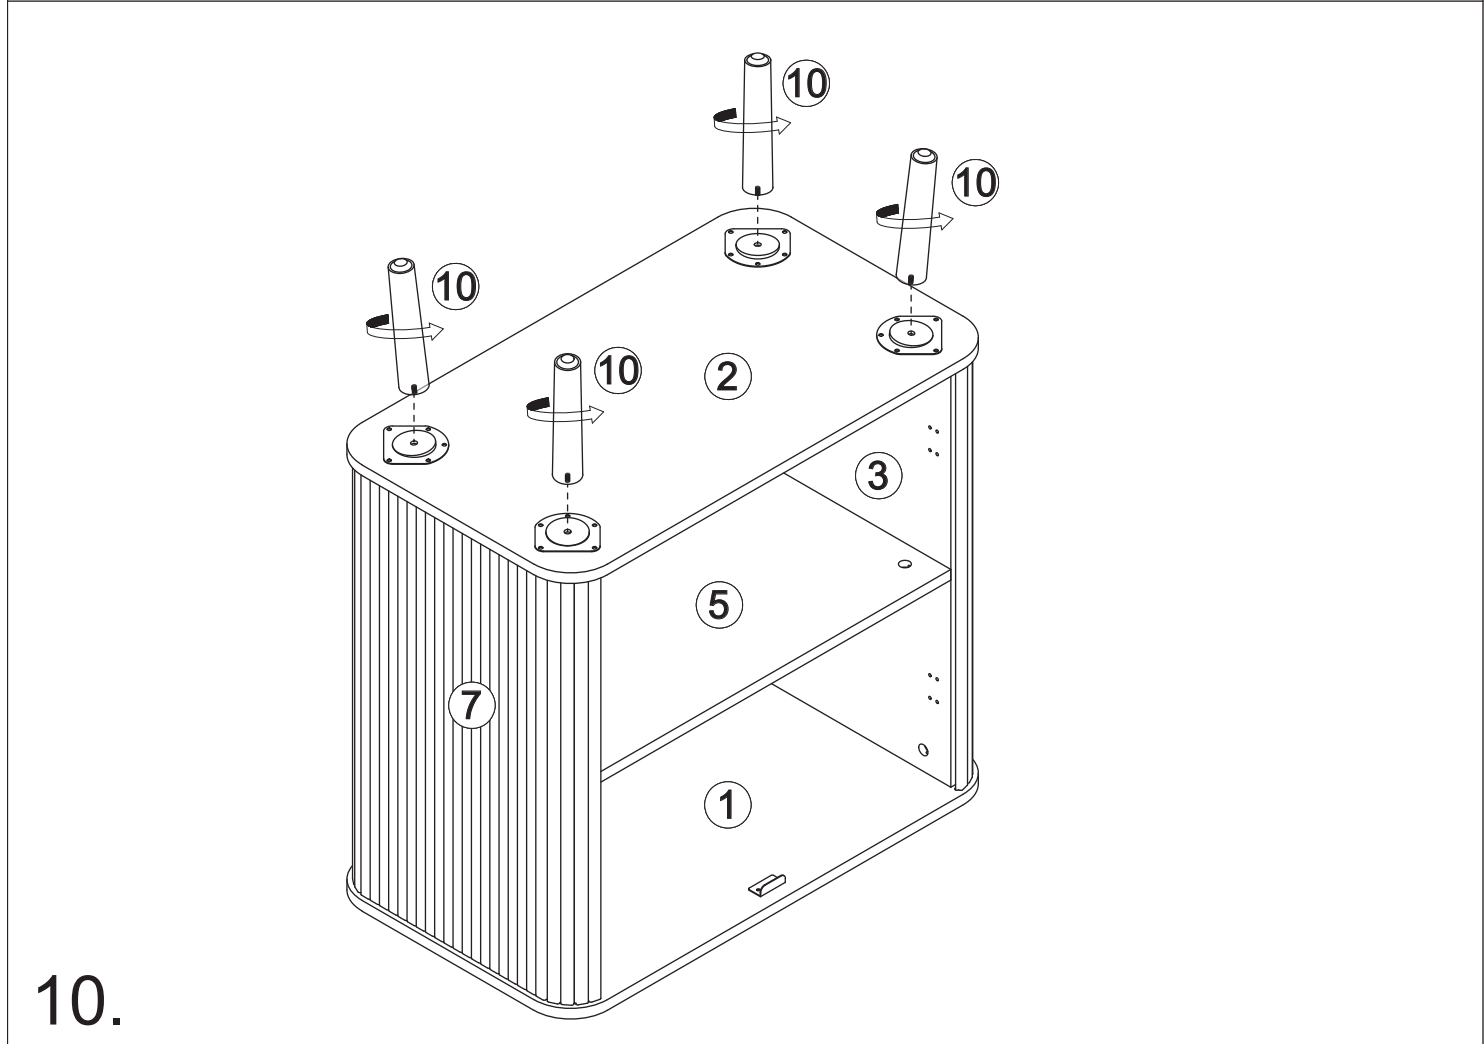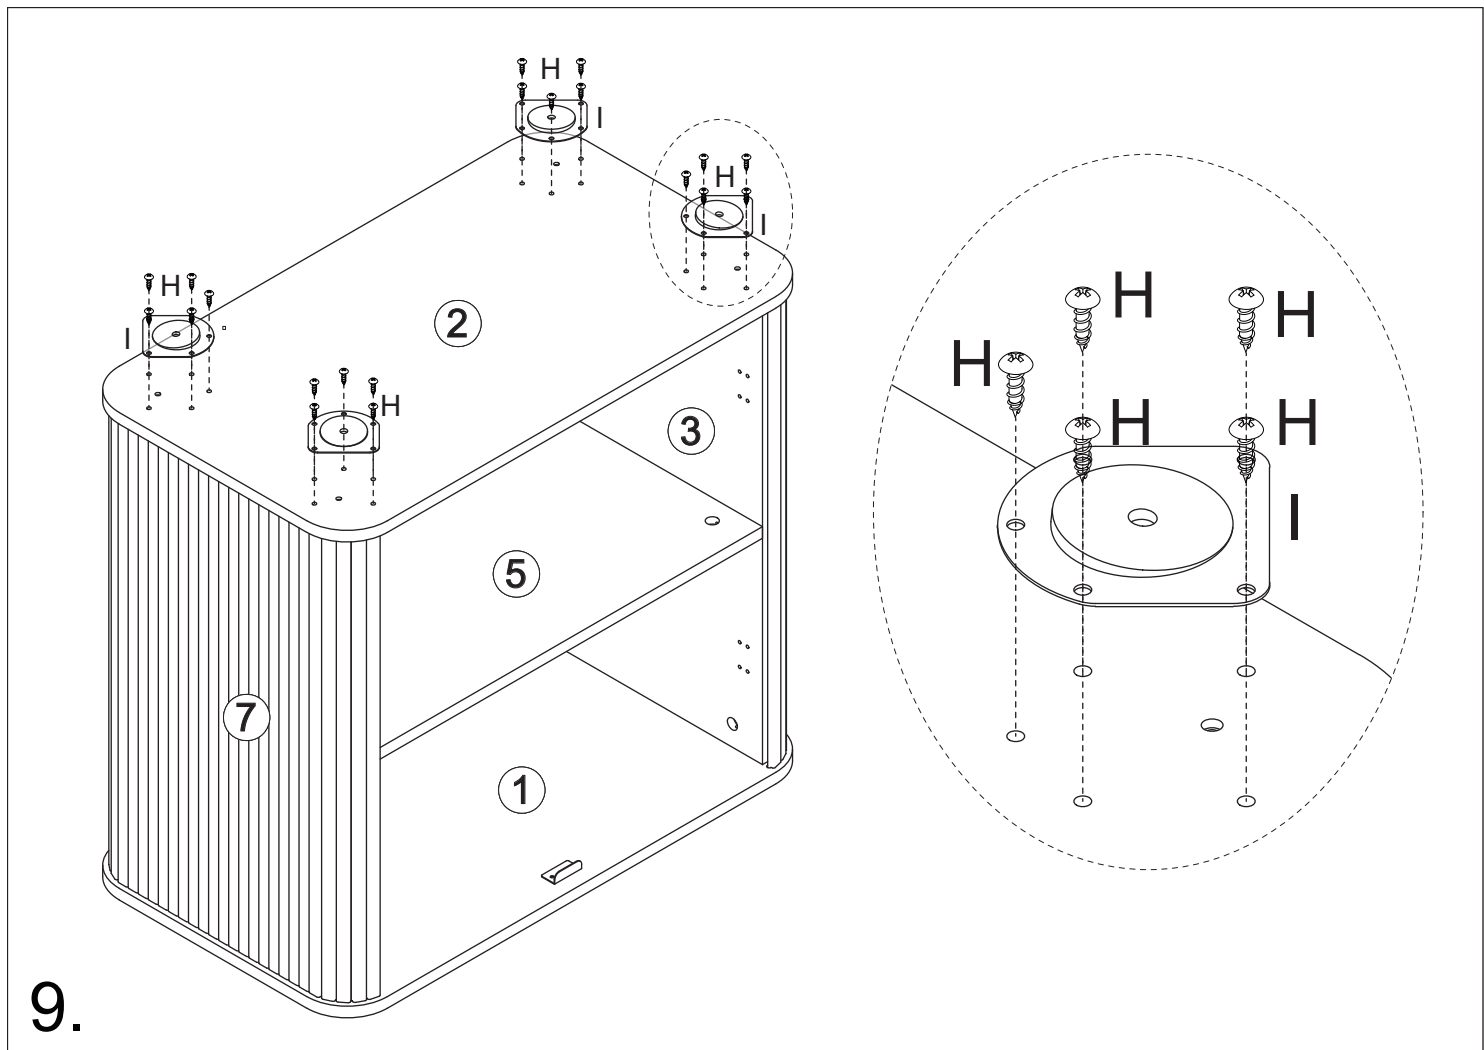


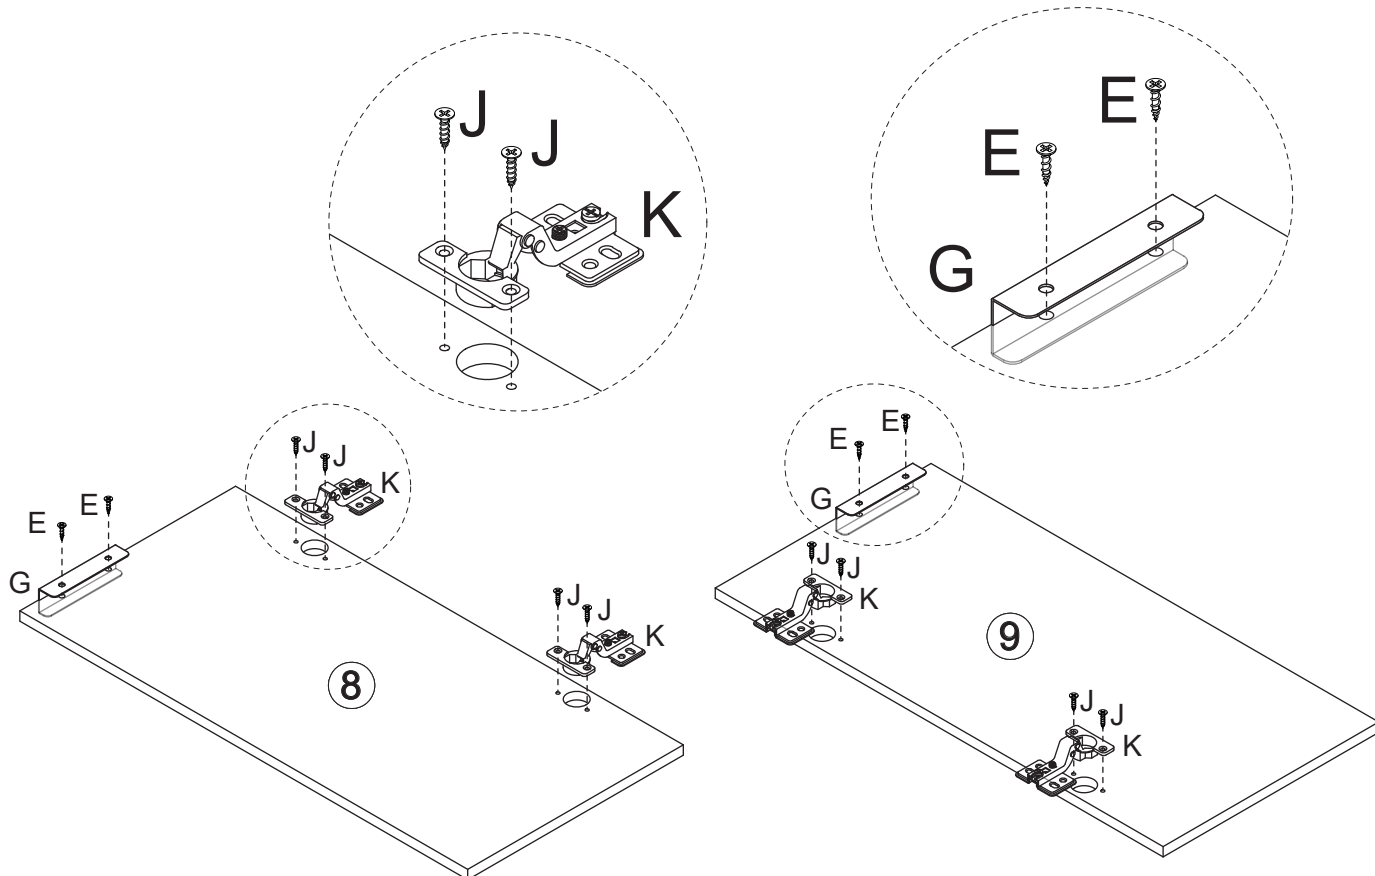


11.

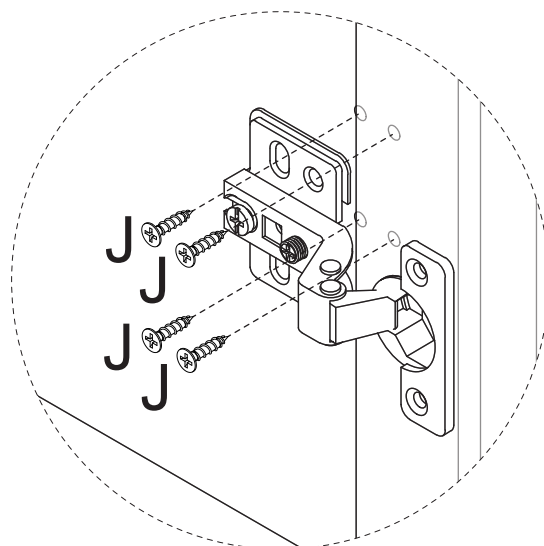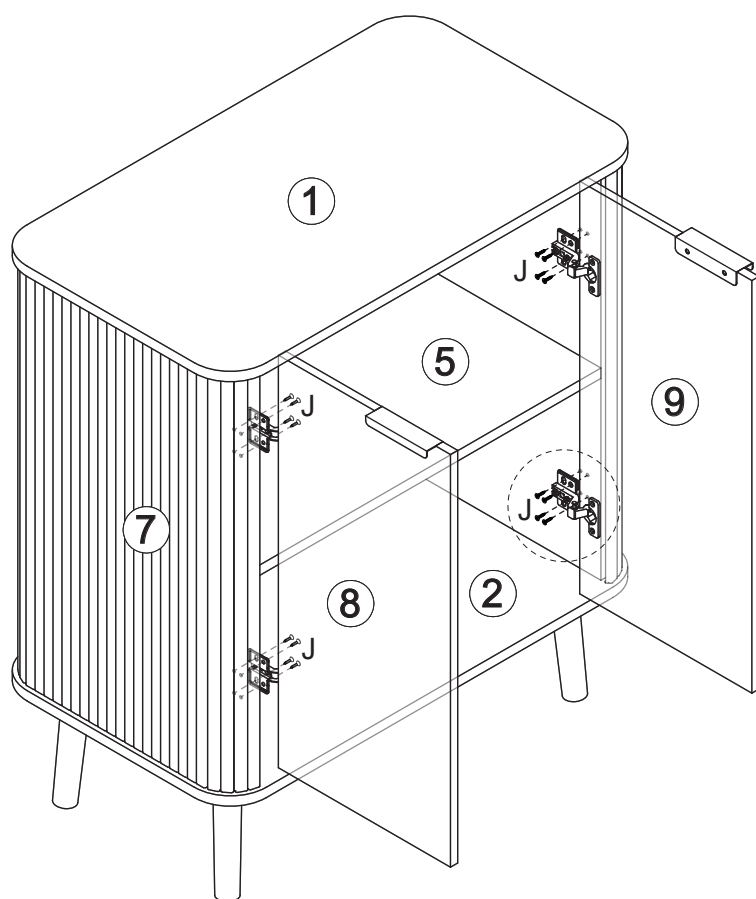

12.

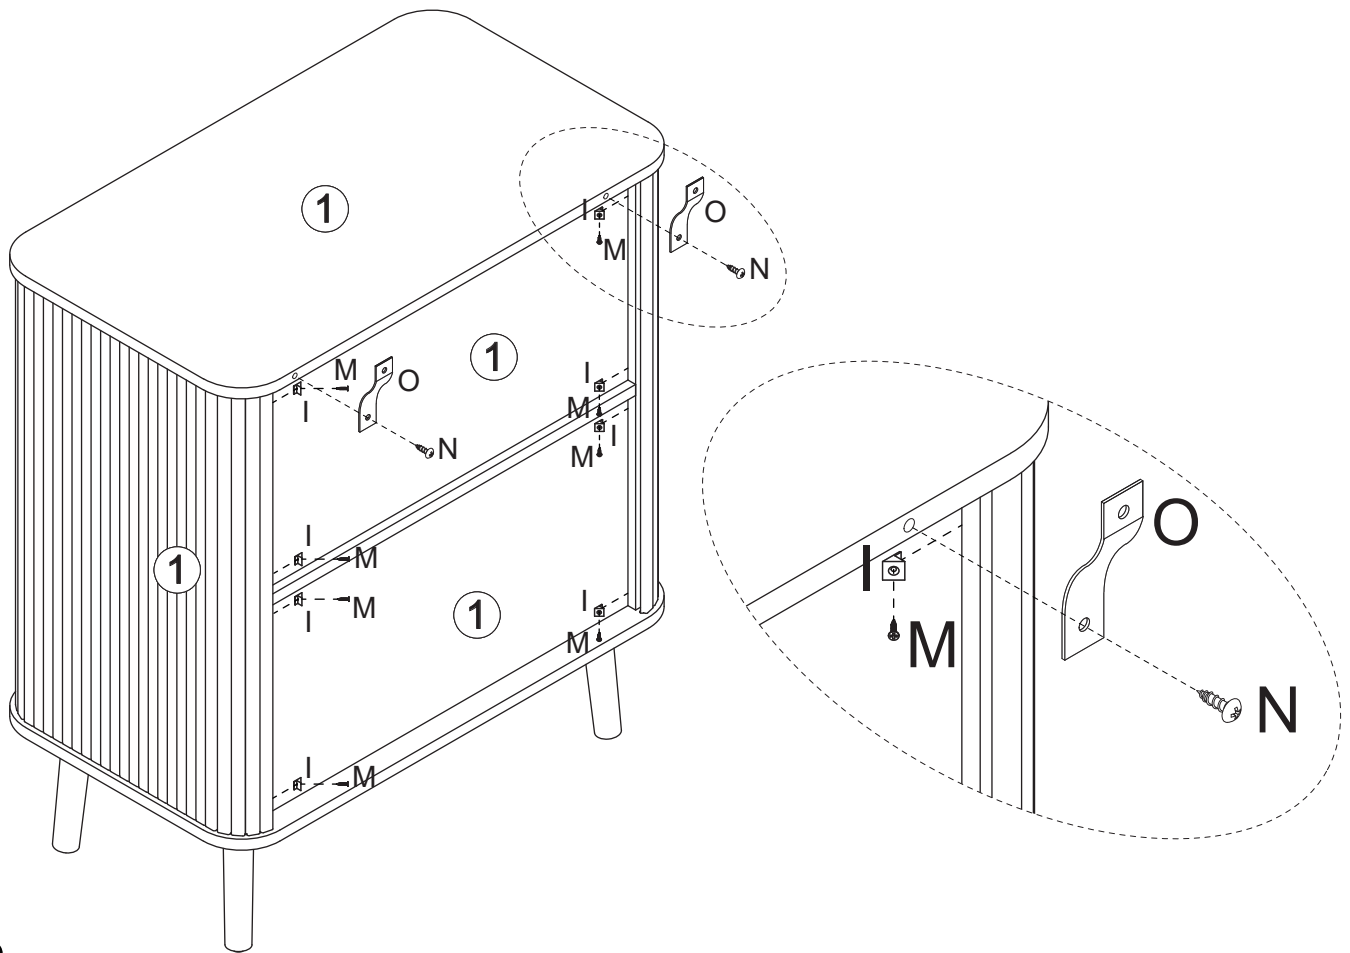

13.

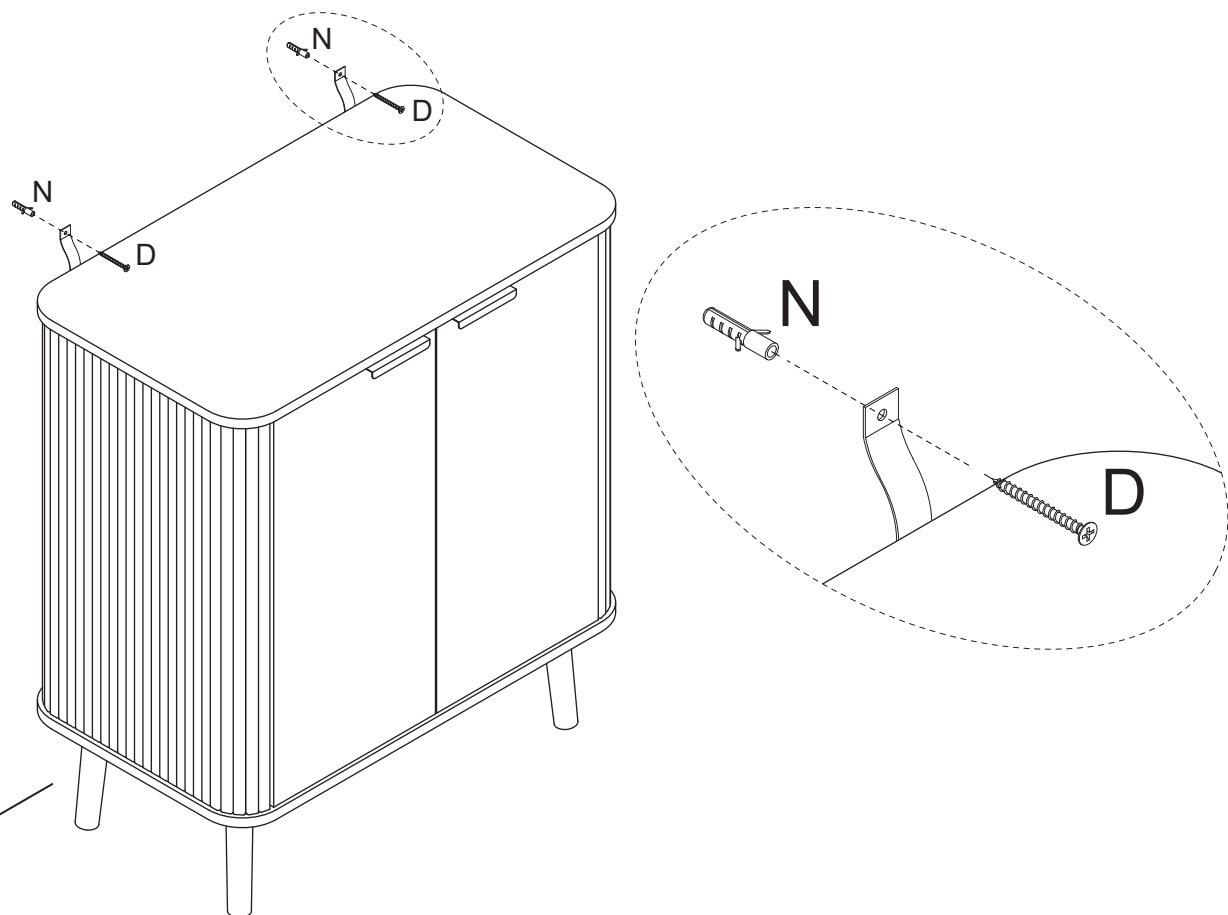

14.