


ASSEMBLY INSTRUCTIONS

FUTON


C O M P A N Y

ST CAB STOR






PO12296

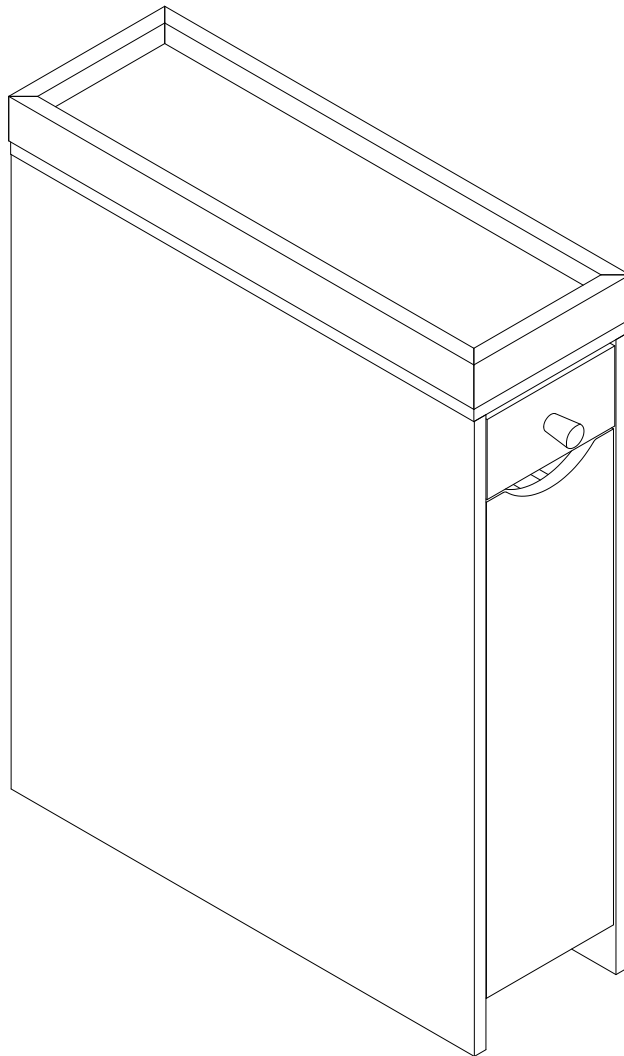



To prevent scratching: Lay the parts face down on a clean, flat, soft surface.

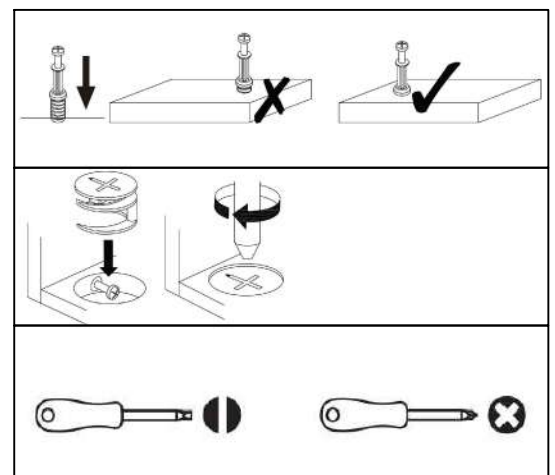


Parts Checklist

		
① x 1	② x 1	③ x 1
		
④ x 1	⑤ x 2	⑥ x 1
		
⑦ x 1	⑧ x 1	⑨ x 1
		
⑩ x 1	⑪ x 1	⑫ x 1
		
⑬ x 1	⑭ x 1	⑮ x 1
		
⑯ x 1	⑰ x 1	⑱ x 1


Fittings Checklist

 φ6x35mm	 φ15x10mm	 M3x12mm	 M4x12mm	 M6x30mm	 M4x25mm
A x 18	B x 18	C x 6	D x 2	E x 20	F x 8
 M4x40mm		 M4x20mm	 406mm		
G x 4	H x 2	I x 1	J x 2	K x 1	


1.

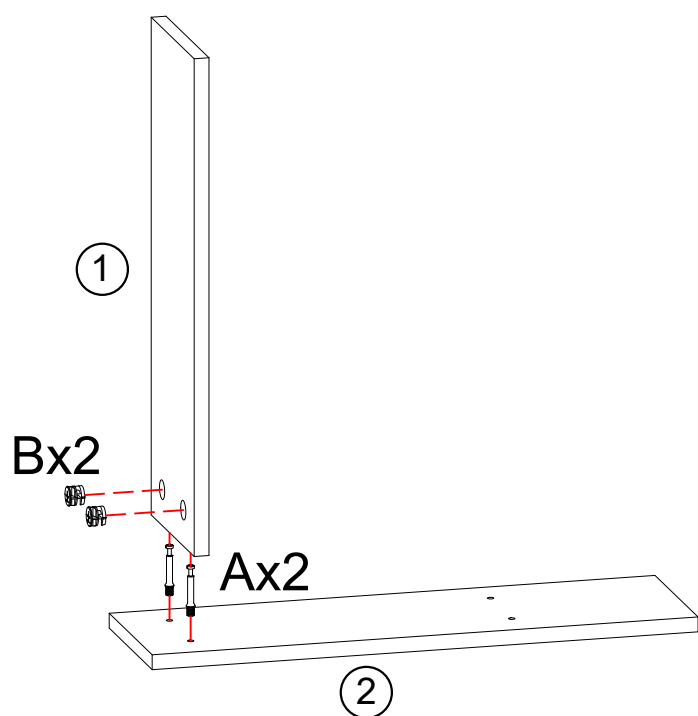


2.

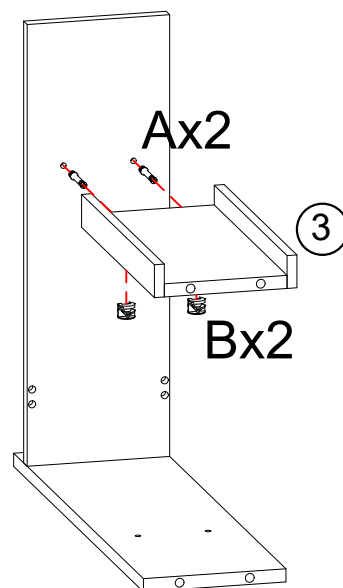


3.

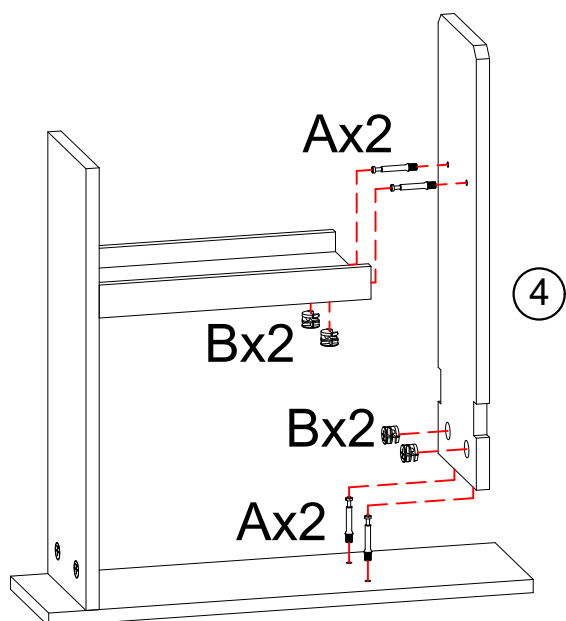


4.

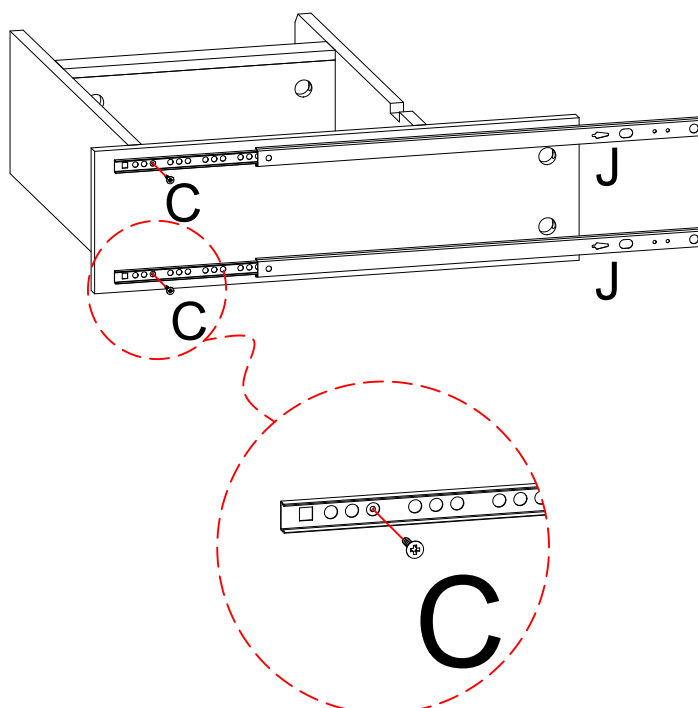


5.

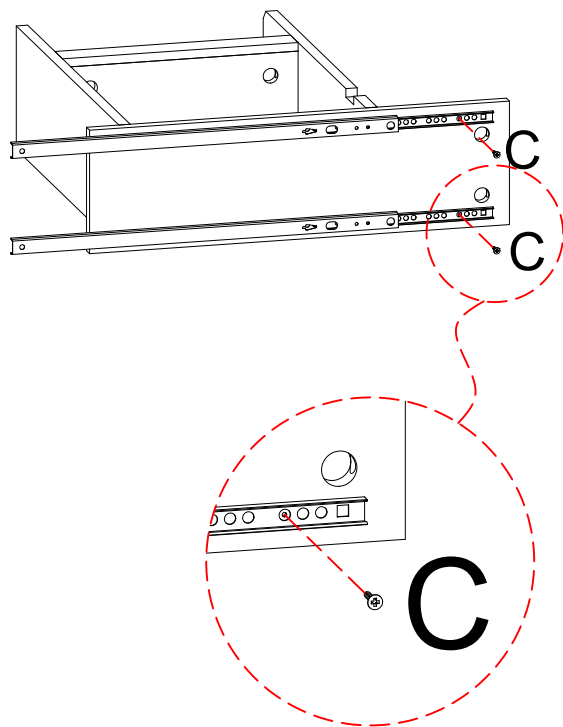


6.

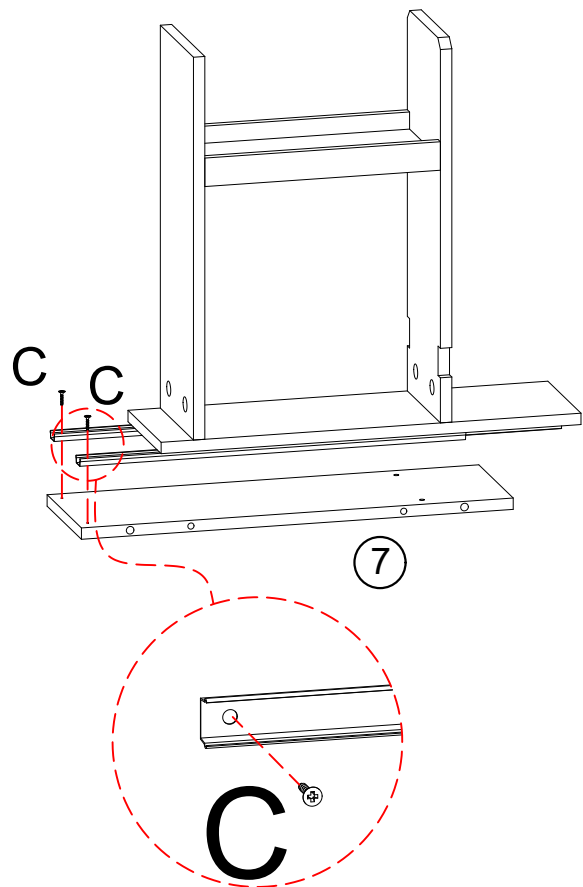


7.

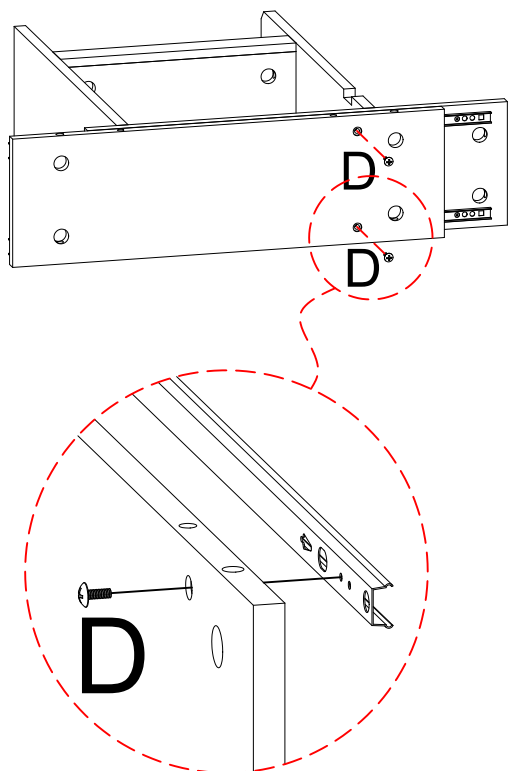


8.

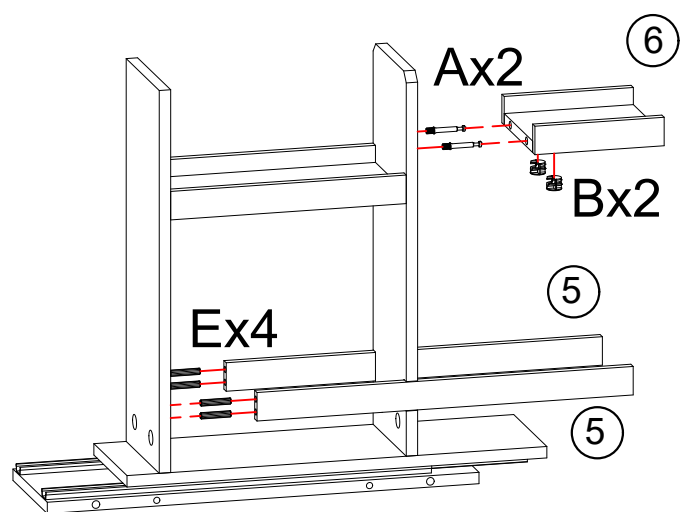


9.

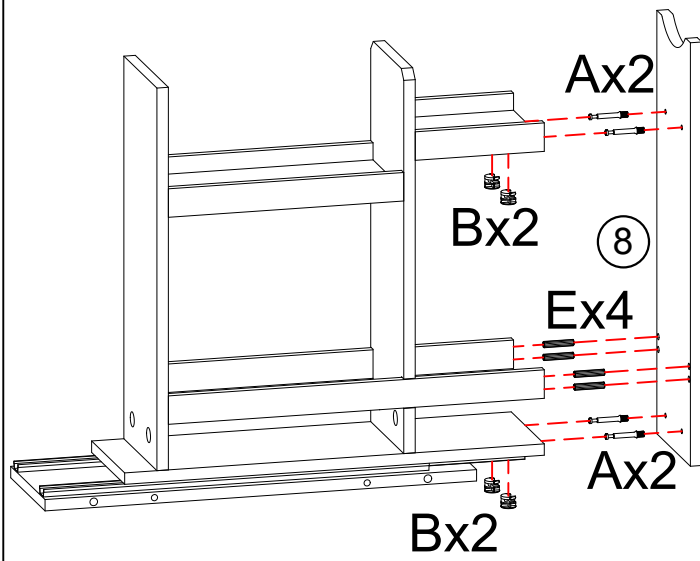


10.

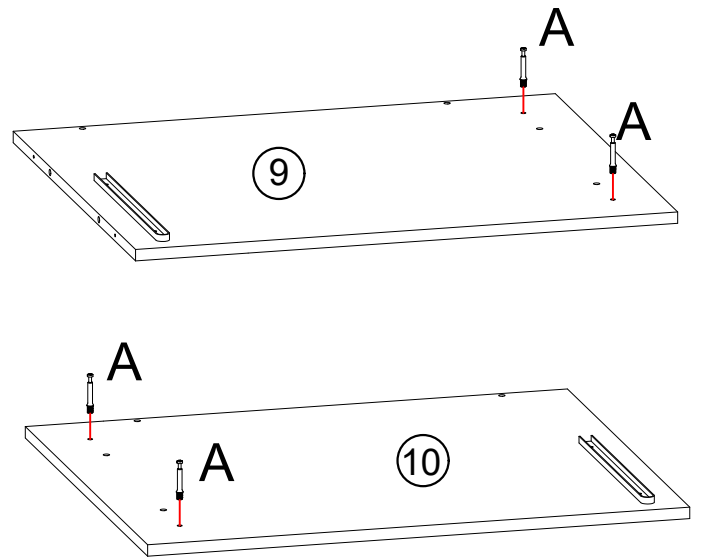


11.

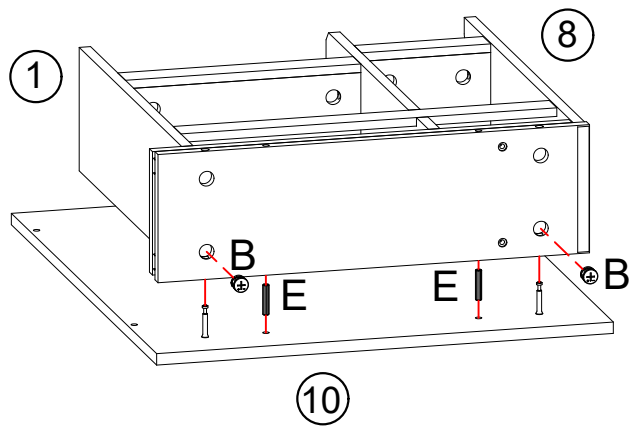


12.

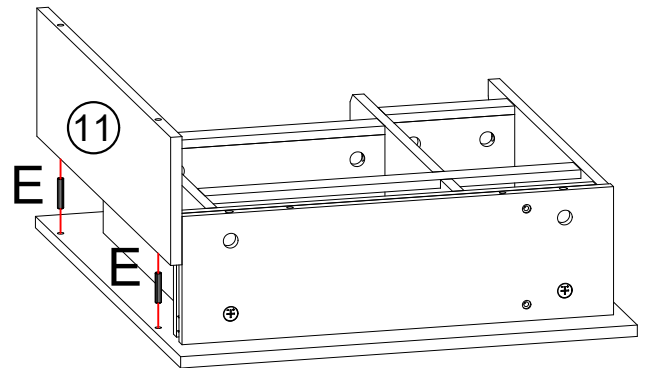


13.

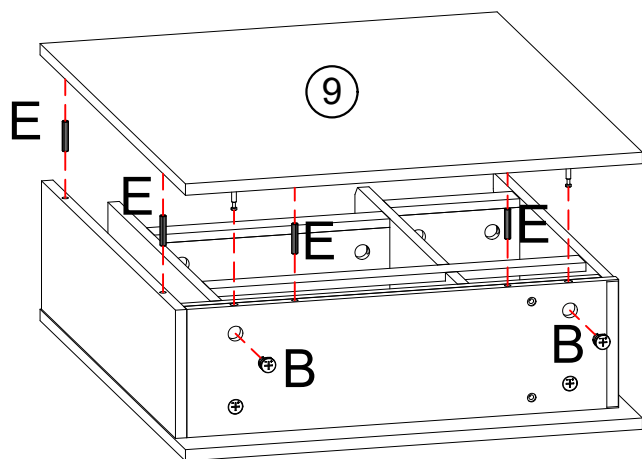


14.

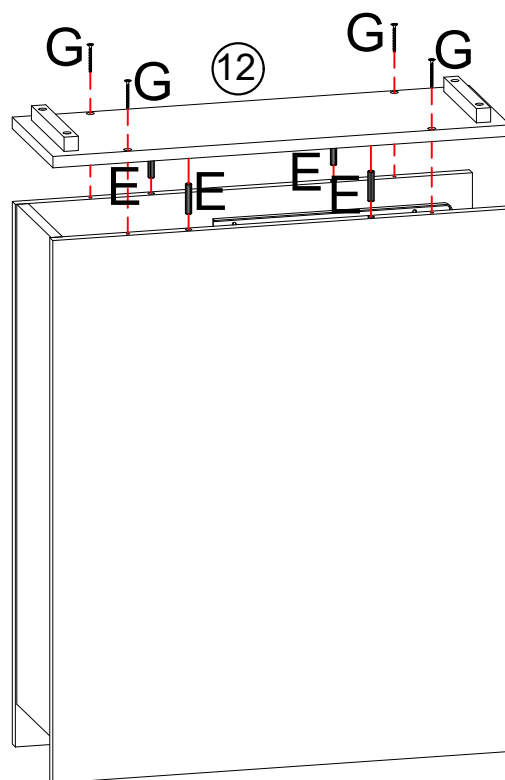


15.

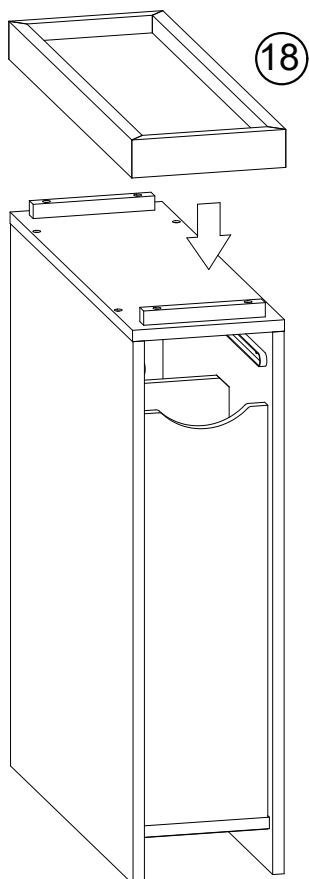


16.

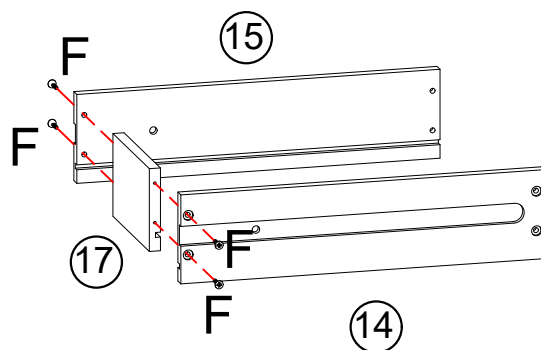


17.

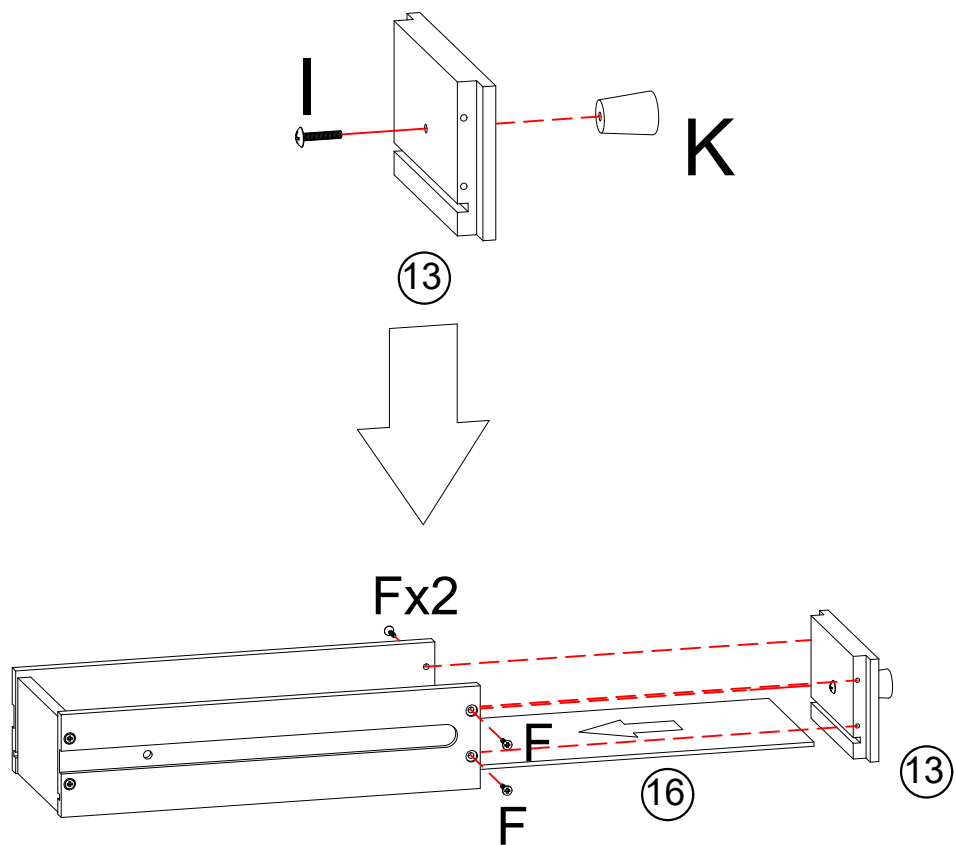

18.

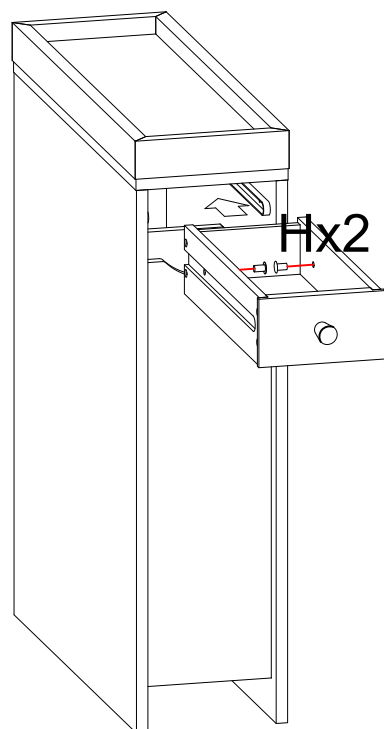

Step:1

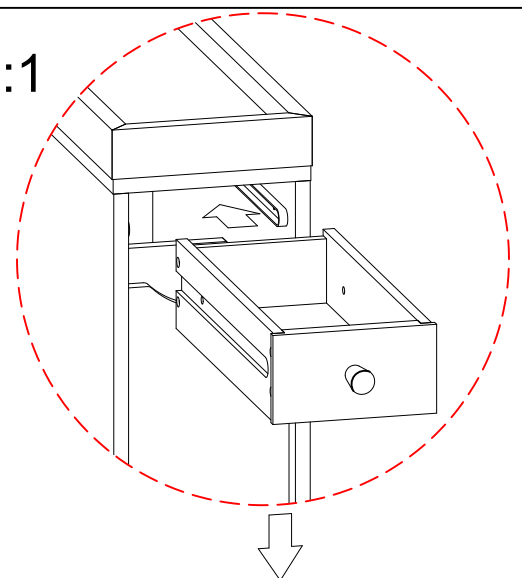

Step:2

