



Assembly Instruction


SB1 TITCH

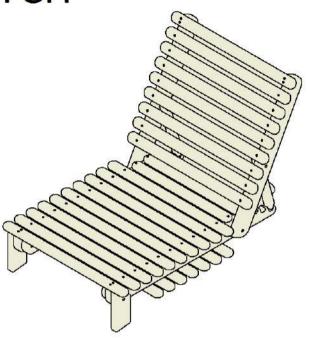

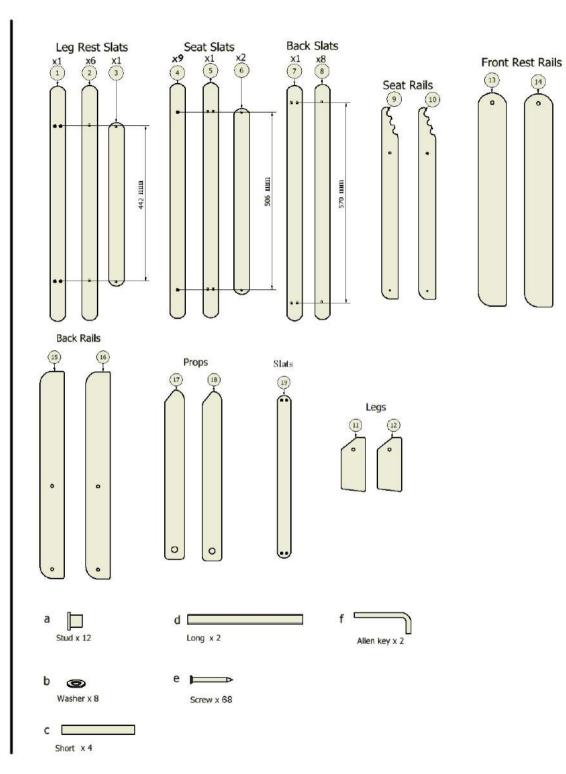

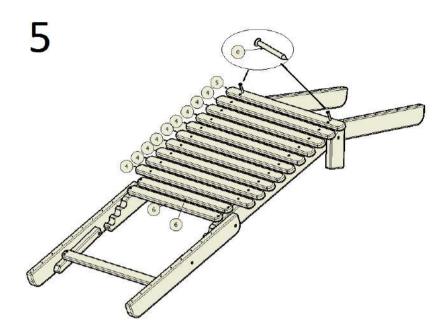


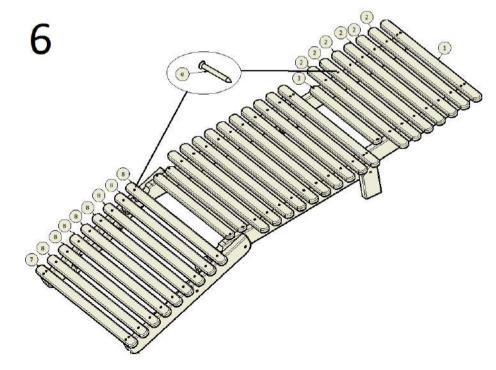






TIP 1



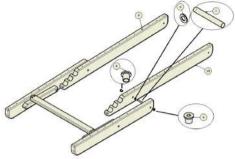


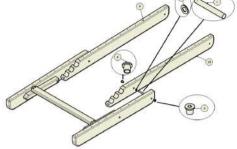



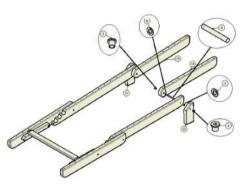

Screw slat numbers 5 and both of slats 6 into place first. Then lay all of slats part 4 into positon before screwing down.

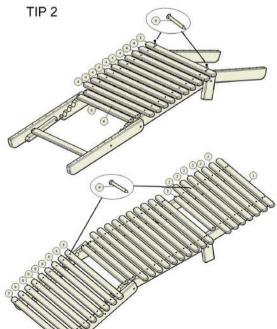

Screw slat numbers 1 and 3 into place first. Then lay all of slats part 2 into position before screwing down.

Then carry out the same prodcedure for the final section by screwing slat 7 and one slat 8 into place first before laying out and screwing down the remaining slats number 8.

Finally parts A,B,C + D can be tightened.