


Storage - Leaning Mirror Drawers (V3 RND)




Please read these instructions very carefully before you begin assembly to ensure that your Futon Company product will give you many years of satisfaction.

Thank you for buying a Futon Company product. We are constantly striving to improve everything we do, but occasionally mistakes do occur. In the unlikely event that you find any part missing please call your nearest Futon Company store and we will arrange for the despatch of an immediate replacement.

Please keep all packaging until you have checked every part and assembly of your Futon Company product is complete.

This product should take approximately 90 minutes to assemble by one person.

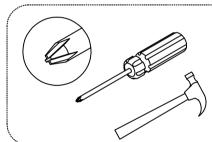

You will need a cross head screwdriver and a hammer to assemble this product. An electric drill may cause damage and is not recommended.

An allen key is also supplied with this product for assembly.

The fittings pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN. Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet.

ST LN MIR DRWS 3 ROPO


Page 2



Please check and count every component very carefully before you begin

Parts Checklist

- 1 Mirror x 1
- (2) Top Drawer x 1
- (3) Side Panel R x 1
- **4** Side Panel L x 1
- (5) Back Panel x 1
- (6) Side Drawer R x 3
- (7) Side Drawer L x 3
- (8) Back Drawer x 3
- (9) Bottom Drawer x 3
- **10** Front Drawer x 3
- 11) Bottom Plate x 2

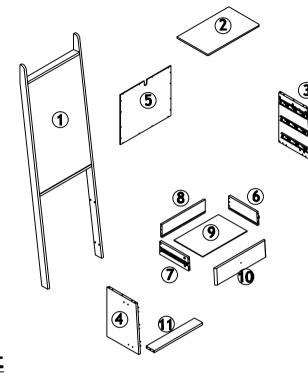

Fittings Checklist



(a) Wooden Dowel x 18 (b) Allen Head Bolt x 8 (c) Cam Bolt x 22 (d) Cam x 22



(i) Anti-slip pad x 4 (j) Screw x 42 (6 x 12 mm) (k) Screw x 18 (4 x 35 mm)

Page 3

