

## Assembly Instructions


### Berlin Cabinet

**FUTON**

C O M P A N Y

Experts in small space living


ST BERLIN CAB

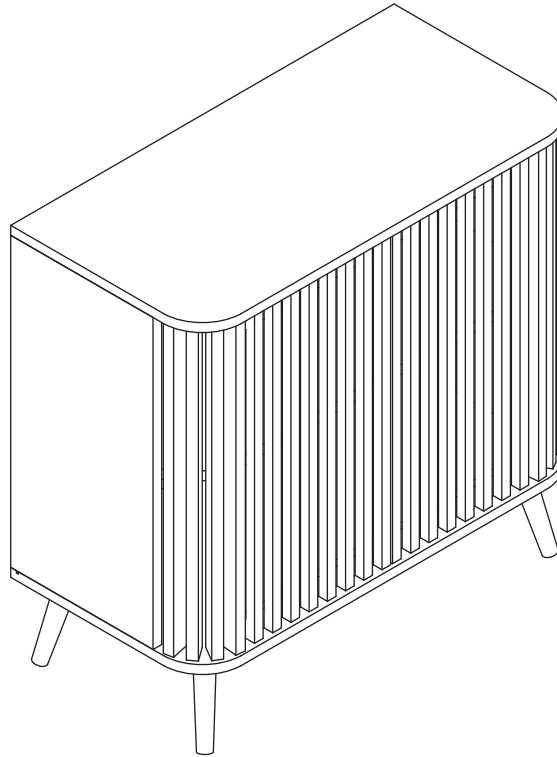


## Parts Checklist




① x4

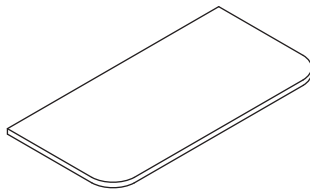


② x1

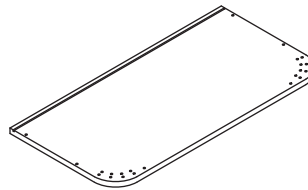

③ x1

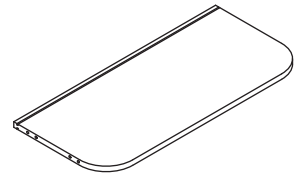


④ x1



⑤ x1



⑥ x1




⑦ x1




⑧ x1



⑨ x8

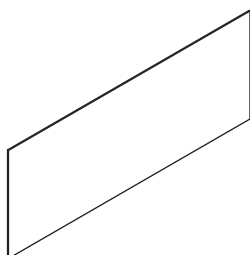


⑩ x1

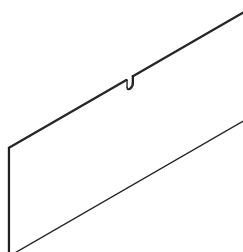

⑪ x1


## Fittings Checklist

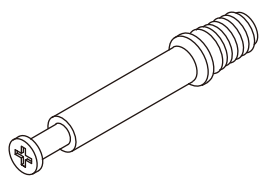


Ⓐ Cam Screw x 8




Ⓑ Cam Lock x 8

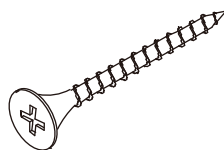


Ⓒ Screw x 17

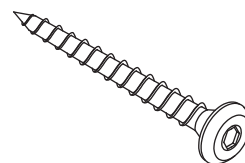


Ⓓ Screw x 4

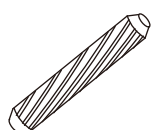


Ⓔ Wooden Dowel x 20




Ⓕ Screw x 2

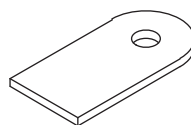


Ⓖ Magnet Plate x 2

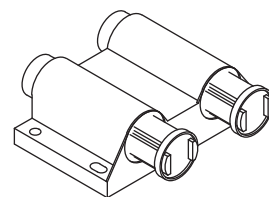

Ⓗ Magnet x 1




Ⓘ Screw x 4

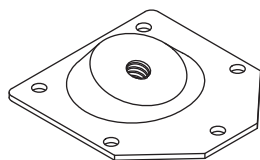


Ⓙ Metal Plate x 4




Ⓚ Screw x 21

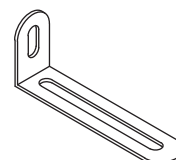


Ⓛ Wall leash x 1



Ⓜ Door Pin x 4

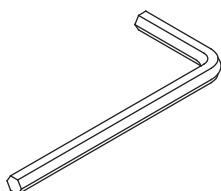


Ⓝ Allen Key x 1



Ⓞ Wall Plug x 1




Ⓟ Felt Pad x 4




Cross head Screwdriver also required for assembly


To prevent scratching: Lay the parts face down on a clean, flat, soft surface.

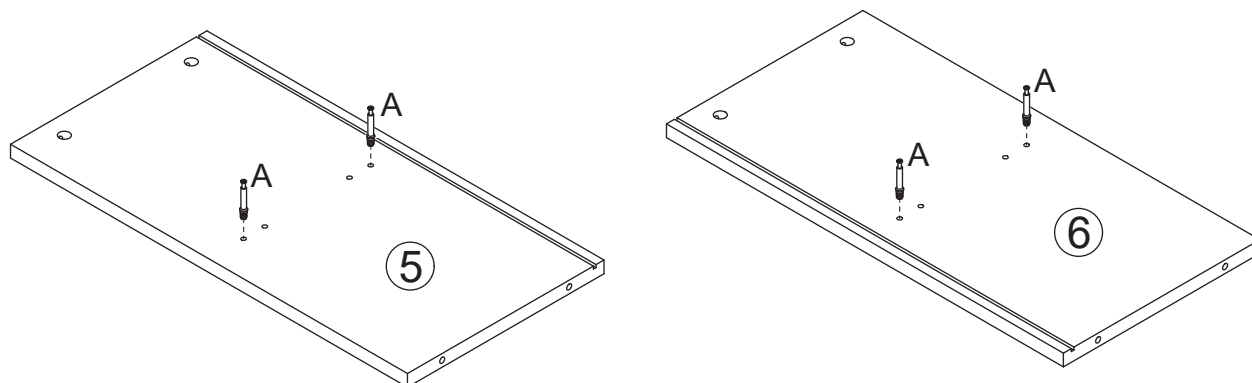


1.

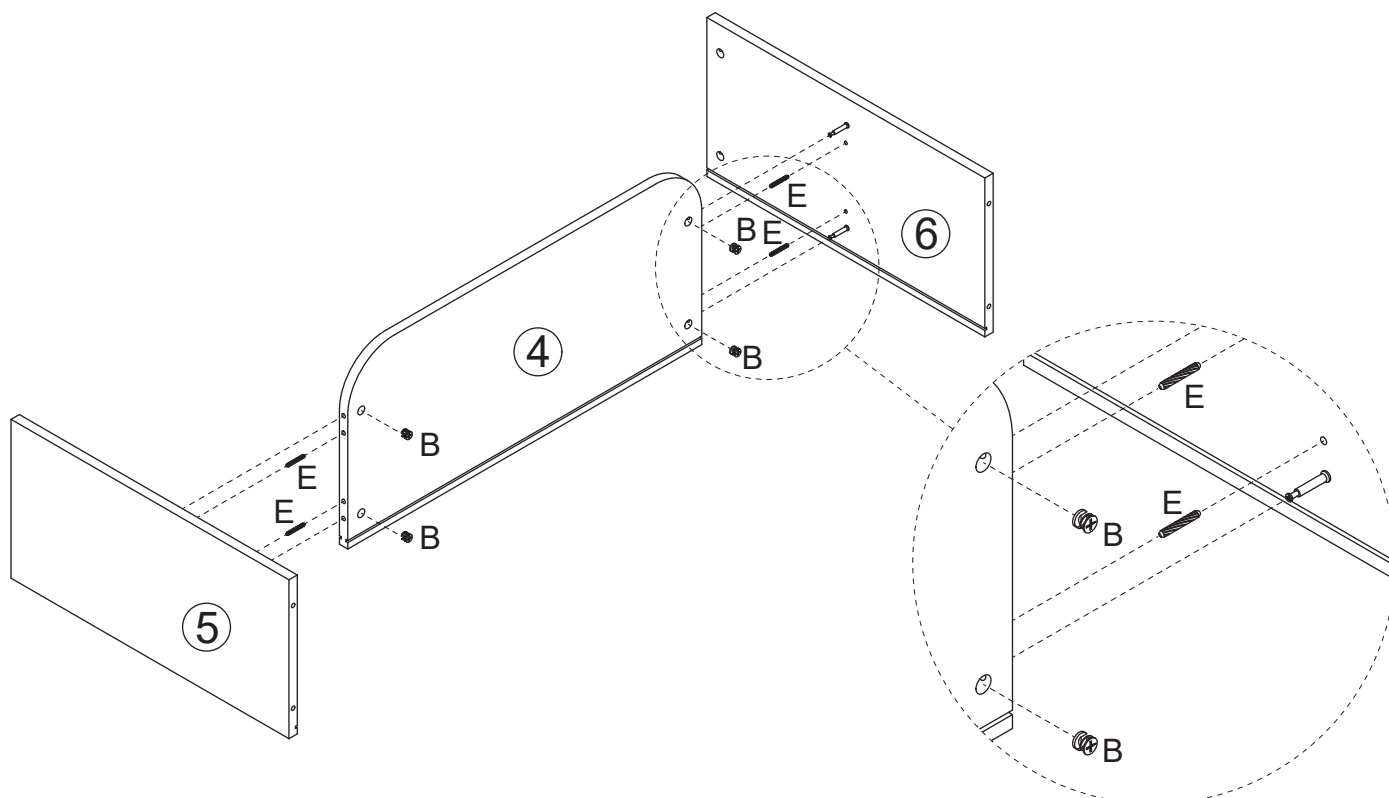


2.

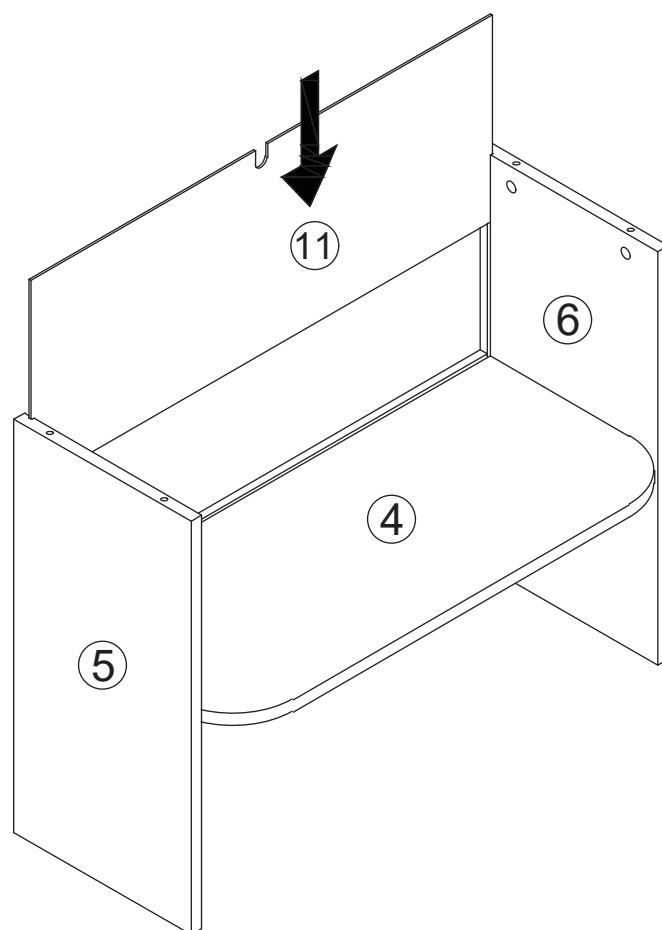


3.

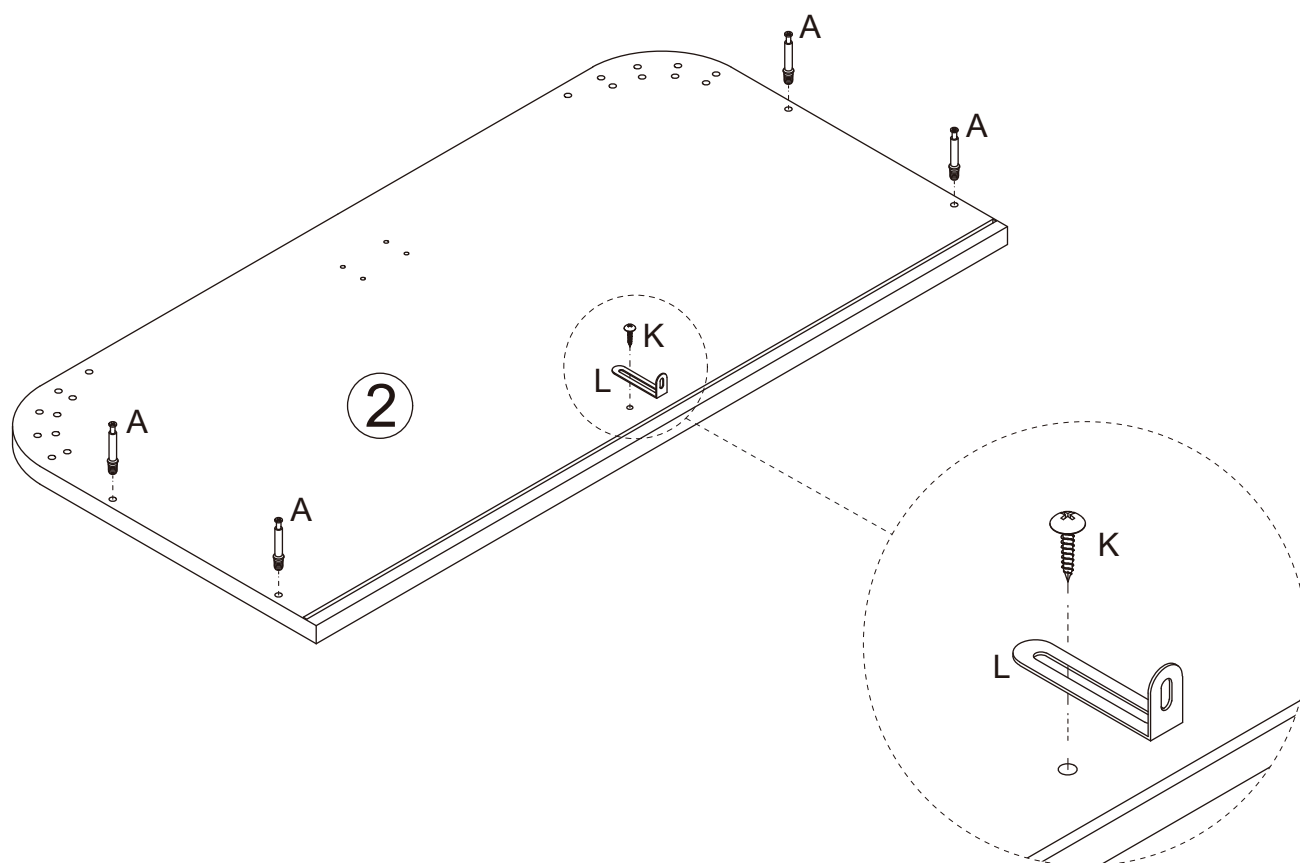


4.

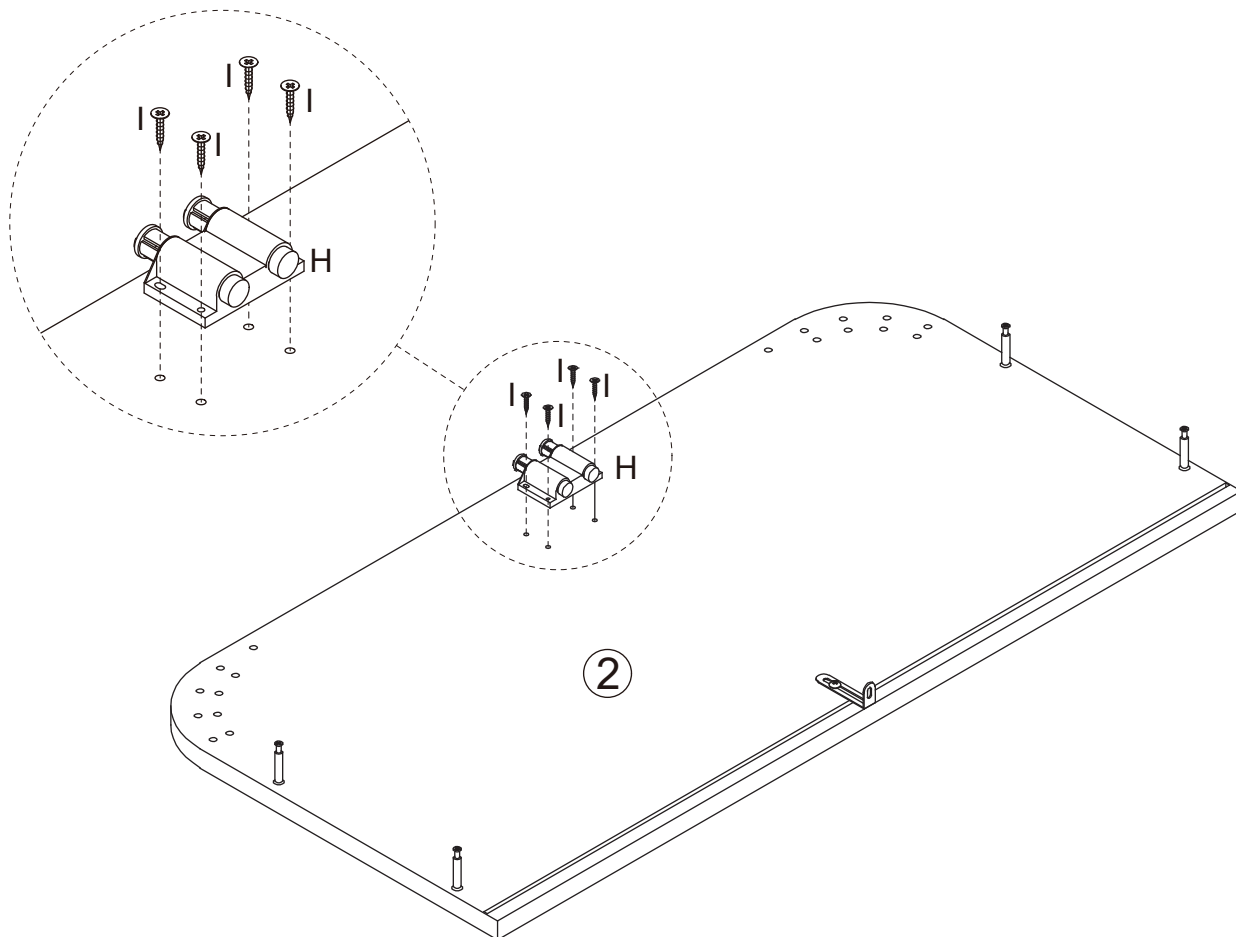

5.

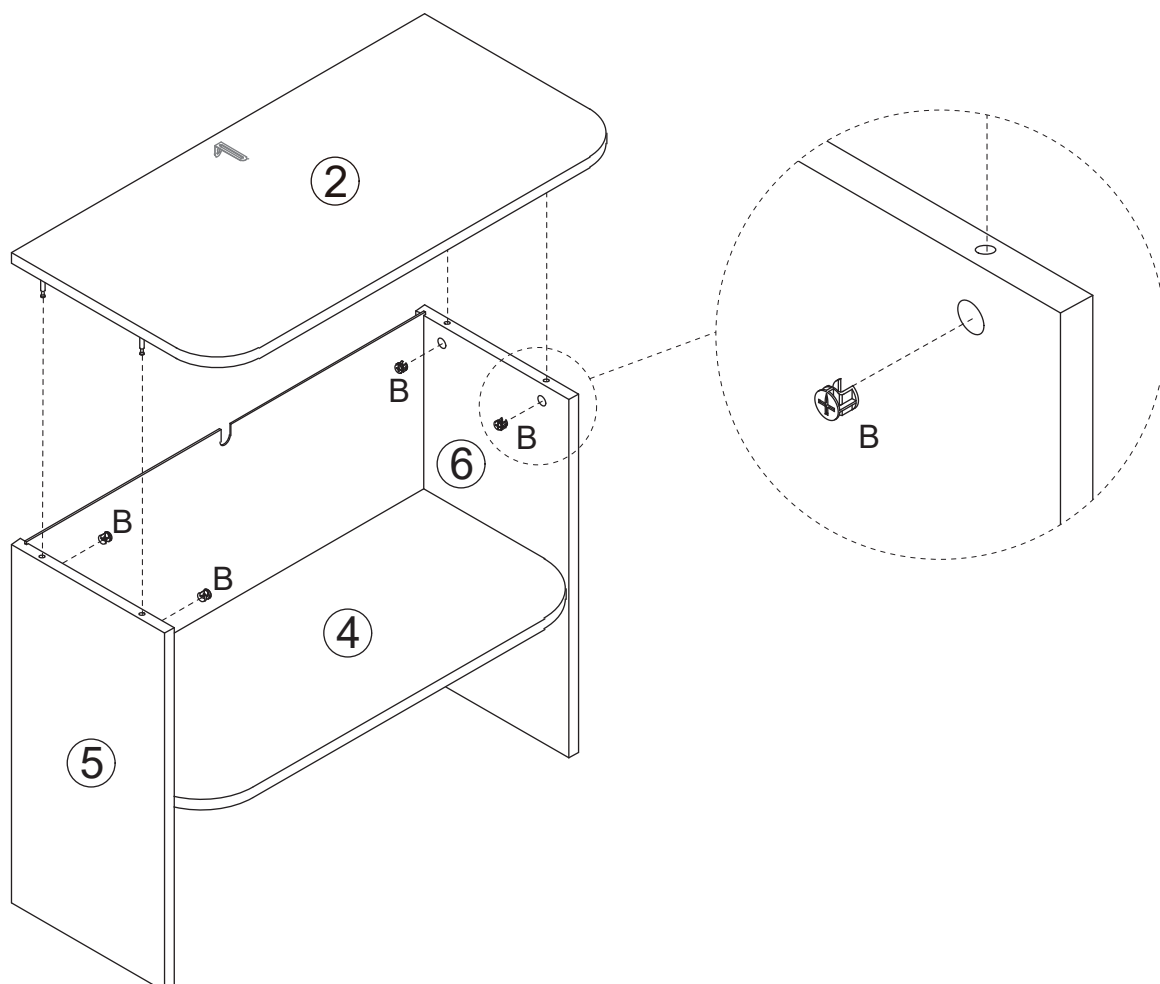


6.

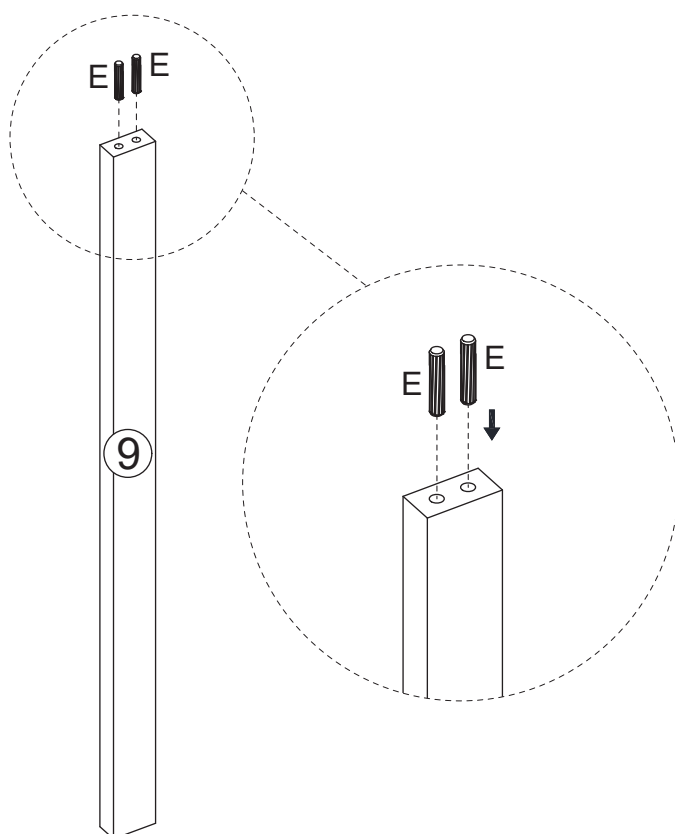


7.


**x8**

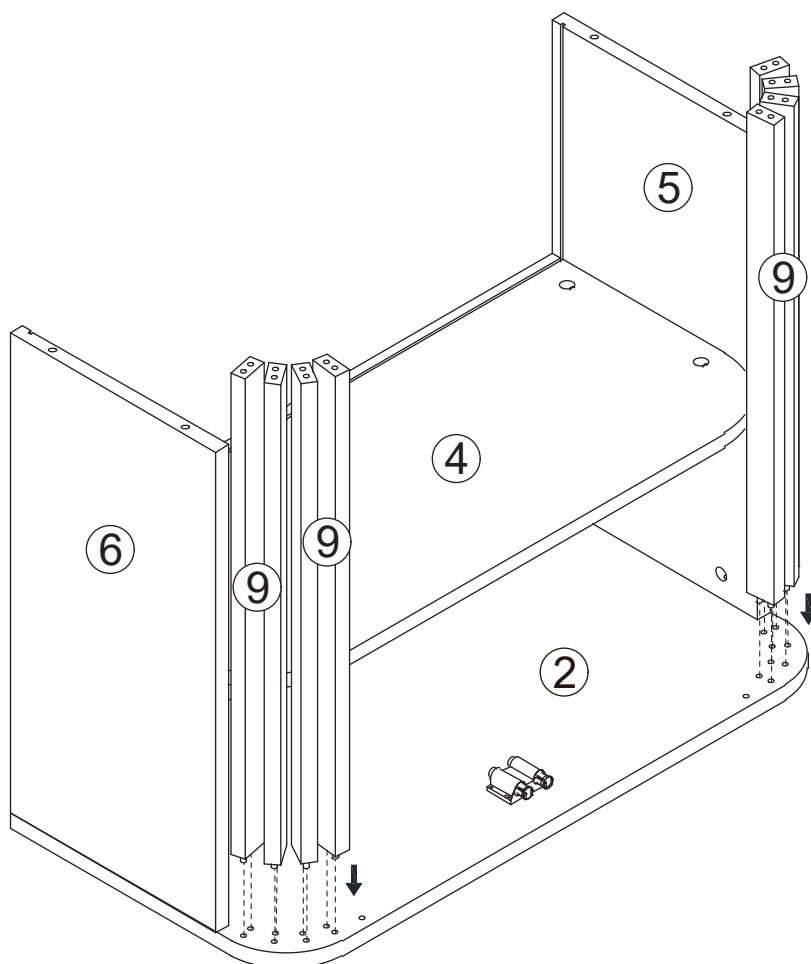


8.

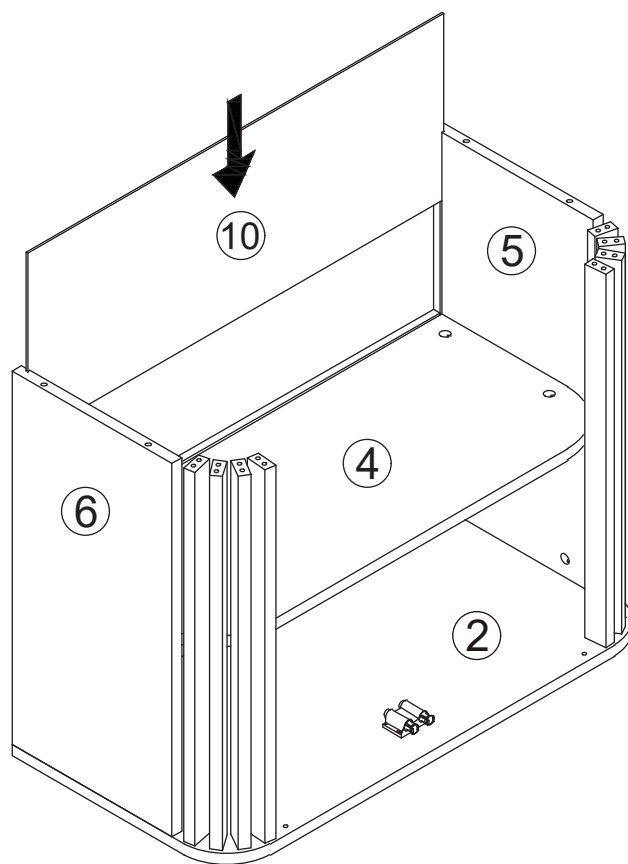


9.

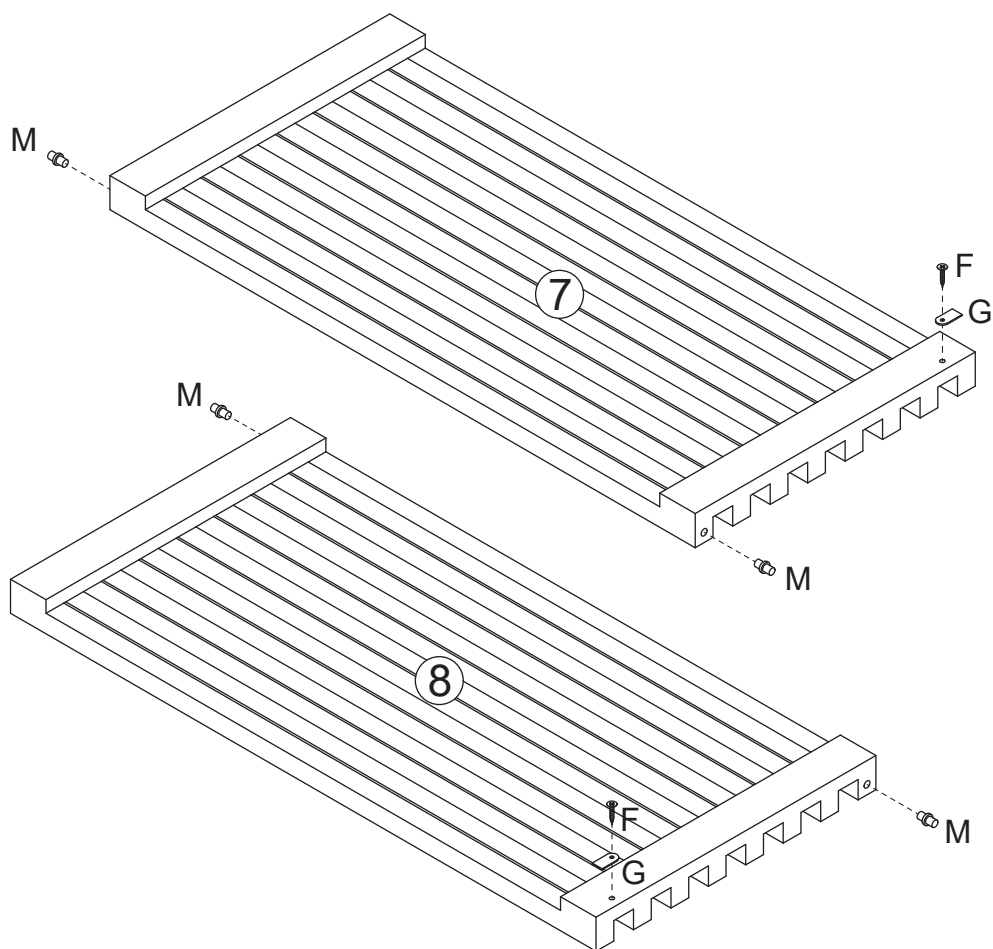

10.

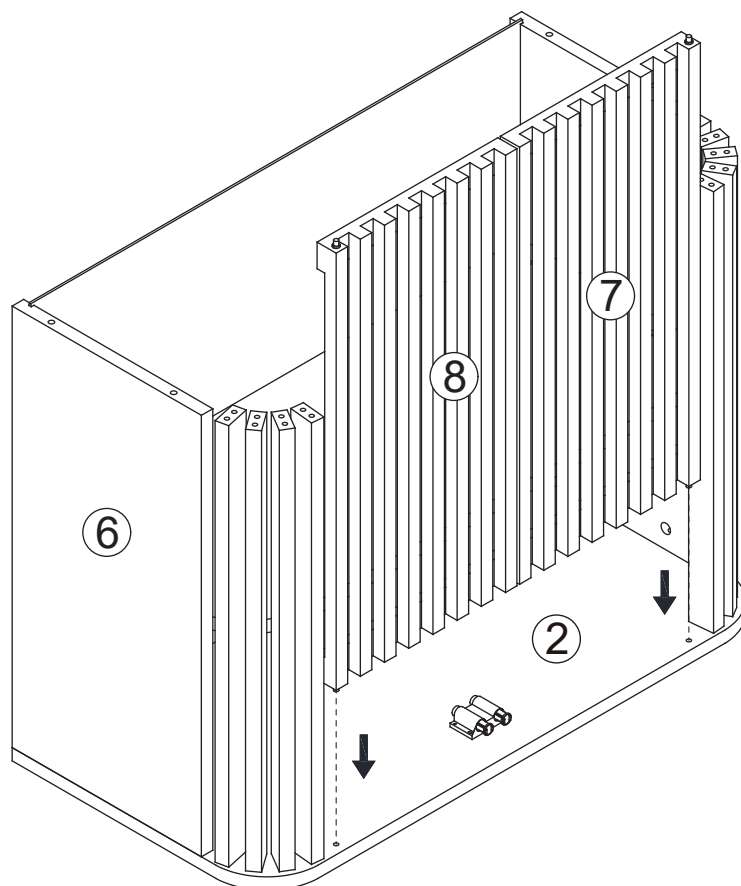


11.

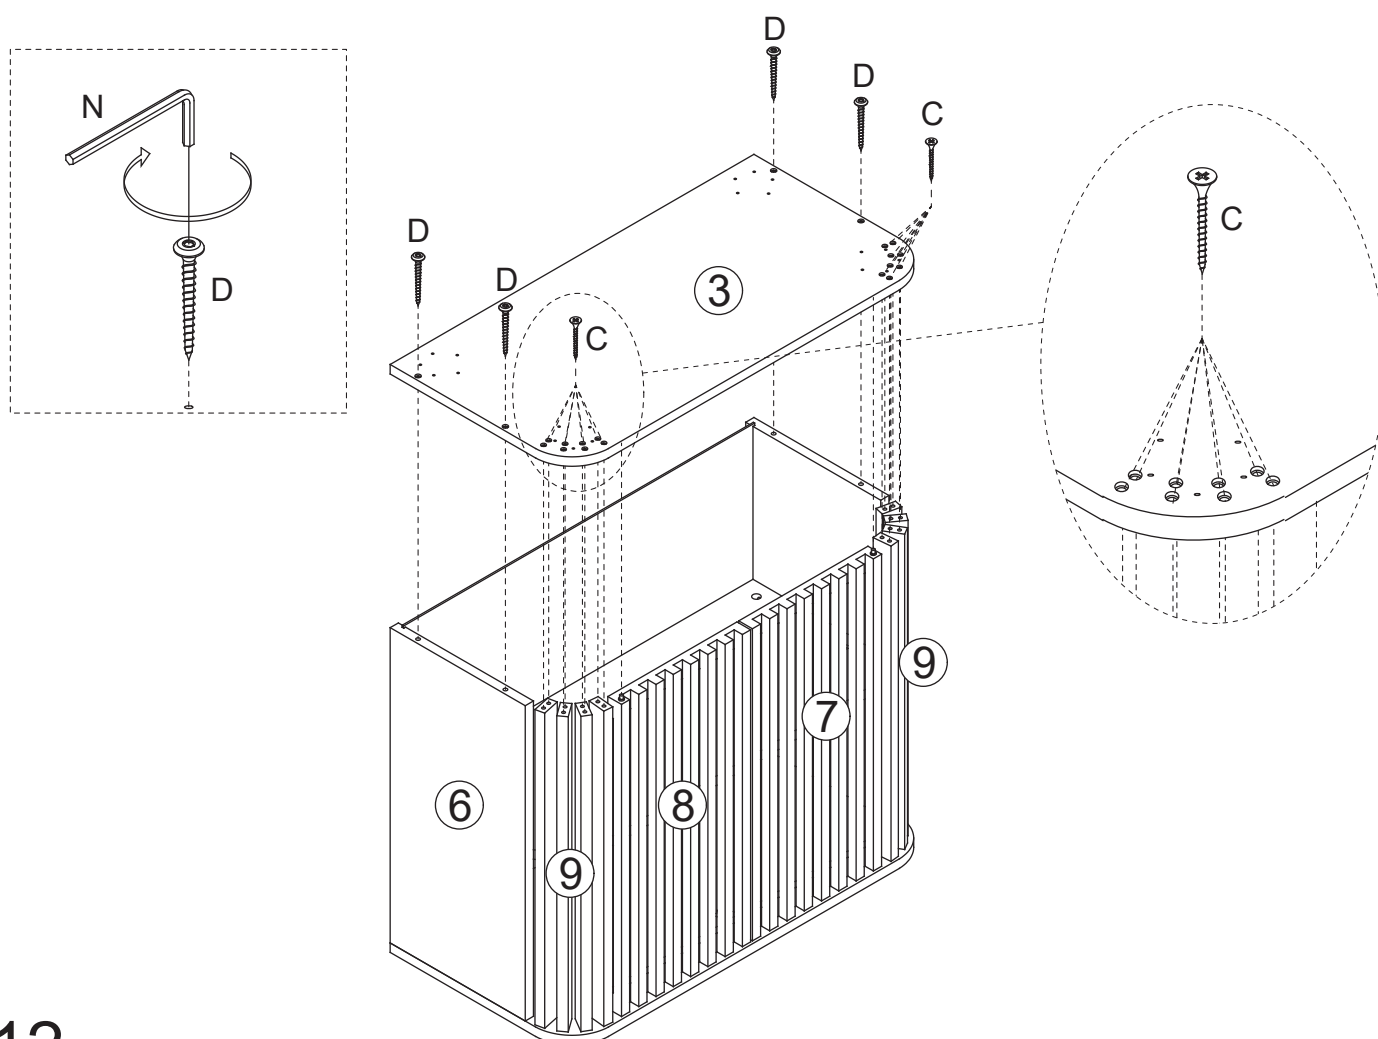


12.



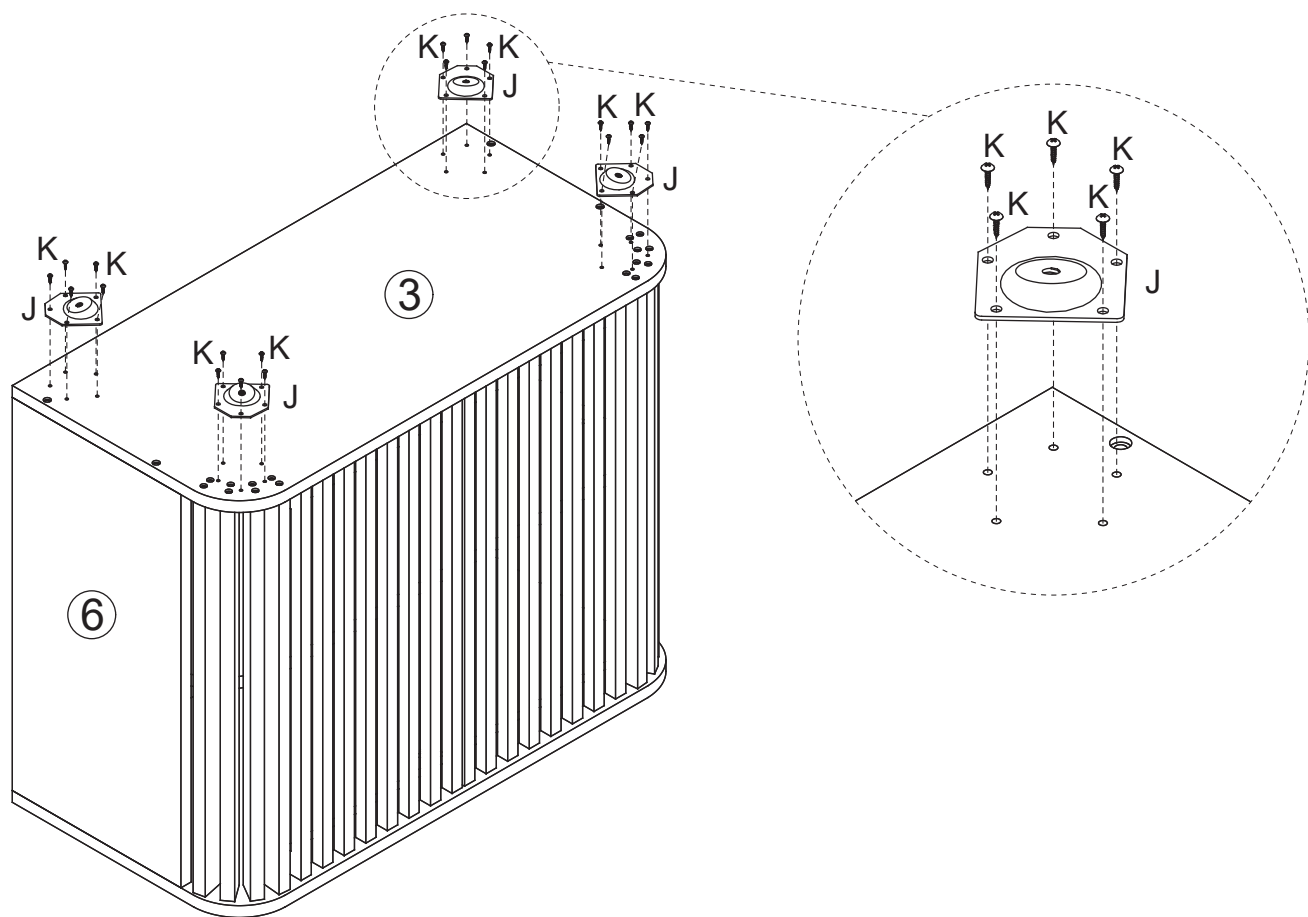


13.

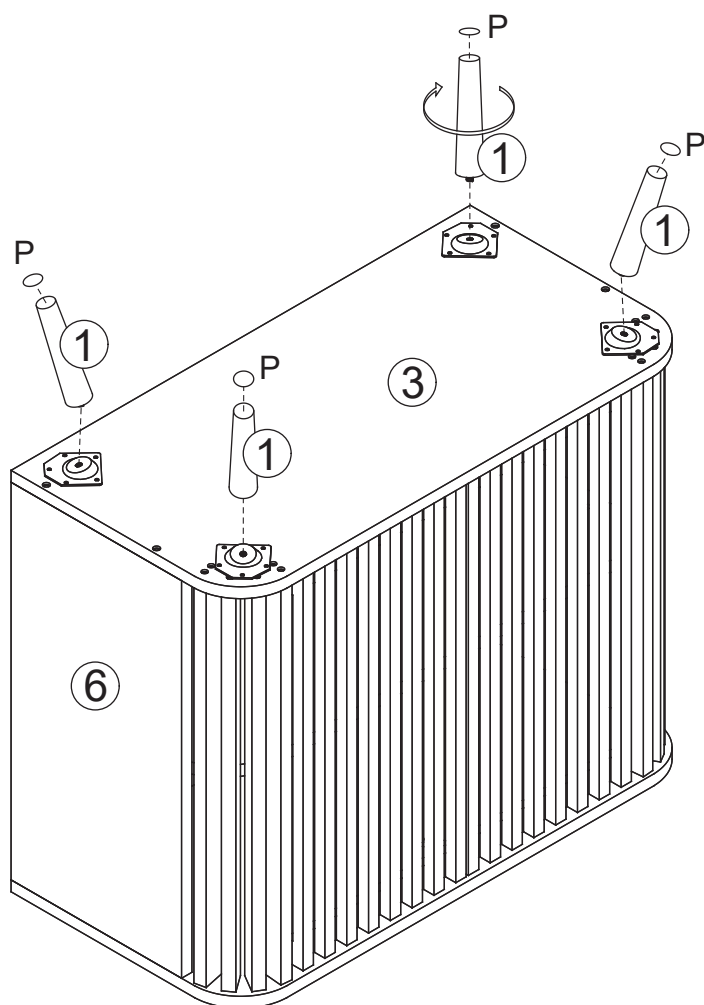


14.

WALL

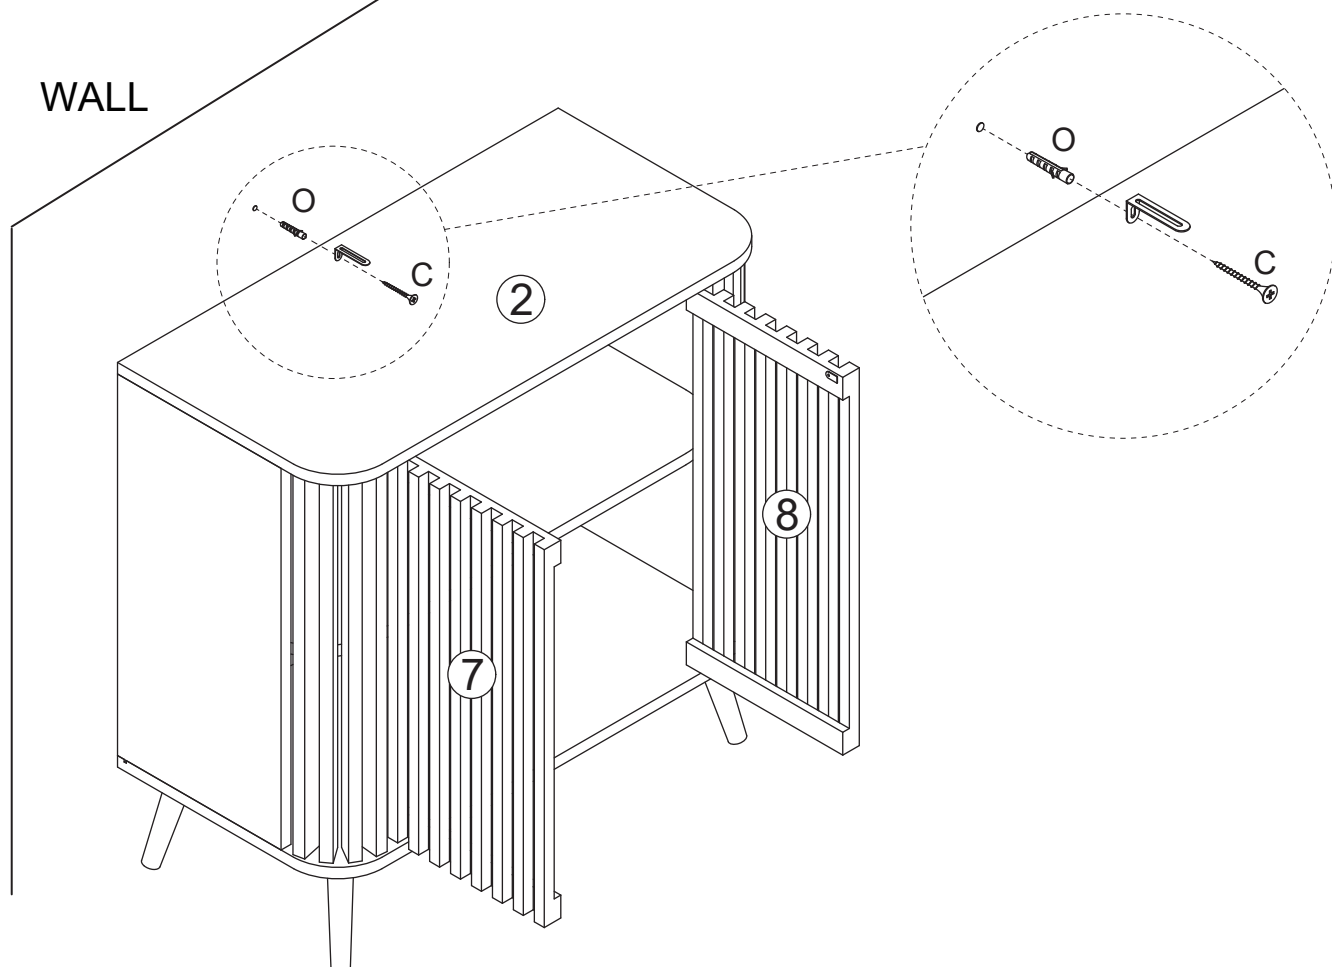

15.

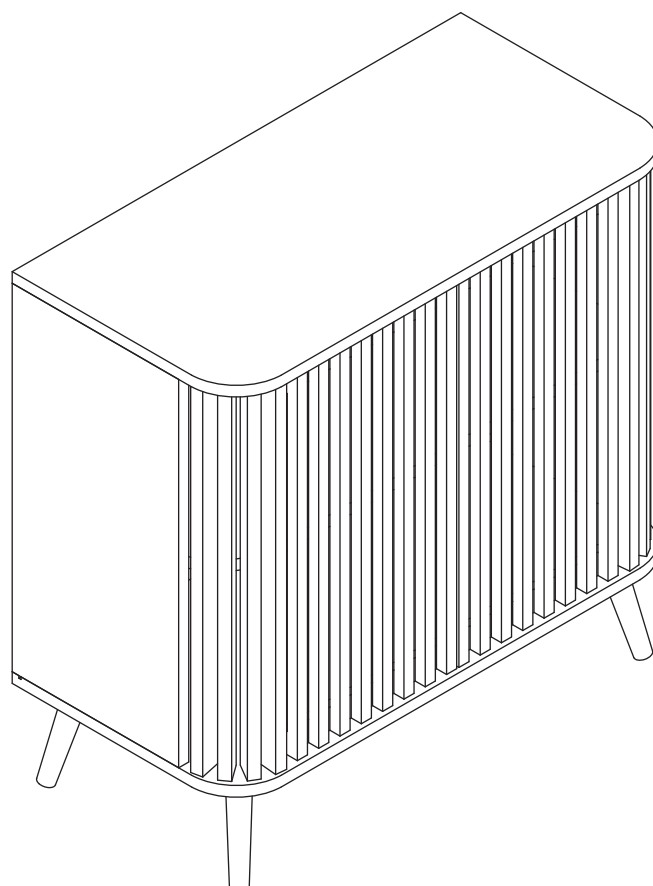

16.