
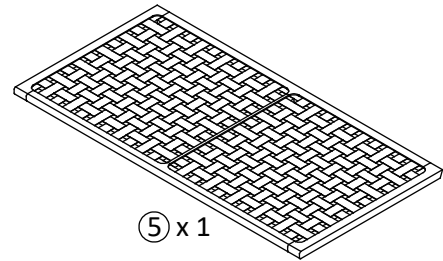
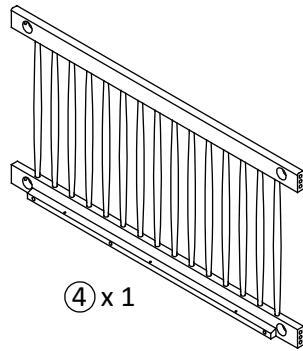
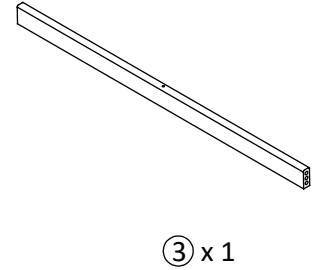
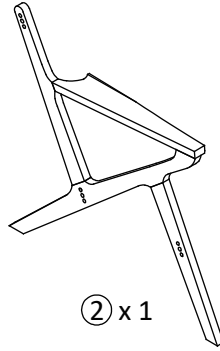


# Parts Checklist







**FUTON**  
C O M P A N Y

ROPO12956



FRM SENDAI SF OAK

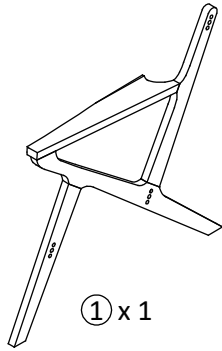






# Fittings Checklist

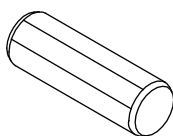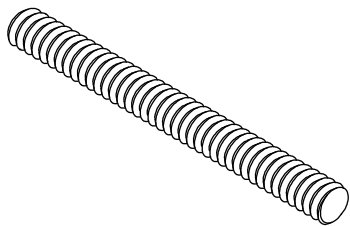




# 1

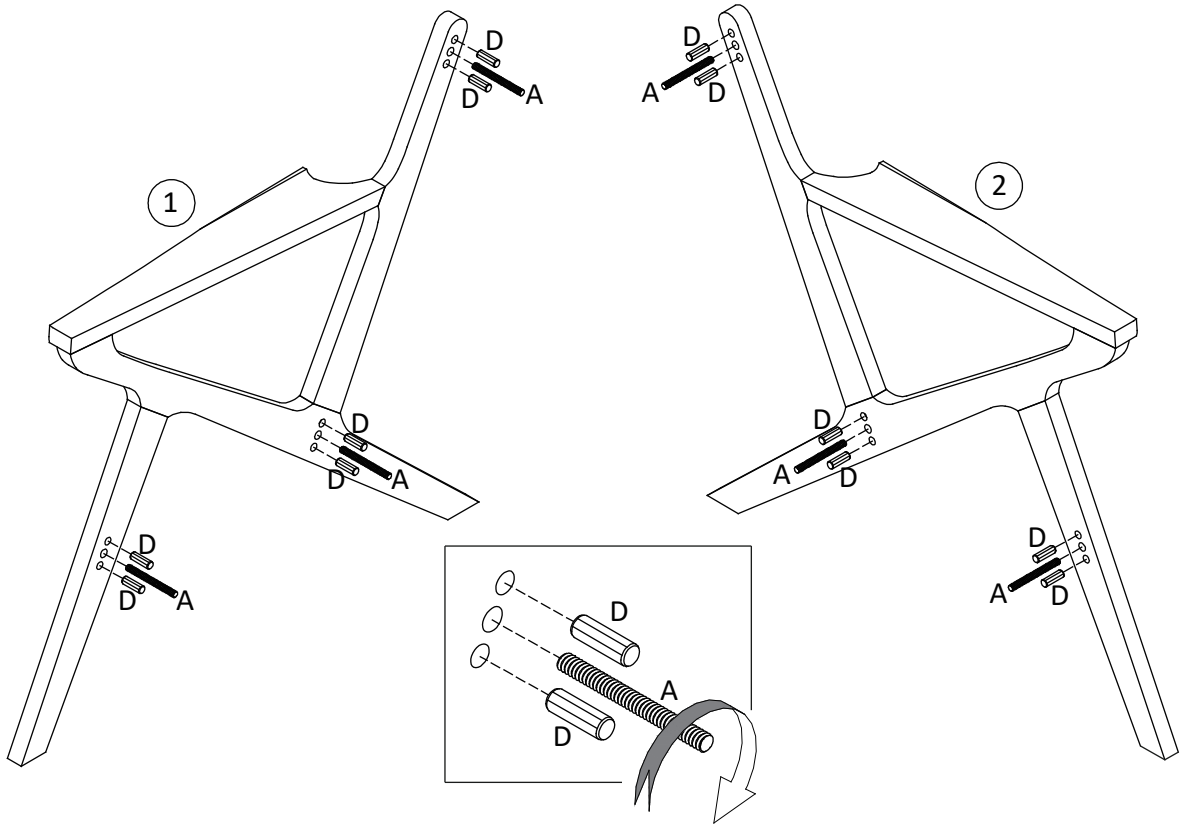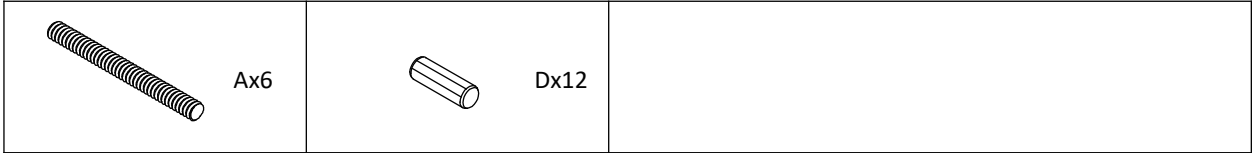



# 2

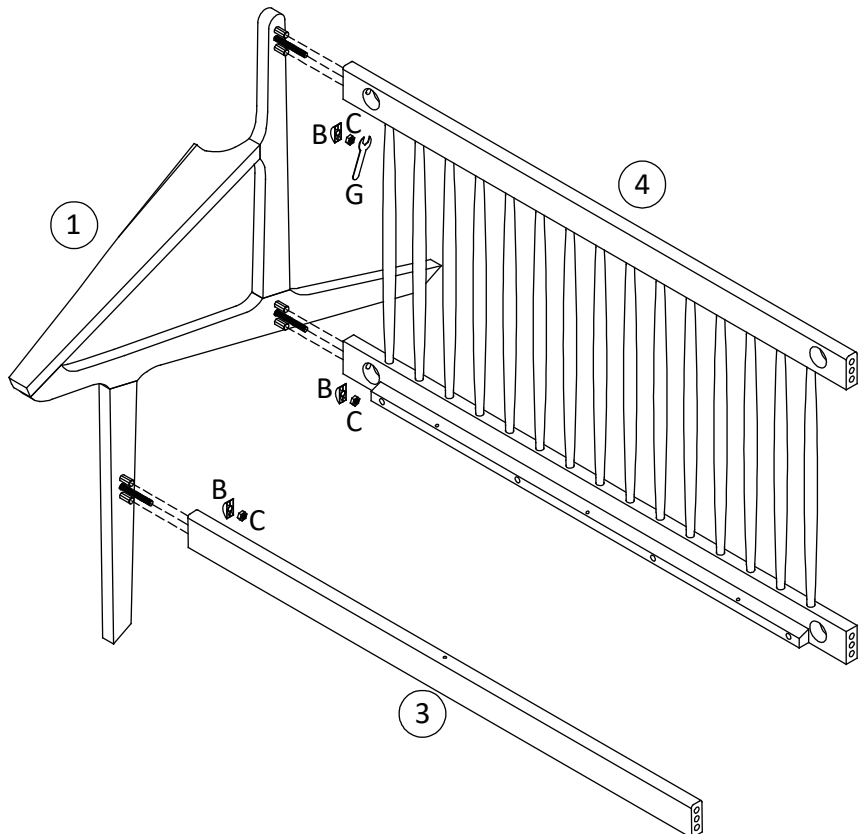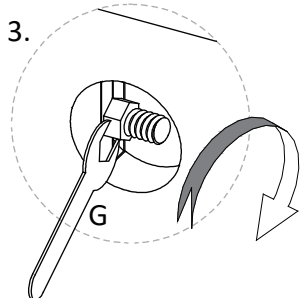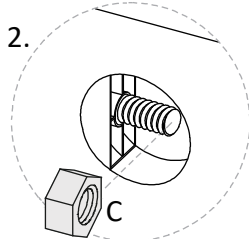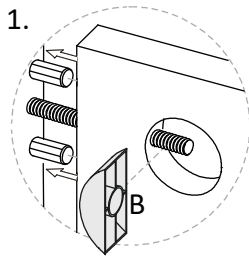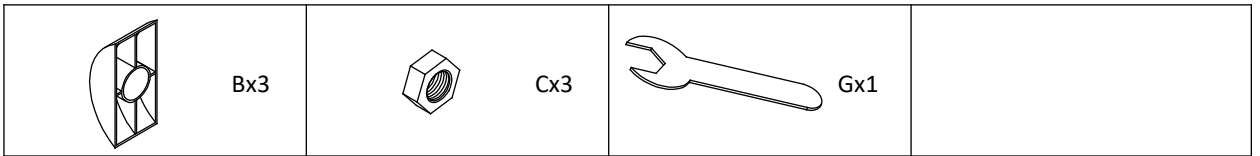

# 3

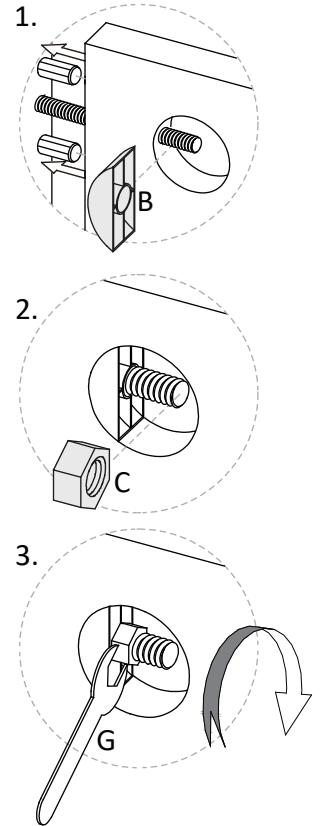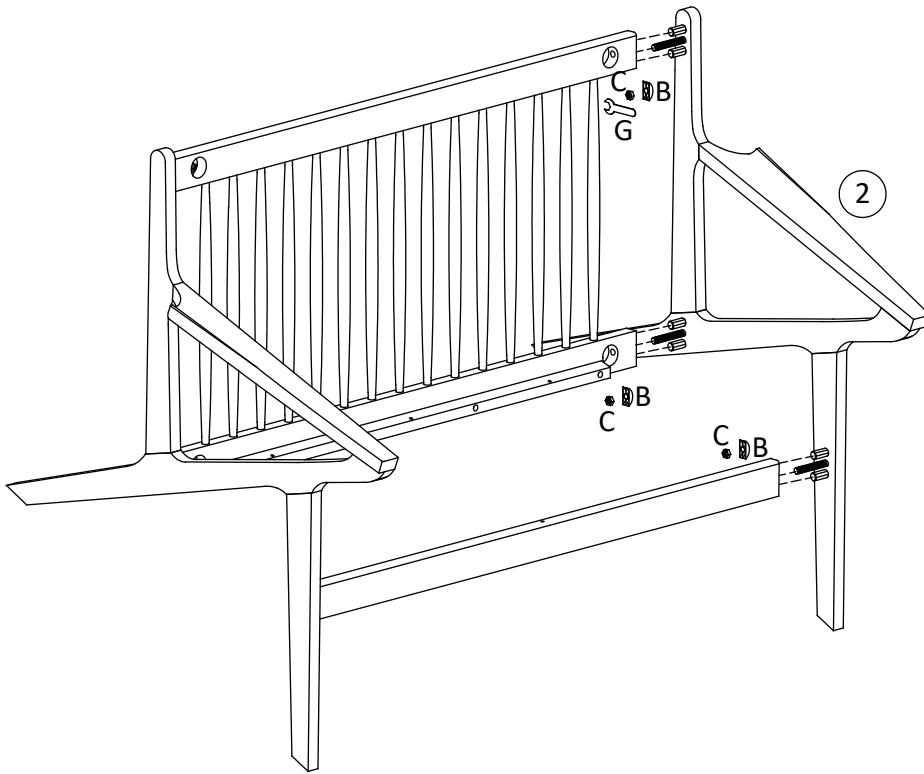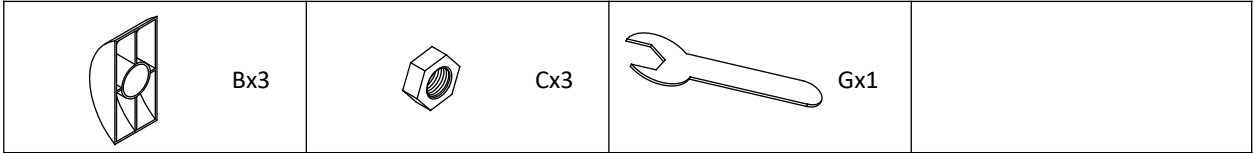

# 4

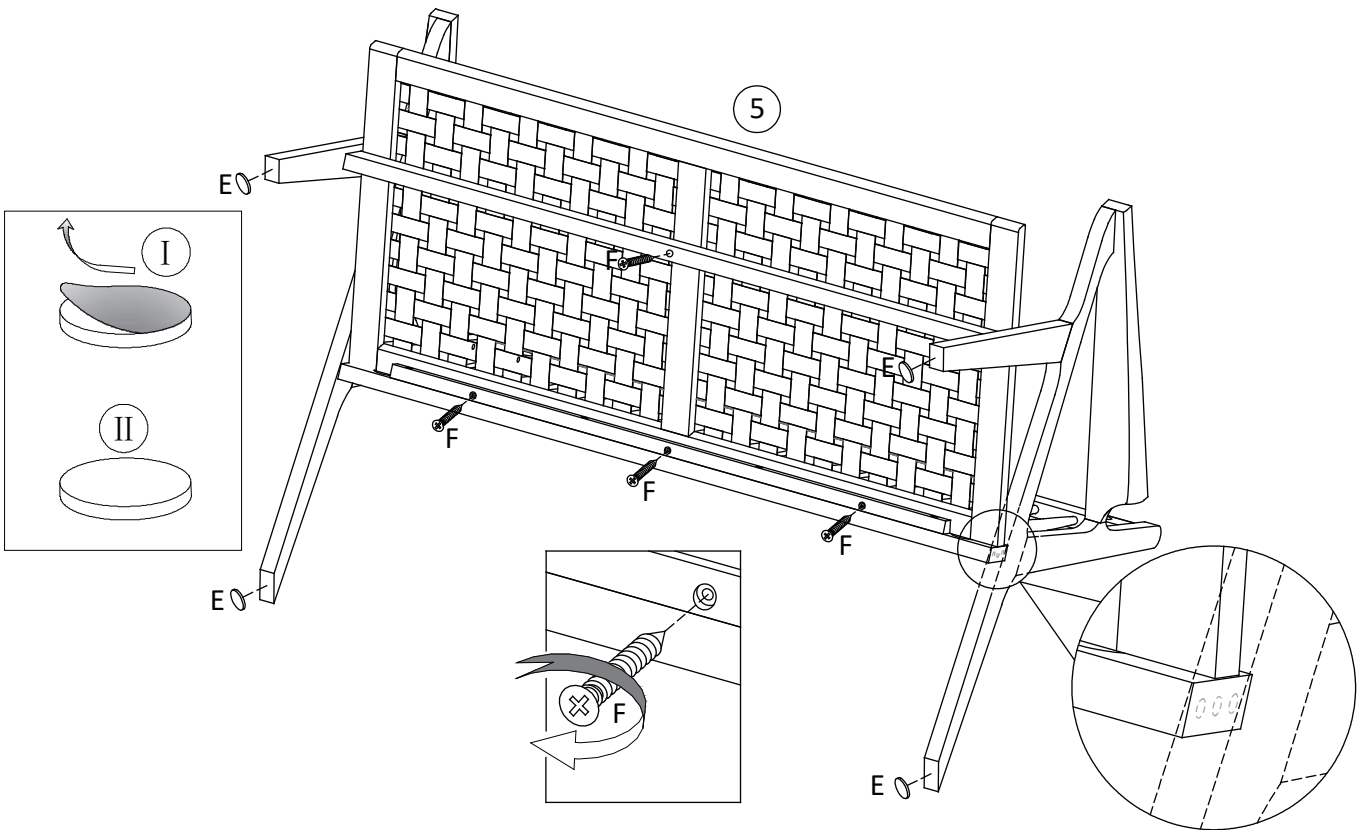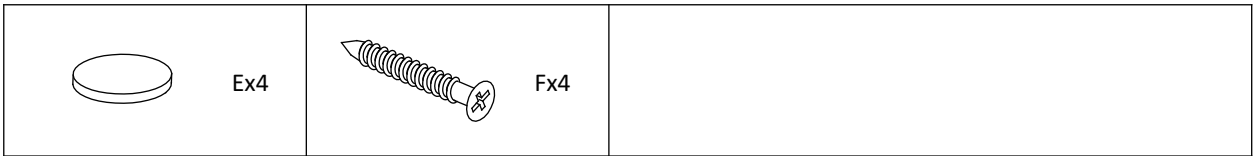

5

