


SB2 BELLA V2-PO13228


FUTON
C O M P A N Y

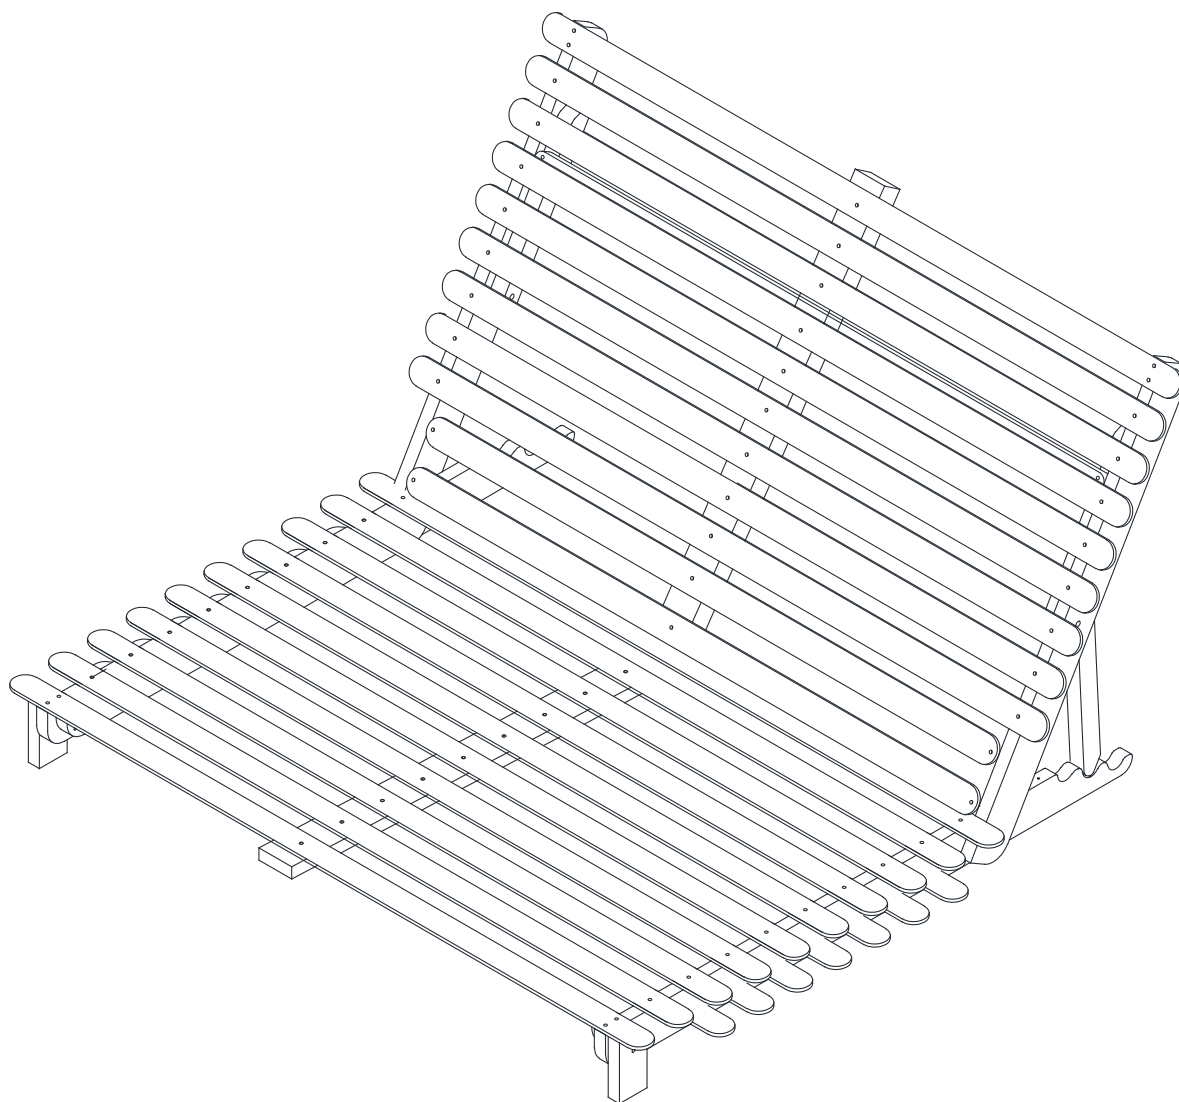

Thank you for purchasing this Futon Company product. Please read the instructions carefully before assembly.


Please check the pack contents before starting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact your nearest Futon Company store and we will arrange despatch of an immediate replacement.

Parts Checklist

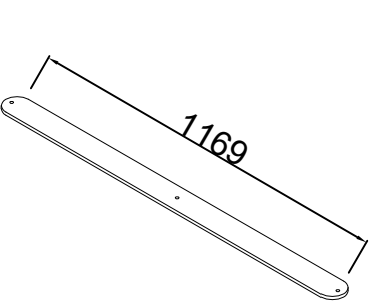


Leg Rest Slats

① x1pc

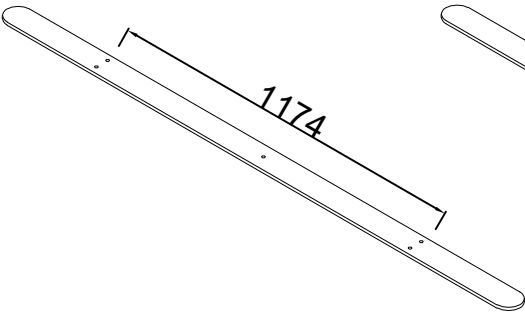


Leg Rest Slats

② x1pc

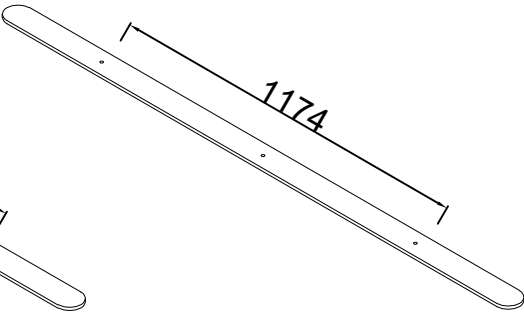


Leg Rest Slats

③ x6pcs

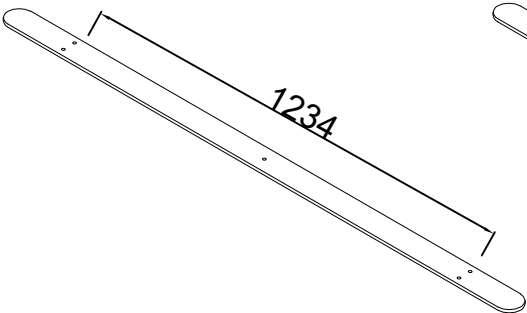


Seat Slats

④ x1pc

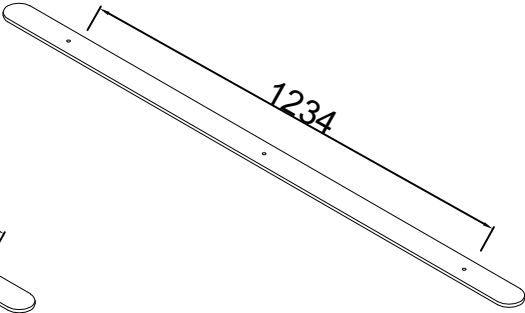


Seat Slats

⑤ x9pcs

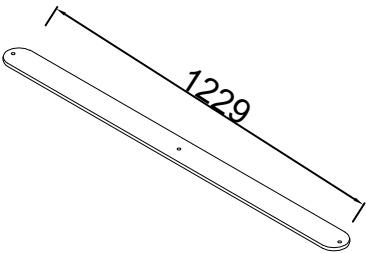


Seat Slats

⑥ x1pc

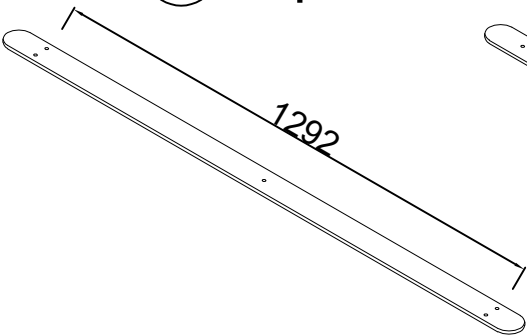


Back Slats

⑦ x1pc

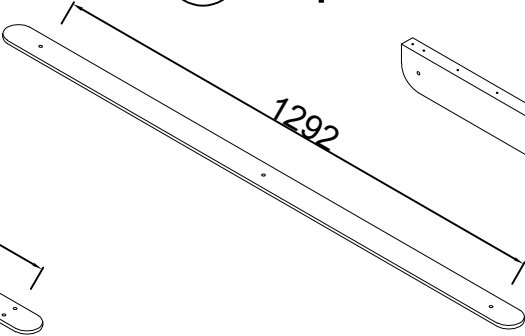


Back Slats

⑧ x8pcs

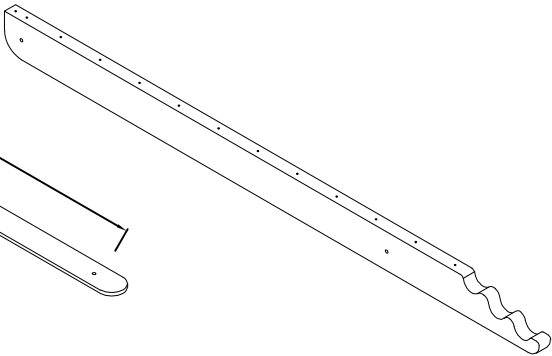


Seat Rails

⑨ x1pc

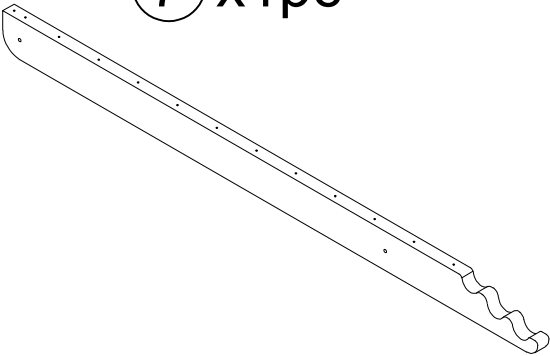

Seat Rails

⑩ x1pc



Legs


⑪ x1pc



Legs


⑫ x1pc

Parts Checklist

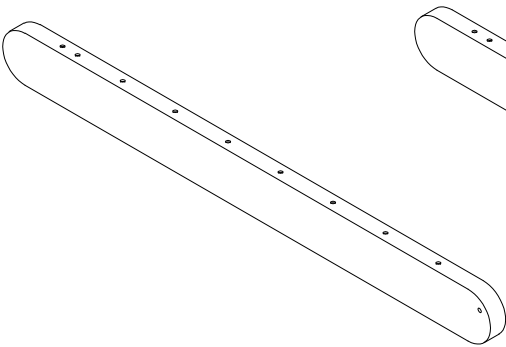


Front Rest Rails

13 x1pc

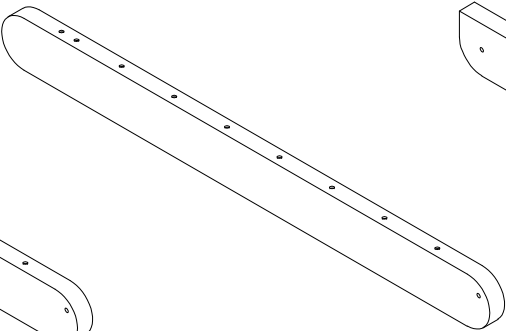


Front Rest Rails

14 x1pc

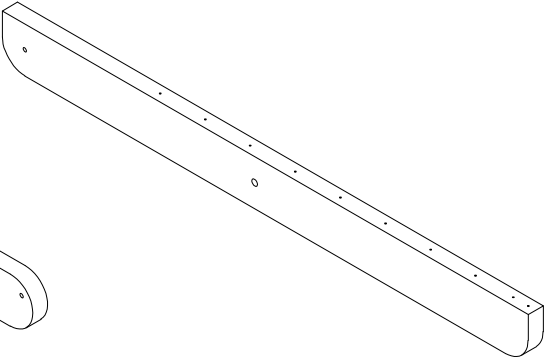


Back Rails

15 x1pc

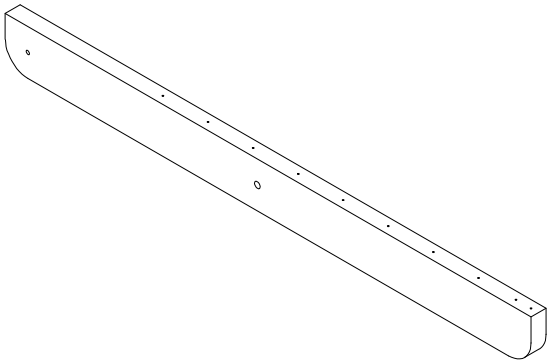


Back Rails

16 x1pc

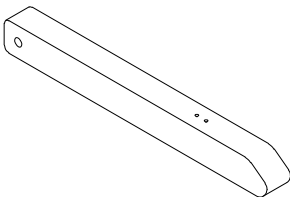


Props

17 x1pc

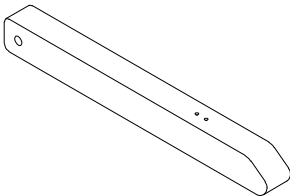


Props

18 x1pc

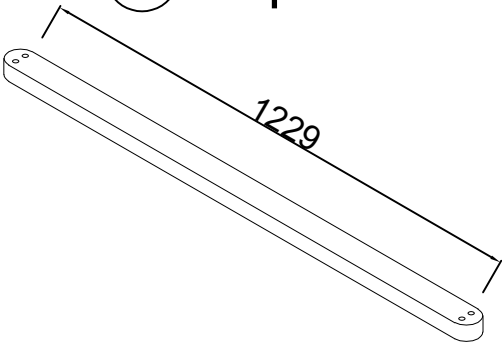


Slats

19 x1pc

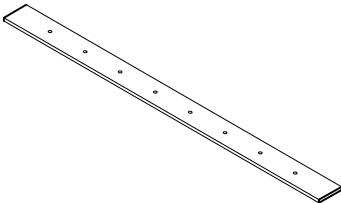


strengthen

20 x1pc

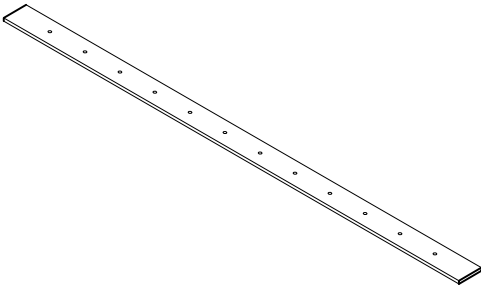

strengthen

21 x1pc

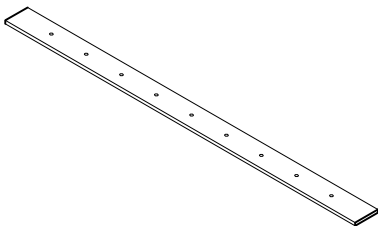

strengthen

22 x1pc

Fittings Checklist



A x6pcs




B x8pcs



C x4pcs



D x2pcs




E x107pcs




F x2pcs

1.

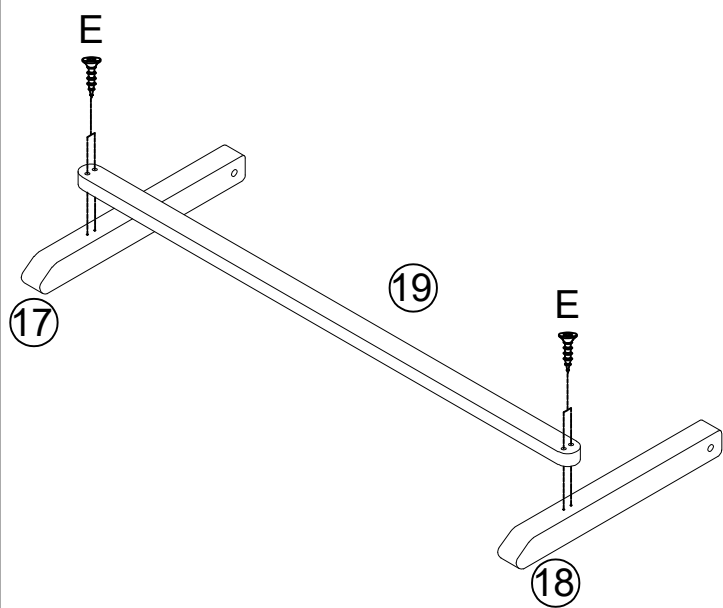


2.


Do not fully tighten fittings when assembling sub frame.
Overtightening fittings before slats are screwed down can lead to mis-alignment of components.

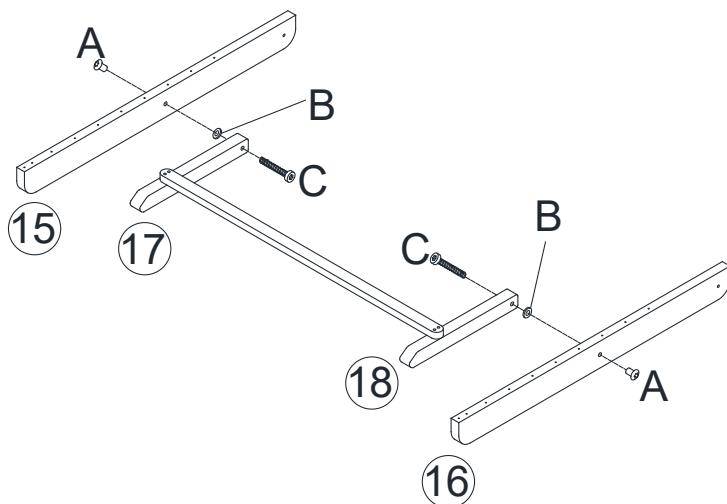


3.

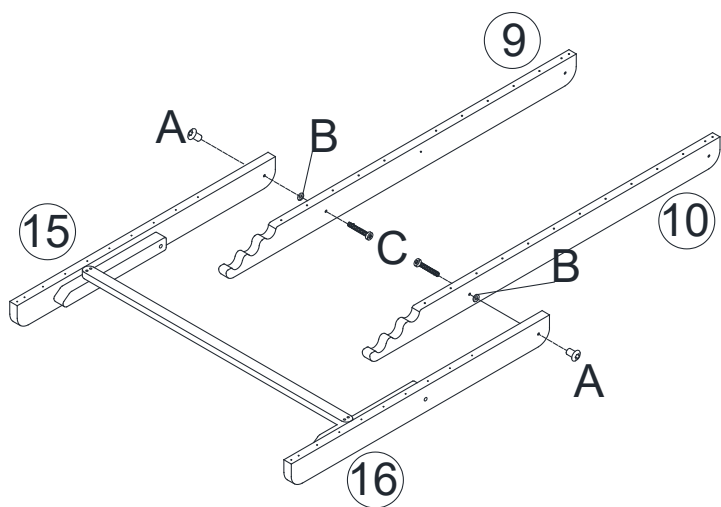

4.

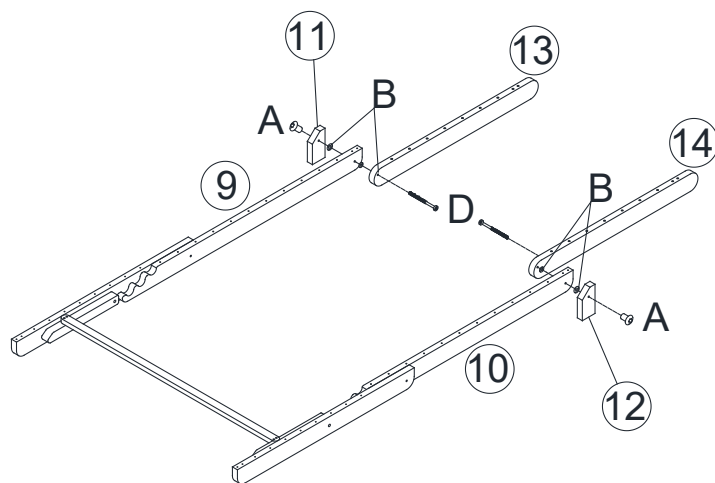


5.

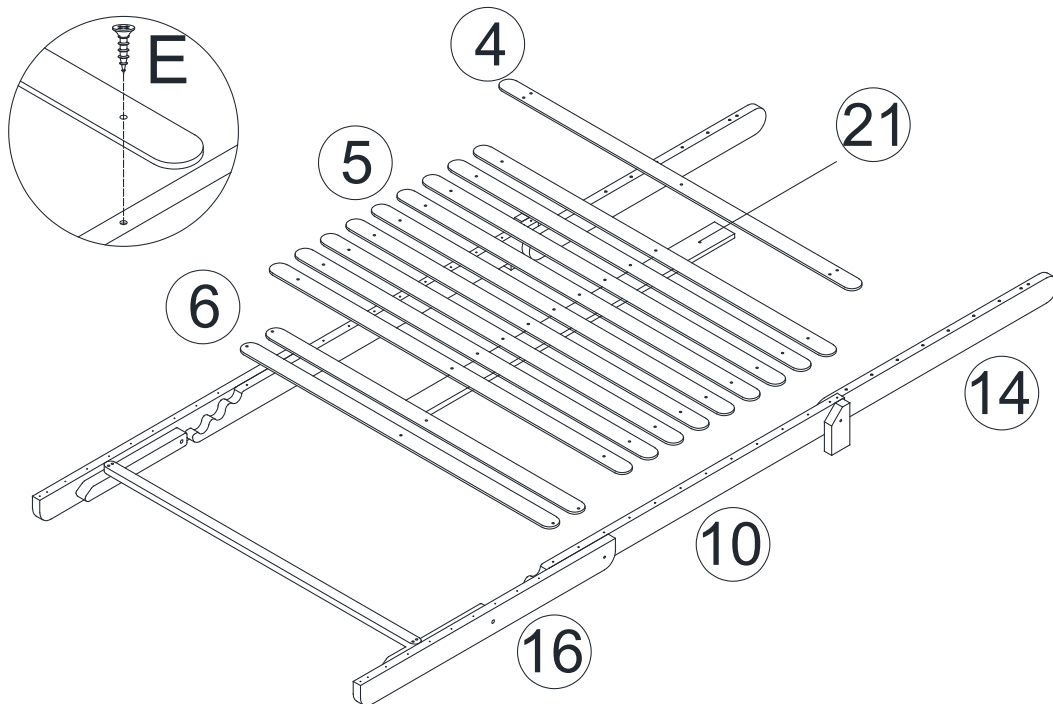


Using Fitting E, screw slat numbers 4 and both of slats 6 into place first. Then lay all of slats part 5 into position before screwing down.

6.

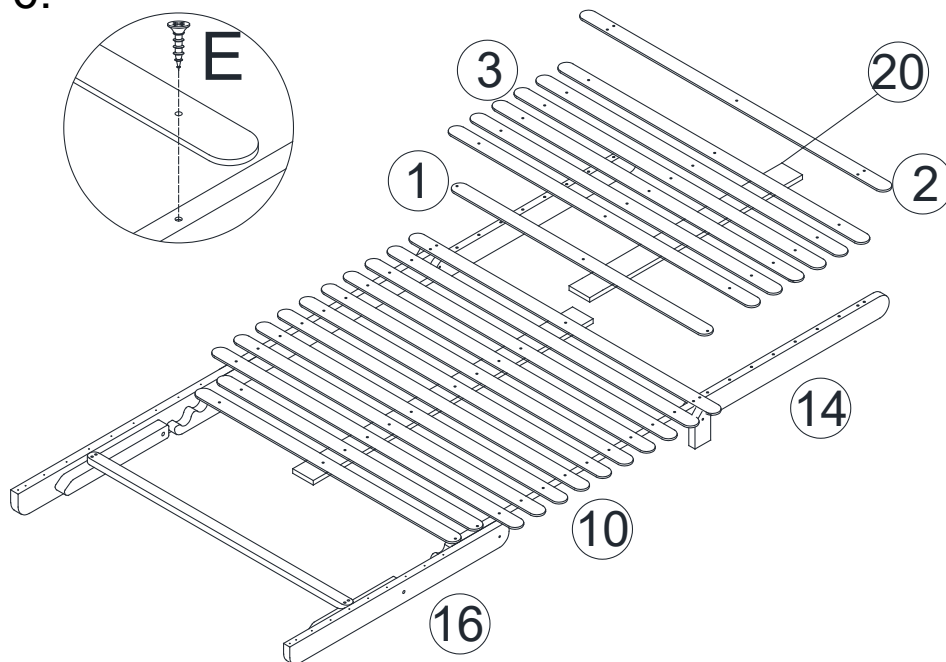

Using Fitting E, screw slat numbers 1 and 2 into place first. Then lay all of slats part 3 into position before screwing down.

7.

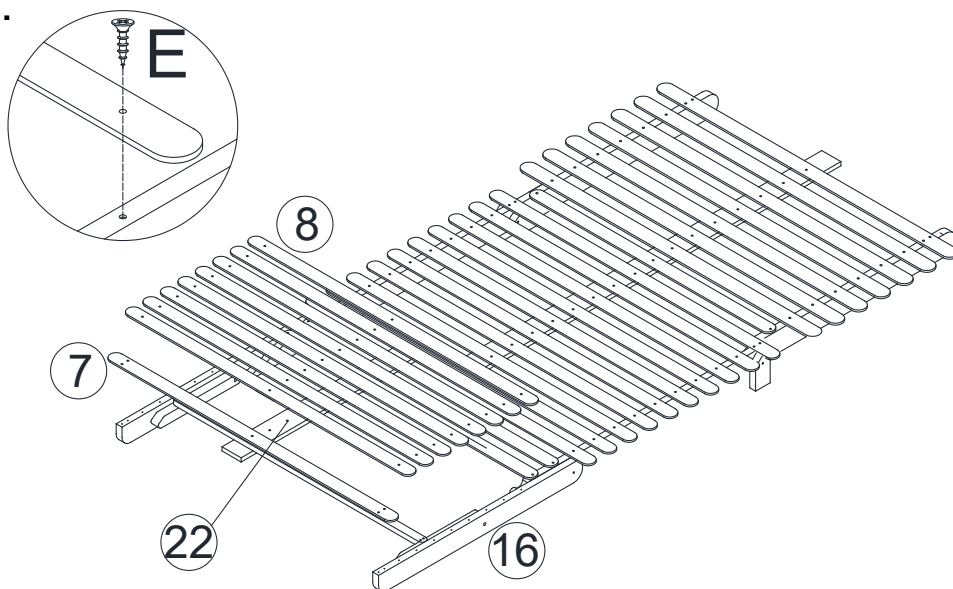

Using Fitting E, screw slat 7 and one slat 8 into place first before laying out and screwing down the remaining slats.

8.

Fully tighten Fittings A,B,C & D

