

ASSEMBLY INSTRUCTIONS

FUTON COMPANY

ST CAB ACRE

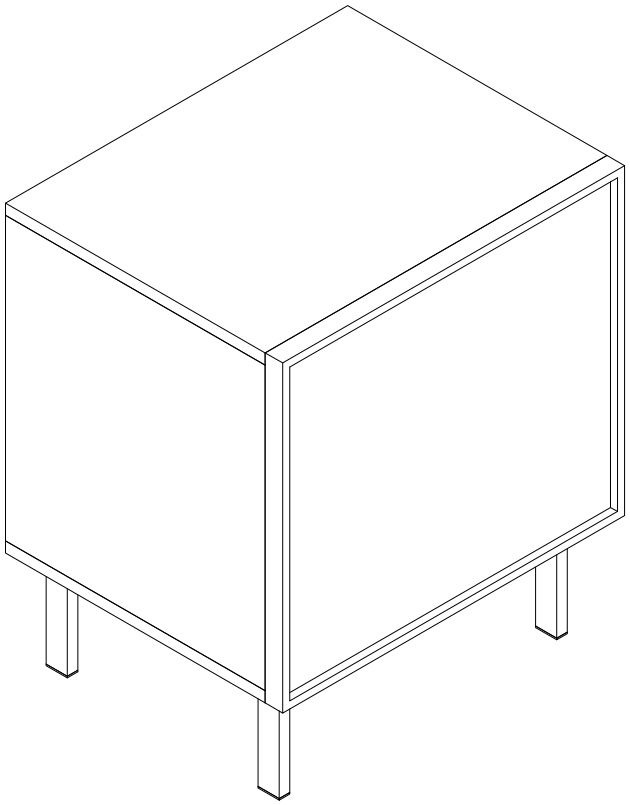

Fittings Checkist




A x4



B x4



C x8




D x4




E x12



F x16





G x4

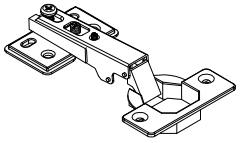

H x2


Parts Checklist

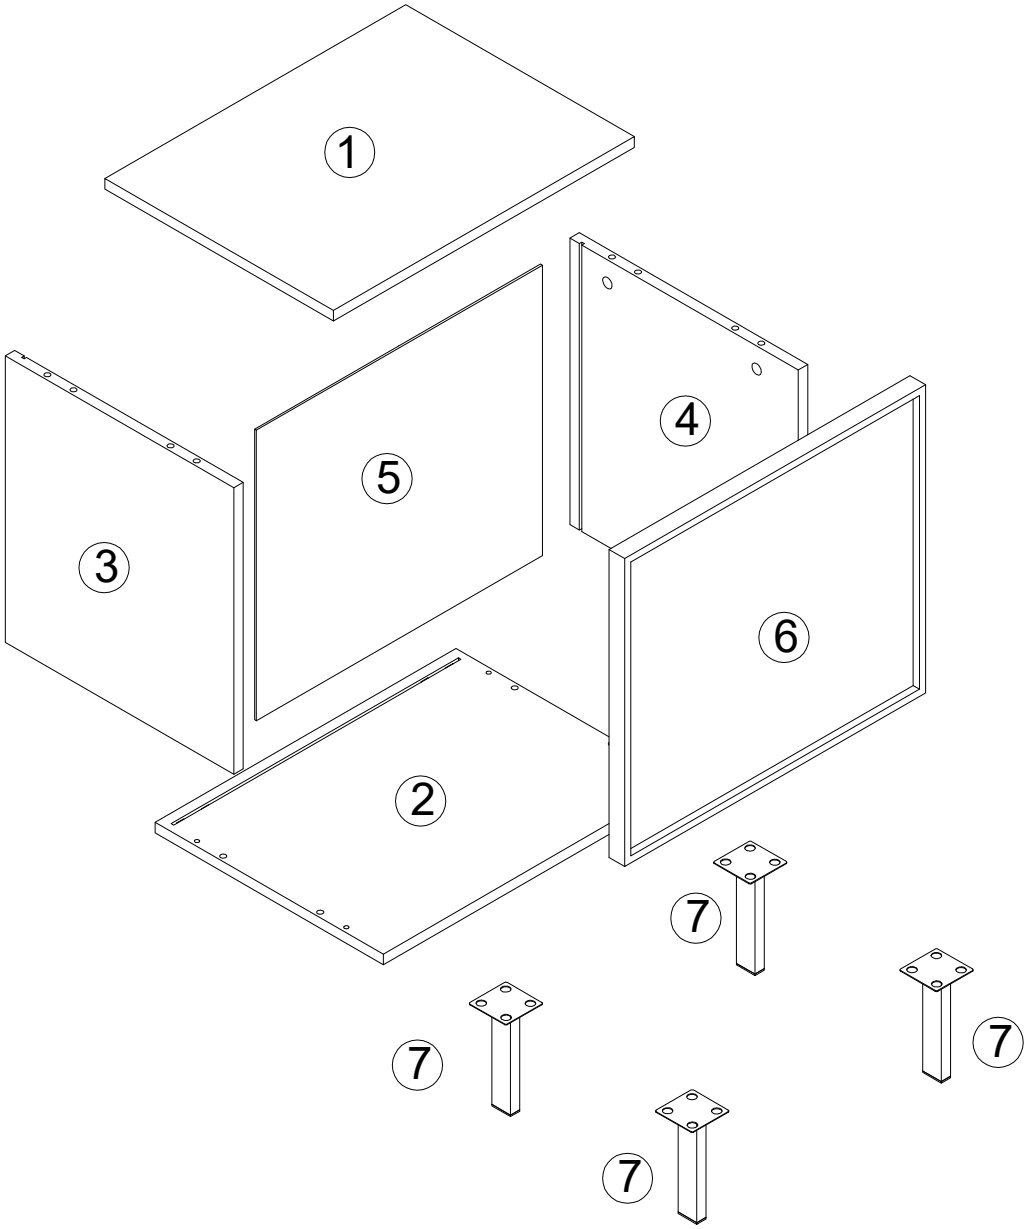

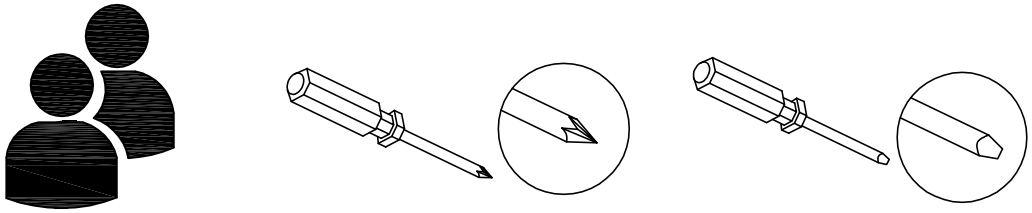


Allow 45 minutes to assemble this item


1.

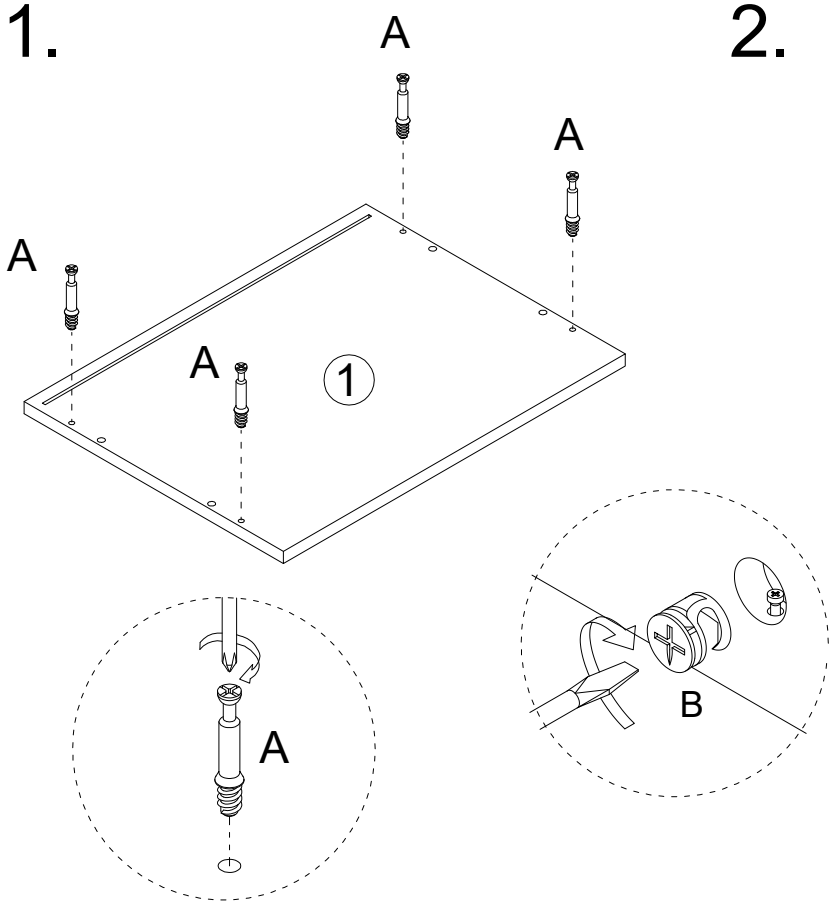


2.

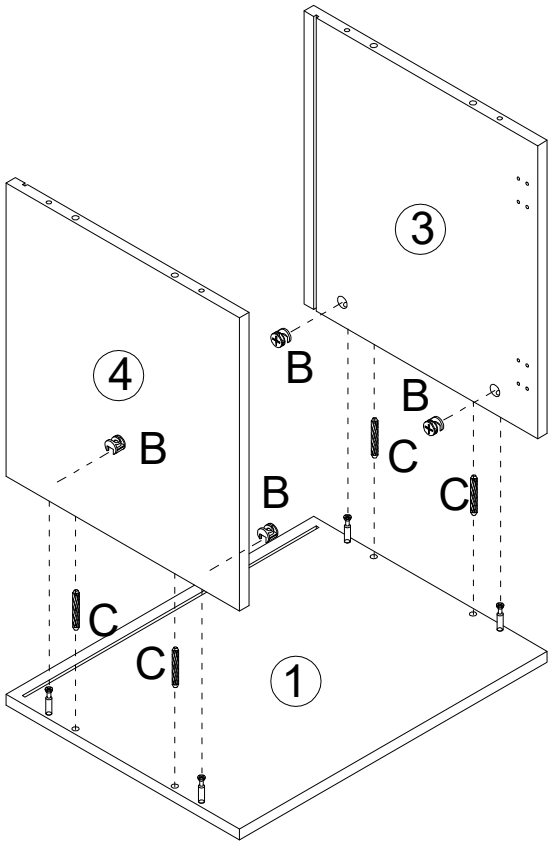


3.

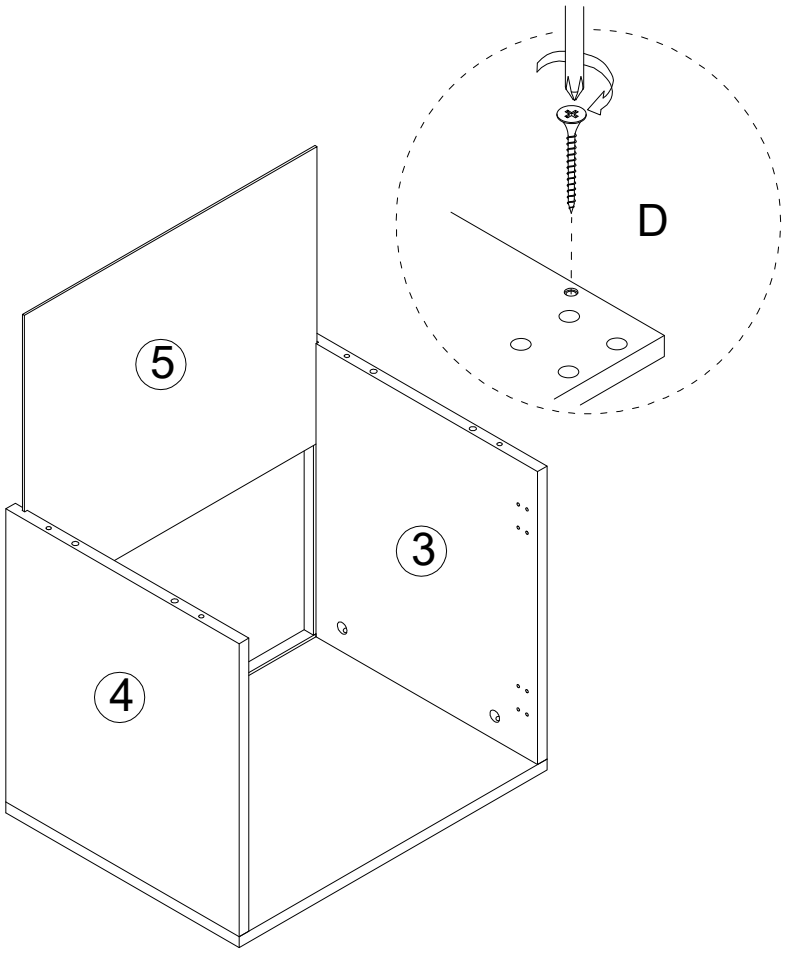


4.

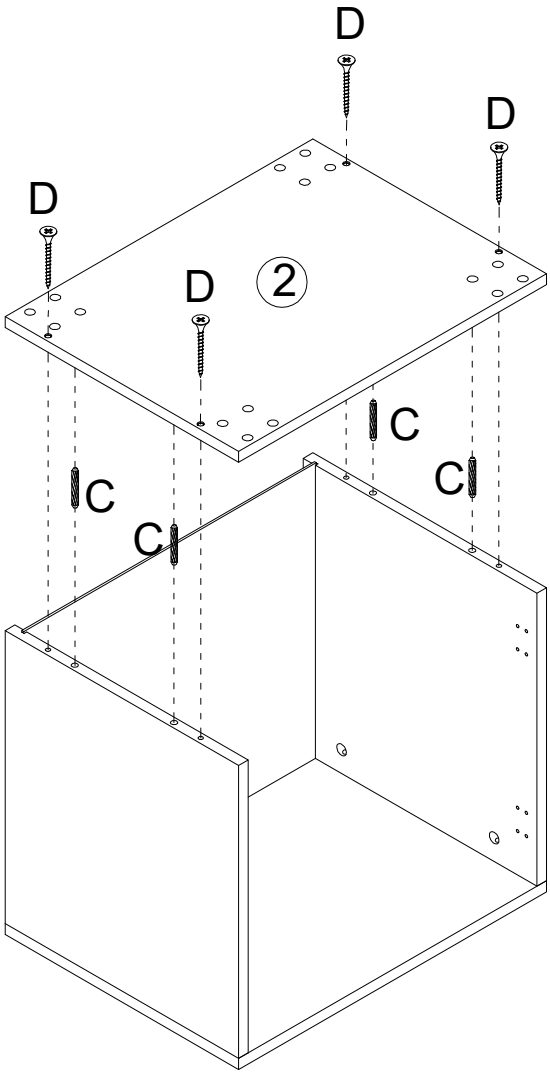



5.

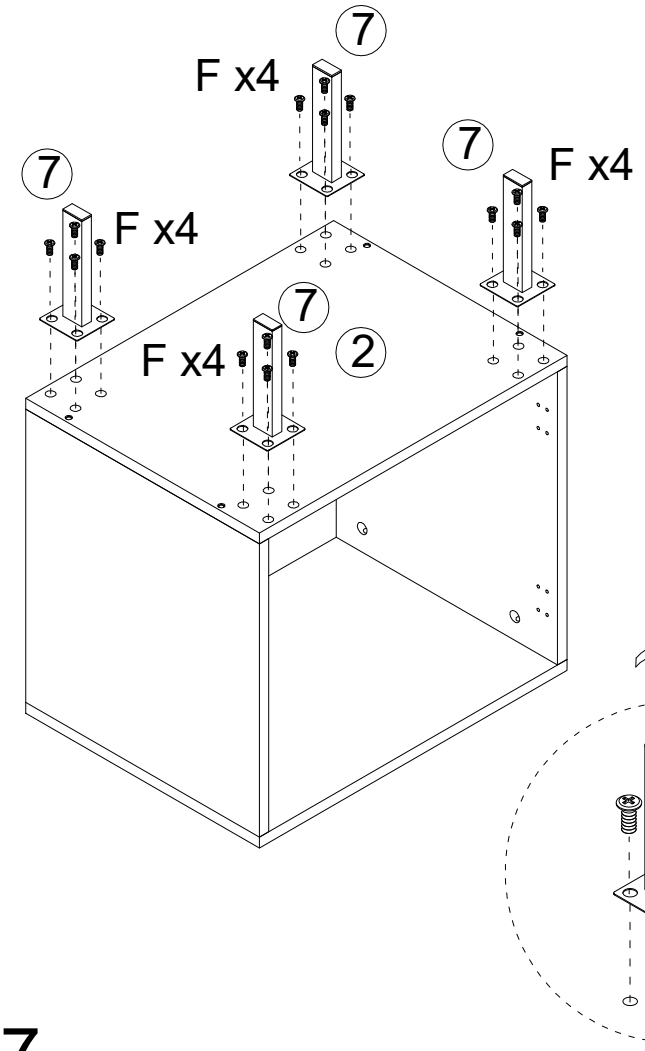

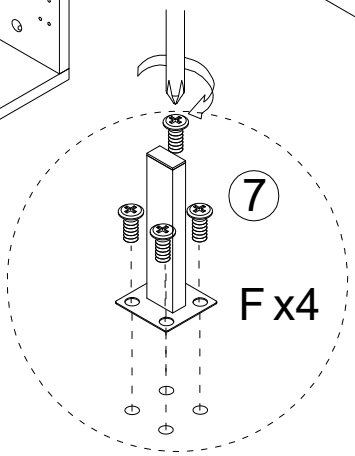



6.

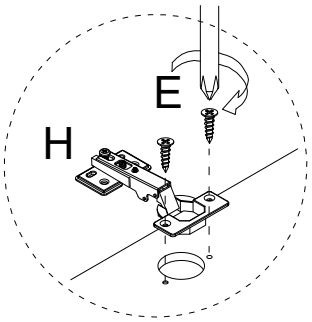

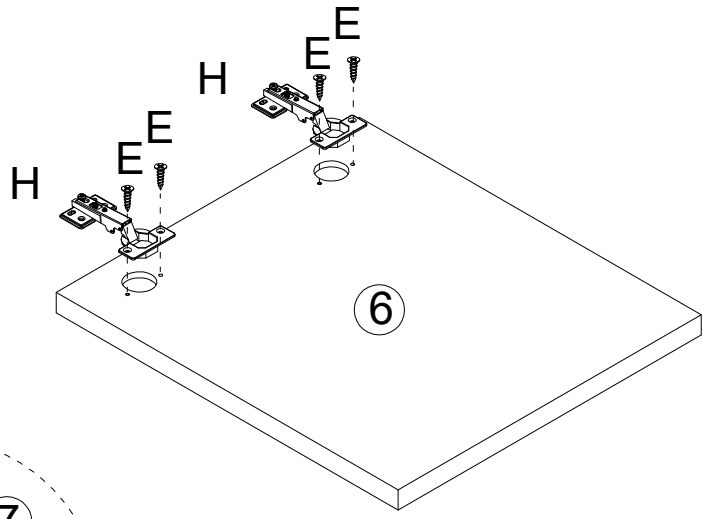



7.

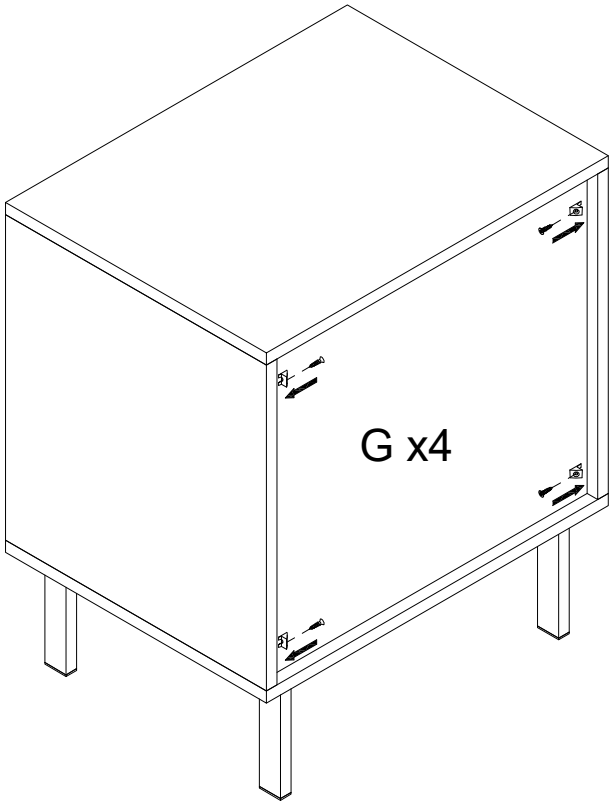

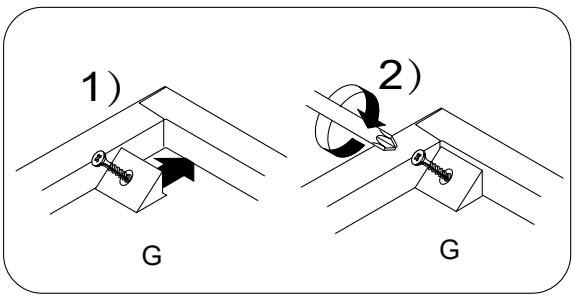


8.

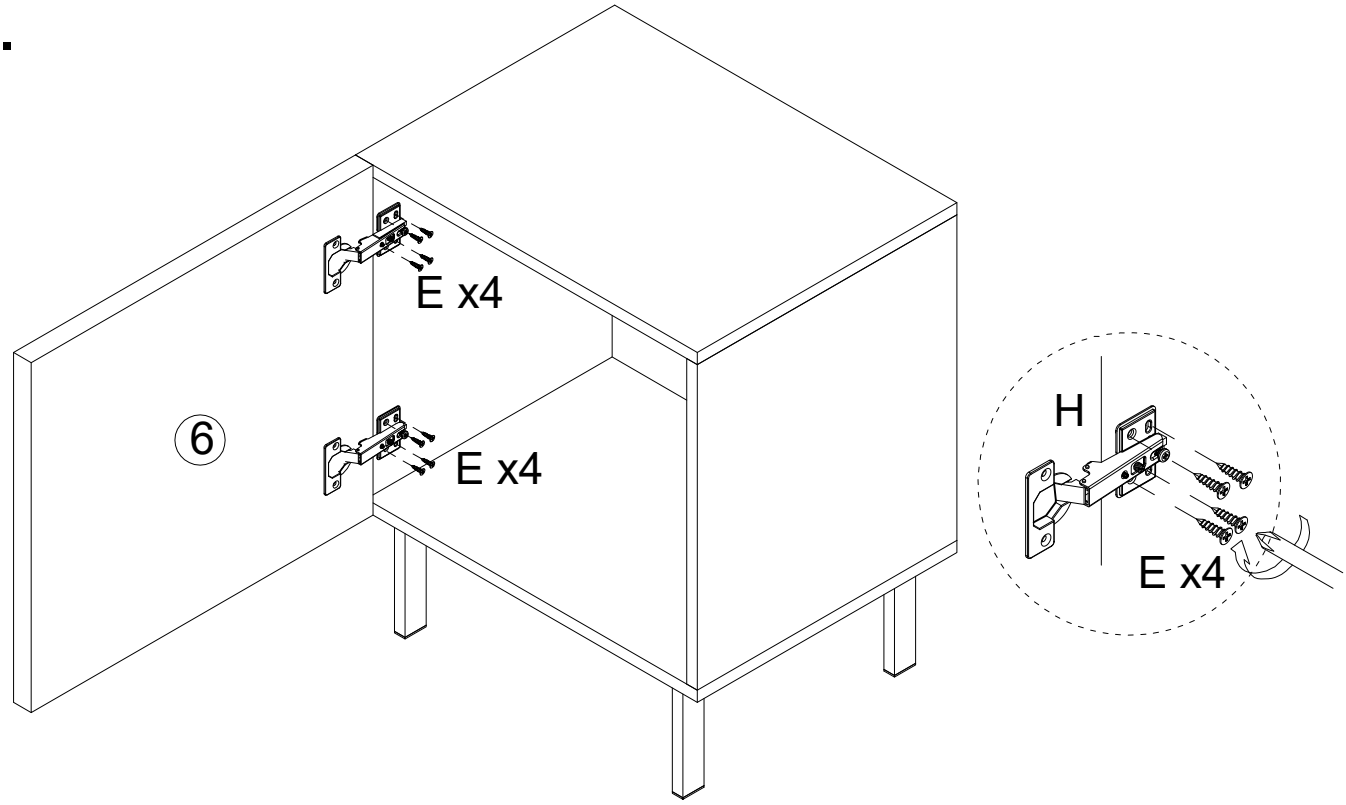


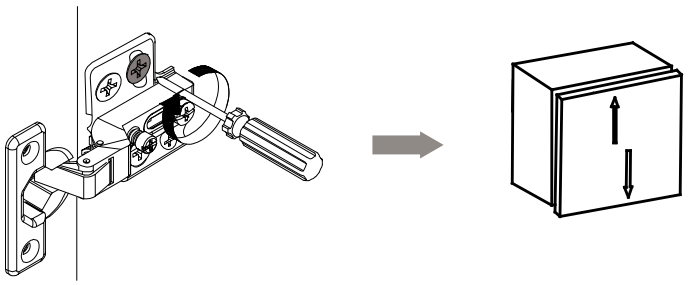

Turn the screw to release the door, allowing the door to be moved up and down.

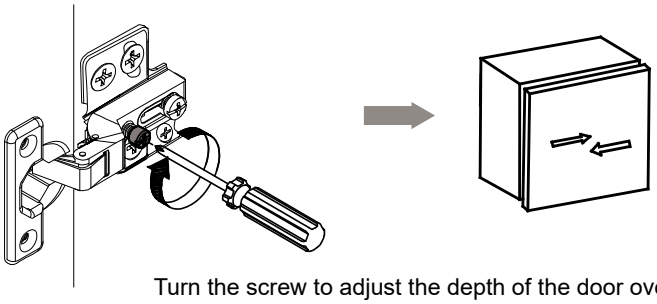

Turn the screw to adjust the depth of the door overlay.

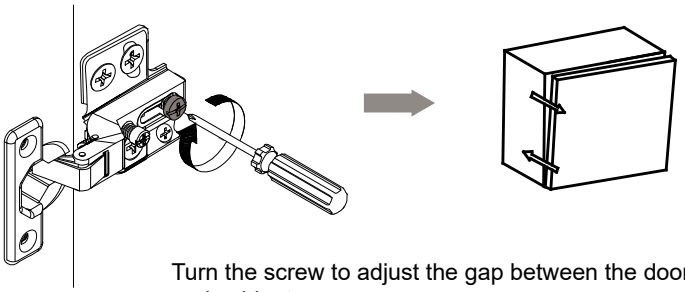

Turn the screw to adjust the gap between the door and cabinet.